

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lehoo Castle](#) /
- › [Lehoo Castle Remote Control Excavator Toy User Manual](#)

Lehoo Castle RC

Lehoo Castle Remote Control Excavator Toy User Manual

Model: RC

INTRODUCTION

Thank you for choosing the Lehoo Castle Remote Control Excavator Toy. This manual provides essential information for the safe and proper use, setup, and maintenance of your new toy. Please read it thoroughly before use and retain it for future reference.

WHAT'S IN THE BOX

- 1 x RC Excavator Toy
- 1 x Remote Control
- 1 x USB Charging Cable
- 1 x Screwdriver
- 2 x Dino Figures

SPECIFICATIONS

- **Product Dimensions:** 4.3 x 5.5 x 6.1 inches
- **Item Weight:** 1.04 pounds
- **Item Model Number:** RC
- **Manufacturer Recommended Age:** 18 months - 10 years
- **Remote Control Batteries:** 2 AA batteries required (not included)
- **Excavator Battery:** Built-in 500mAh rechargeable battery
- **Material:** Toxin-free ABS plastic

FEATURES

- **Toddler-Friendly Controls:** Simple 2-button remote for easy forward, backward, and turning movements.
- **Rechargeable Excavator:** Built-in USB-rechargeable battery for the excavator.
- **Interactive Elements:** Features include dinosaur roars and tunes, with a silent mode option.
- **Movable Parts:** The excavator arm is flexible and the seat rotates 360 degrees.

- **Removable Dino Figures:** Includes 2 dinosaur characters that can be placed in the excavator's seat.
- **Durable & Safe Design:** Crafted from toxin-free ABS plastic with rounded edges and no small parts.

SETUP

1. Remote Control Battery Installation

The remote control requires 2 AA batteries (not included). Use the provided screwdriver to open the battery compartment on the back of the remote. Insert the batteries, ensuring correct polarity (+/-), then close the compartment and secure it with the screw.



Image: Remote control with battery compartment open for AA battery installation.

2. Excavator Charging

The excavator toy has a built-in 500mAh rechargeable battery. Before first use, fully charge the toy. Connect the provided USB charging cable to the charging port on the excavator and plug the other end into a USB power source (e.g., computer, wall adapter). A red light will illuminate during charging and turn off when the battery is full.

Newly Upgraded Rechargeable RC Car



 The light turns red when charging the car and goes out when fully charged.

Image: RC excavator toy connected to a USB charging cable, showing the charging indicator light.

Video: Demonstrates the Lehou Castle Toddler Remote Control Car, including how to charge the vehicle.

OPERATING INSTRUCTIONS

1. Basic Controls

The remote control features two main buttons for movement:

- **Forward Button:** Press to move the excavator forward.
- **Backward/Turn Button:** Press to move the excavator backward. Holding this button will also initiate a turning motion.

Sturdy & Drop Resistant



Image: Remote control illustrating the simple two-button operation for movement.

2. Special Features

- **Movable Excavator Arm:** Manually adjust the excavator's arm and bucket for imaginative play.
- **360° Swivel Seat:** The operator's seat on the excavator can be manually rotated 360 degrees.
- **Removable Dino Figures:** Place the included dinosaur figures into the excavator's seat.
- **Sound Modes:** A dedicated button on the remote control allows you to switch between silent mode, engaging dinosaur roars, and cheerful tunes.

Easy to Use with 3 Buttons for Any Age

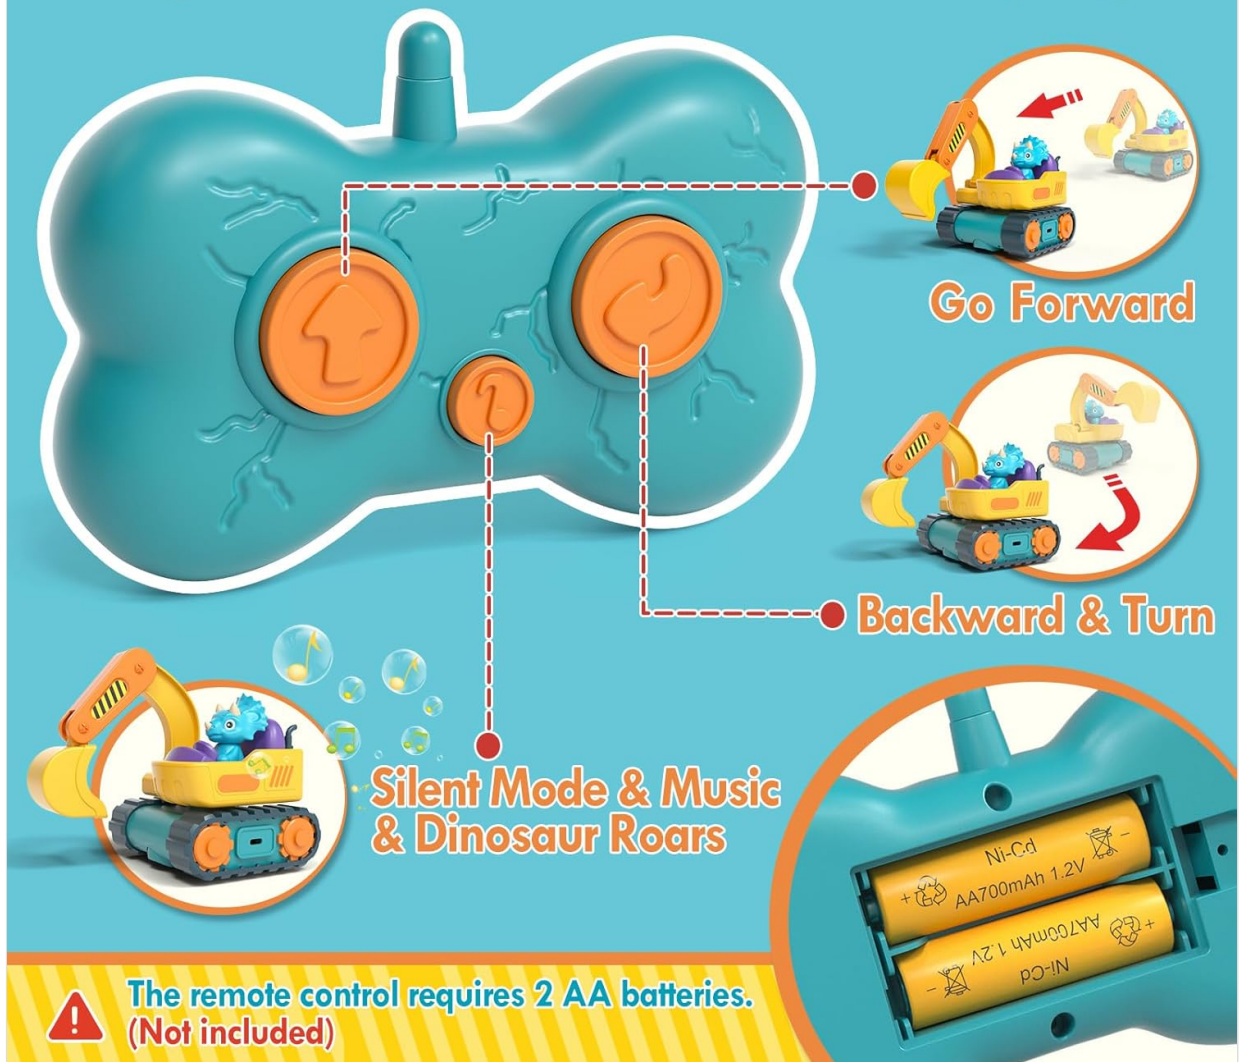


Image: Detailed view of the excavator's movable arm, removable dino figures, and swivel seat.

Video: Demonstrates the Lehou Castle Excavator Construction Vehicle Toy in action, showcasing its movements and features.

MAINTENANCE

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not immerse the toy or remote control in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove AA batteries from the remote control if the toy will not be used for an extended period to prevent leakage.

SAFETY INFORMATION

This toy is designed with safety in mind for young children:

- Made from toxin-free ABS plastic.
- Features rounded edges to prevent injury.
- Contains no small parts that could pose a choking hazard.
- Adult supervision is recommended during play.

Premium Material & Smooth Edges



BPA-FREE



NON-TOXIC



**PHTHALATE
FREE**



**BROKEN
RESISTANT**



Image: Highlights the premium, safe, and durable materials used in the toy's construction.

TROUBLESHOOTING

- **Toy not moving:** Ensure the excavator is fully charged and the remote control has fresh AA batteries installed correctly. Check that the power switch on the excavator is in the 'ON' position.
- **Remote not responding:** Verify remote control batteries are correctly inserted and not depleted. Ensure the toy's power is on.
- **Charging light not on:** Check the USB cable connection to both the excavator and the power source. Ensure the power source is active.

WARRANTY AND SUPPORT

Lehoo Castle is committed to providing high-quality products. For any questions, concerns, or support needs regarding your Remote Control Excavator Toy, please contact the manufacturer directly through the retailer's platform or visit the official Lehoo Castle store for assistance.