

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Samsung](#) /

› [Samsung Galaxy M34 5G User Manual](#)

## Samsung M34 5G

# Samsung Galaxy M34 5G User Manual

Model: M34 5G (M346B/DS)

## INTRODUCTION

---

This manual provides essential information for using your Samsung Galaxy M34 5G smartphone. It covers device setup, basic operation, maintenance, and troubleshooting to help you maximize your device's capabilities. The Galaxy M34 5G features a 6.5-inch FHD+ Super AMOLED 120Hz display, a 50MP OIS camera, a 6,000 mAh battery, and an octa-core processor for smooth performance.

## WHAT'S IN THE BOX

---

- Samsung Galaxy M34 5G Smartphone
- USB-C to USB-C Cable
- 25W Fast Charger Adapter
- SIM Ejection Pin
- Quick Start Guide (may vary by region)

## DEVICE OVERVIEW

---

The Samsung Galaxy M34 5G is designed for a clear and immersive viewing experience with its 6.5-inch Super AMOLED display. It features a versatile camera system and a long-lasting battery.



Figure 1: Front view of the Samsung Galaxy M34 5G, showcasing the display and front camera.



Figure 2: Back view of the Samsung Galaxy M34 5G, showing the triple camera module and Samsung branding.

# Monster Features

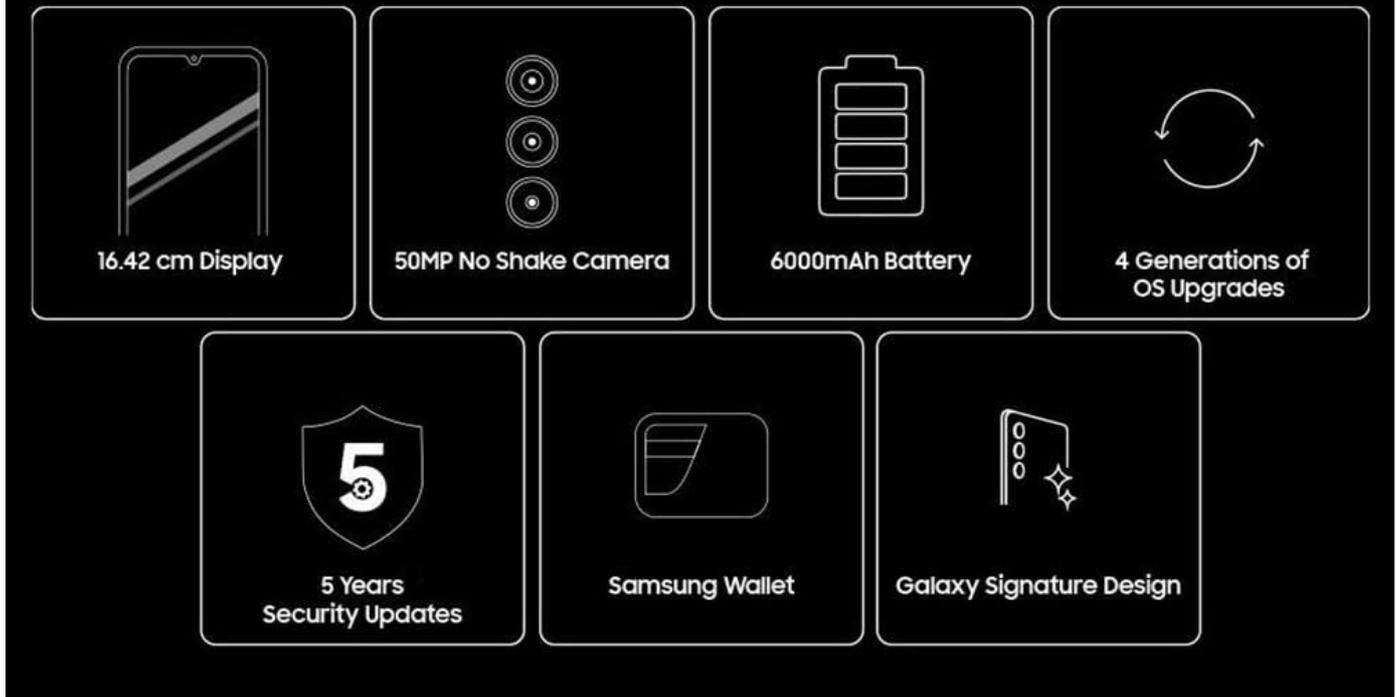


Figure 3: Key features include a 6.5-inch display, 50MP OIS camera, 6000mAh battery, 4 generations of OS upgrades, 5 years of security updates, Samsung Wallet, and Galaxy Signature Design.

## SETUP

### 1. Inserting SIM Card and microSD Card

1. Locate the SIM tray on the side of your device.
2. Insert the SIM ejection pin into the small hole next to the tray to open it.
3. Place your Nano-SIM card(s) and/or microSD card into the tray with the gold contacts facing down. The Galaxy M34 5G supports Dual SIM and expandable storage via a shared SIM slot.
4. Gently push the tray back into the slot until it clicks into place.

### 2. Initial Power On

- Press and hold the Power/Side key until the Samsung logo appears.
- Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and data transfer.

### 3. Charging the Device

Before first use, it is recommended to fully charge your device. Use the included 25W fast charger and USB-C cable.

1. Connect the USB-C cable to the charging port at the bottom of your phone.
2. Connect the other end of the cable to the 25W fast charger adapter.
3. Plug the adapter into a power outlet.
4. The charging indicator will appear on the screen.



Figure 4: Samsung Galaxy M34 5G shown with the included 25W fast charger adapter.

## OPERATING INSTRUCTIONS

---

### Power On/Off and Restart

- **Power On:** Press and hold the Power/Side key until the device vibrates and the Samsung logo appears.
- **Power Off:** Press and hold the Power/Side key and Volume Down key simultaneously, then tap 'Power off' on the screen. Alternatively, swipe down from the top of the screen to open the Quick Panel, tap the Power icon, and select 'Power off'.
- **Restart:** Follow the power off steps, but select 'Restart' instead.

### Basic Navigation

- **Home Screen:** Swipe up from the bottom of the screen to access the app drawer. Swipe left or right to navigate between home screens.
- **Notifications and Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles.
- **Recent Apps:** Swipe up and hold from the bottom of the screen (if using gesture navigation) or tap the Recent Apps button (if using navigation buttons) to see recently used applications.

### Camera Usage

The Galaxy M34 5G features a 50MP main camera with Optical Image Stabilization (OIS), an 8MP ultrawide camera, a 2MP macro camera, and a 13MP front camera.

1. Open the Camera app from your home screen or app drawer.
2. Select your desired camera mode (e.g., Photo, Video, Portrait, Pro).
3. Tap the shutter button to capture a photo or start/stop video recording.
4. Switch between front and rear cameras using the camera switch icon.

### Connectivity

- **Wi-Fi:** Go to *Settings > Connections > Wi-Fi* to connect to available wireless networks.

- **Bluetooth:** Go to *Settings > Connections > Bluetooth* to pair with Bluetooth devices like headphones or speakers.
- **Mobile Data (5G):** Ensure your SIM card is active and mobile data is enabled in *Settings > Connections > Data usage*. The device supports 5G networks.

## MAINTENANCE

---

### Software Updates

Keep your device's software up to date for optimal performance, security, and new features. The Galaxy M34 5G is upgradable to Android 14 and receives 5 years of security updates.

- Go to *Settings > Software update*.
- Tap 'Download and install' to check for and apply available updates.

### Cleaning Your Device

- Use a soft, lint-free cloth to gently wipe the screen and body of the phone.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

### Battery Care

The 6,000 mAh battery provides extended usage. To prolong battery life:

- Avoid extreme temperatures.
- Use the original charger and cable.
- Enable adaptive power saving features in *Settings > Battery and device care > Battery*.
- Avoid frequently discharging the battery completely or keeping it at 100% for extended periods.

## TROUBLESHOOTING

---

If you encounter issues with your device, try the following common solutions:

- **Device not responding:** Press and hold the Power/Side key and Volume Down key for more than 7 seconds to force restart the device.
- **Battery draining quickly:** Check background app usage in *Settings > Battery and device care > Battery*. Reduce screen brightness, disable unused features like GPS or Bluetooth, and ensure apps are updated.
- **Network connectivity issues:** Toggle Airplane mode on and off. Restart the device. Check SIM card insertion. Contact your carrier if issues persist.
- **Apps crashing or freezing:** Clear the app's cache and data in *Settings > Apps > [App Name] > Storage*. If the issue continues, uninstall and reinstall the app.
- **Storage full:** Delete unnecessary files, photos, and videos. Move media to a microSD card. Uninstall unused apps.

## SPECIFICATIONS

---

Feature	Detail
Model Name	Samsung Galaxy M34 5G
Display	6.5-inch FHD+ Super AMOLED, 1080 x 2340 resolution, 120Hz Refresh Rate, 1000 nits (peak)
Processor	Exynos 1280 (5nm) Octa-core
RAM	6 GB

Feature	Detail
Internal Storage	128 GB (expandable via microSDXC, uses shared SIM slot)
Rear Camera	50MP (f/1.8, wide, OIS) + 8MP (f/2.2, ultrawide) + 2MP (f/2.4, macro)
Front Camera	13MP (f/2.2, wide)
Battery	6000 mAh (typical), 25W Fast Charging
Operating System	Android 13.0 (upgradable to Android 14, One UI 6)
Connectivity	5G, Wi-Fi 802.11 a/b/g/n/ac, Bluetooth 5.3, GPS
SIM Type	Dual SIM (Nano-SIM)
Dimensions	6 x 4 x 2 inches (Product Dimensions)
Weight	12.6 ounces
Audio Jack	No headphone jack
Wireless Carrier Compatibility	Unlocked (Compatible with most GSM Carriers like T-Mobile, MetroPCS. Not compatible with CDMA Carriers such as Verizon, Sprint, or Boost.)

## WARRANTY AND SUPPORT

Please note that this is an International Model and may not carry a manufacturer's warranty in the United States. For specific warranty information, please refer to the documentation provided with your device or contact the seller directly.

For technical support, software updates, or service inquiries, please visit the official Samsung support website for your region or contact Samsung customer service. You can often find support resources, FAQs, and troubleshooting guides online.

**Samsung Support Website:** <https://www.samsung.com/support/>