



Manuals.plus /

› TREKSTONE /

› TREKSTONE Double Gas Stove Instruction Manual

TREKSTONE Doppel-Gaskocher B0CVXYJSJ7

TREKSTONE® Double Gas Stove Instruction Manual

Model: Doppel-Gaskocher (ASIN: B0CVXYJSJ7)

INTRODUCTION

Thank you for choosing the TREKSTONE® Double Gas Stove. This portable and robust gas stove is designed for reliable performance during your camping and outdoor activities. Featuring two individually usable aluminum die-cast burners, stepless heat regulation, and integrated wind protection, it offers convenience and efficiency for your outdoor cooking needs. This manual provides essential information for safe setup, operation, maintenance, and troubleshooting to ensure optimal use of your new gas stove.

IMPORTANT SAFETY INSTRUCTIONS

Please read all safety warnings and instructions carefully before using this appliance. Failure to follow these instructions may result in fire, explosion, property damage, personal injury, or death.

- **For Outdoor Use Only:** Never use this appliance indoors, in enclosed spaces, or in unventilated areas. Carbon monoxide poisoning can occur.
- **Gas Leak Check:** Always check for gas leaks using soapy water solution before each use. Never use an open flame to check for leaks.
- **Ventilation:** Ensure adequate ventilation during operation.
- **Stable Surface:** Place the stove on a stable, level, non-combustible surface away from flammable materials.
- **Gas Cylinder Connection:** Connect the gas cylinder and pressure reducer according to manufacturer's instructions. Ensure all connections are tight.
- **Children and Pets:** Keep children and pets away from the appliance during operation and when it is hot.
- **Hot Surfaces:** The stove and surrounding areas will become very hot during use. Allow to cool completely before handling or storing.
- **Fuel Type:** Use only Butane (G30), Propane (G31), or their mixture as fuel.
- **Storage:** Disconnect the gas cylinder when the stove is not in use. Store the stove and gas cylinder in a cool, dry, well-ventilated area.
- **Maintenance:** Do not modify the appliance. Any repairs should be performed by qualified personnel.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x TREKSTONE® Double Gas Stove
- 1 x Pressure Reducer
- 1 x 80 cm Gas Hose



Image: The TREKSTONE Double Gas Stove, featuring two burners and a protective lid that doubles as a wind shield.

SETUP GUIDE

Follow these steps to set up your gas stove safely:

1. **Unpack and Inspect:** Carefully remove all components from the packaging. Inspect the stove, hose, and pressure reducer for any signs of damage. Do not use if damaged.
2. **Position the Stove:** Place the TREKSTONE® Double Gas Stove on a firm, level, non-combustible surface outdoors. Ensure there is ample space around the stove and no flammable materials nearby.
3. **Connect Pressure Reducer:** Attach the pressure reducer to a compatible reusable propane gas cylinder (e.g., 5 kg or 11 kg). Ensure the connection is secure and hand-tight.
4. **Connect Gas Hose:** Connect one end of the 80 cm gas hose to the pressure reducer and the other end to the gas inlet on the side of the stove. Tighten all connections firmly.
5. **Perform Leak Test:** Before opening the gas cylinder valve, apply a soapy water solution to all gas connections (cylinder to reducer, reducer to hose, hose to stove). Slowly open the gas cylinder valve. If bubbles appear, there is a leak. Immediately close the gas valve, tighten the connection, and re-test. Do not proceed until all leaks are resolved.



Image: The included pressure reducer and 80 cm gas hose, essential for connecting the stove to a gas cylinder.

OPERATING INSTRUCTIONS

Once the stove is safely set up and leak-tested, you can begin cooking:

1. **Open Gas Supply:** Slowly open the valve on your gas cylinder to allow gas to flow to the stove.
2. **Ignite Burner:** Turn the control knob of the desired burner counter-clockwise to the "ON" position. Immediately ignite the gas using a long match or a utility lighter. Ensure the flame is stable.
3. **Adjust Flame:** Rotate the control knob to adjust the flame intensity. You can achieve a simmering setting or full heat.
4. **Cooking:** Place your cookware on the grate above the lit burner. The stove supports cookware sizes up to 2 x approximately \varnothing 30 cm.
5. **Turning Off:** When finished cooking, first close the valve on the gas cylinder. Allow the flames on the stove to extinguish naturally. Then, turn the burner control knobs to the "OFF" position.
6. **Cool Down:** Allow the stove to cool completely before moving or cleaning.



Image: The TREKSTONE Double Gas Stove in operation, demonstrating its use with a pot on one of the burners.

CARE AND MAINTENANCE

Proper care will extend the life of your TREKSTONE® Double Gas Stove:

- **Cleaning:** The stove features removable parts for easy cleaning. After each use, allow the stove to cool down completely. Remove the grates and burner caps. Clean these parts and the stove body with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads. Ensure all parts are dry before reassembling.
- **Storage:** Disconnect the gas cylinder from the stove when not in use. Store the stove in a cool, dry place, protected from direct sunlight and extreme temperatures. The lid acts as a protective cover for storage.
- **Inspection:** Periodically inspect the gas hose for cracks, cuts, or wear. Check all connections for tightness. Replace any damaged components immediately.

TROUBLESHOOTING

If you encounter issues with your gas stove, refer to the following table:

Problem	Possible Cause	Solution
Burner does not ignite.	Gas cylinder valve is closed. No gas in cylinder. Gas hose or connections are loose/blocked. No ignition source.	Open gas cylinder valve. Replace or refill gas cylinder. Check and tighten all connections; clear any blockages. Use a long match or utility lighter.
Weak or inconsistent flame.	Low gas pressure. Gas hose kinked or partially blocked. Burner ports are dirty.	Ensure gas cylinder has sufficient gas. Check pressure reducer. Straighten hose; check for blockages. Clean burner ports carefully.
Smell of gas.	Gas leak.	Immediately turn off gas cylinder valve. Ventilate the area. Perform a leak test with soapy water. Do not use the stove until the leak is found and fixed. If unable to fix, contact qualified personnel.
Stove unstable.	Uneven surface. Non-slip feet damaged.	Move stove to a flat, stable surface. Ensure non-slip feet are intact and clean.

TECHNICAL SPECIFICATIONS

Brand	TREKSTONE®
Model	Doppel-Gaskocher (ASIN: B0CVXYJSJ7)
Color	Grey
Material	Iron
Item Weight	Approx. 2.7 Kilograms
Product Dimensions (Closed)	Approx. 58.0 × 28.0 × 5.5 cm (L × W × H)
Fuel Type	Butane (G30), Propane (G31) or their mixture
Power Source	Gas operated
Maximum Energy Output	4.4 Kilowatt
Compatible Gas Cylinders	Common reusable propane gas cylinders (e.g., 5 kg or 11 kg)
Max Cookware Size	2 x approx. Ø 30 cm

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the TREKSTONE customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official TREKSTONE website or contact their support channels.

