



[Manuals.plus](#) /

› [Timex](#) /

› Timex Men's Easy Reader Watch 35mm - Instruction Manual

Timex TW2W529009J

Timex Men's Easy Reader Watch 35mm - Instruction Manual

Model: TW2W529009J

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Timex Men's Easy Reader 35mm watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Front view of the Timex Men's Easy Reader 35mm watch, featuring a white dial, clear numerals, and a silver-tone expansion band.

SETUP

Setting the Time

1. **Pull the Crown:** Gently pull the crown (the small knob on the side of the watch case) out to the furthest position.
2. **Adjust Time:** Rotate the crown in either direction until the hour and minute hands indicate the correct time.
3. **Push the Crown:** Once the time is set, push the crown back into its original position. The second hand will begin to move.

Adjusting the Expansion Band

The watch features an expansion band designed for comfort. If adjustment is needed, it typically involves removing or adding links. This procedure often requires specialized tools and is best performed by a qualified jeweler or watch technician to avoid damage.



Side view of the watch, highlighting the crown for time adjustment and the design of the expansion band.

OPERATING INSTRUCTIONS

INDIGLO® Night-Light


Your Timex Easy Reader watch is equipped with the INDIGLO® night-light feature for illumination in low-light conditions.

- **Activate:** Press and hold the crown (the same knob used for setting the time) to activate the INDIGLO® night-light.
- **Deactivate:** Release the crown to turn off the night-light.

Everything You Need & Nothing You Don't



Easy-to-Read Dial

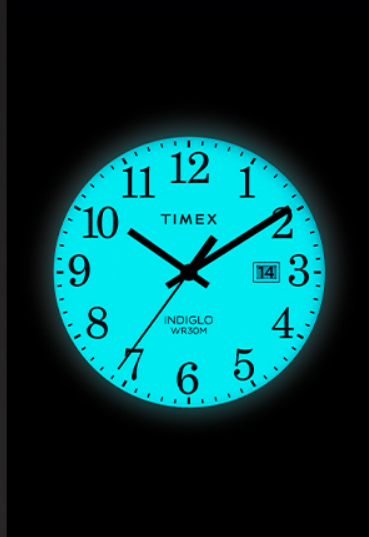

INDIGLO® Backlight



Classic Look

The watch dial illuminated by the INDIGLO® night-light, providing clear visibility in the dark.

MAINTENANCE

Water Resistance

This watch is water resistant up to 30 meters (100 feet). This means it is suitable for splashes or brief immersion in water, but not for swimming or bathing. Do not operate the crown while the watch is wet or submerged.

- **30M (100 ft):** Suitable for splashes, rain, or brief immersion.
- **Avoid:** Swimming, showering, diving, or operating crown underwater.





The watch's stainless steel back, indicating its water resistance rating.

Battery Replacement

The watch uses one Lithium Metal battery (included). When the watch stops running, the battery needs to be replaced. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the finish.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement. Consult a watch technician.
- **INDIGLO® Not Working:**
 - Ensure the crown is pressed firmly.
 - A low battery can affect INDIGLO® performance.
- **Water Inside Watch:**
 - Immediately take the watch to a service center. Do not attempt to open it yourself.

SPECIFICATIONS

Model Number	TW2W529009J
Case Diameter	35 Millimeters
Case Material	Brass
Band Material	Stainless Steel
Band Length	8 Inches
Crystal Type	Mineral Glass
Movement Type	Quartz
Water Resistance Depth	30 Meters (100 Feet)
Power Source	Battery Powered (1 Lithium Metal battery included)
Display Type	Analog

Watch Sizing Guide

For assistance with watch sizing, please refer to the official Timex Sizing Chart video below. This video provides visual guidance on how different case sizes appear on various wrist sizes.

Your browser does not support the video tag.

Official Timex Sizing Chart video, demonstrating how various watch case sizes fit on different wrist dimensions.

WARRANTY INFORMATION

Your Timex watch is covered by a limited warranty against manufacturing defects. The warranty period and terms may vary by region. Please refer to the warranty card included with your purchase or visit the official Timex website for detailed information.

The warranty typically covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from improper handling, accidents, unauthorized repairs, or normal wear and tear.

SUPPORT

For further assistance, service, or to purchase genuine Timex parts, please contact Timex Customer Service or visit their official website.

- **Online Support:** Visit the official Timex website for FAQs, service center locations, and contact information.
- **Service Centers:** For repairs or battery replacement, it is recommended to use authorized Timex service centers to ensure quality and maintain warranty validity.