

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SAMSUNG](#) /

› [SAMSUNG Galaxy Tab A9 User Manual](#)

SAMSUNG X110

SAMSUNG Galaxy Tab A9 User Manual

Model: X110

INTRODUCTION

This manual provides essential information for the safe and efficient use of your SAMSUNG Galaxy Tab A9. Designed for expansive visuals and smooth performance, this Android tablet is suitable for a variety of tasks, from entertainment to productivity. Please read this manual thoroughly before operating your device.



Figure 1: Front and back view of the SAMSUNG Galaxy Tab A9 in Silver.

WHAT'S IN THE BOX

Upon unboxing your SAMSUNG Galaxy Tab A9, please ensure all components are present:

- SAMSUNG Galaxy Tab A9 (Model: X110)
- USB Type-C Cable
- Quick Start Guide
- Ejection Pin (for microSD card slot)
- *Note: Charger is not included and must be purchased separately.*

KEY FEATURES

- **Display:** 8.7" (220.5mm) TFT display with 1340 x 800 (WXGA+) resolution and 60Hz refresh rate for smooth visuals.
- **Performance:** Powered by a Mediatek Helio G99 (6nm) Octa-core processor and Mali-G57 MC2 GPU, with 4GB RAM for efficient multitasking.
- **Storage:** 64GB internal storage, expandable up to 1TB via microSD card (256GB SD Bundle included with this specific model).
- **Cameras:** 8MP AF Rear Camera and 2MP Front Camera for photos and video calls.
- **Audio:** Dual Speakers (1.0W) providing an immersive audio experience.
- **Connectivity:** Wi-Fi Only (no SIM card slot), Bluetooth 5.3, USB Type-C 2.0.
- **Battery:** Long-lasting 5100 mAh battery for extended usage.
- **Operating System:** Runs on Android 13 with One UI 5.1.
- **Productivity:** Supports multi-window functionality for running up to two apps simultaneously.
- **Seamless Connectivity:** Features like Quick Share and Continue Apps on other devices enhance cross-device integration within the Samsung ecosystem.

SETUP

1. Charging the Device

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the battery status.

2. Powering On and Initial Setup

Press and hold the Power button (located on the side) until the Samsung logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account sign-in, and setting up security features.

3. Connecting to Wi-Fi

During initial setup, you will be prompted to connect to a Wi-Fi network. If you skip this step, you can connect later via: **Settings > Connections > Wi-Fi**. Select your desired network and enter the password if required.

OPERATING THE TABLET

Navigation

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the home screen to access all installed applications.
- **Notifications Panel:** Swipe down from the top of the screen to view notifications and quick settings.
- **Recent Apps:** Tap the Recent Apps button (usually a square icon) to view and switch between recently used applications.

Multi-Window Functionality

To enhance productivity, the Galaxy Tab A9 supports multi-window mode, allowing you to run two applications side-by-side:

1. Open the first application.
2. Tap the Recent Apps button.

3. Tap the icon of the first app at the top of its preview.
4. Select "Open in split screen view."
5. Choose the second application from the list or app drawer.

Quick Share

Quick Share allows for fast and easy sharing of photos, videos, and documents with nearby Galaxy devices. To use:

1. Select the content you wish to share (e.g., from Gallery or My Files).
2. Tap the Share icon.
3. Select "Quick Share" from the sharing options.
4. Choose the nearby Galaxy device(s) to send to.

SPECIFICATIONS

Feature	Detail
Standing screen display size	8.7 Inches
Screen Resolution	1340x800 (WXGA+)
RAM	4 GB
Hard Drive (Internal Storage)	64 GB
Card Description	Integrated (MicroSD slot for expansion up to 1TB)
Wireless Type	802.11ac (Wi-Fi Only)
Brand	SAMSUNG
Series	Galaxy Tab
Item model number	X110
Operating System	Android 13
Item Weight	1.04 pounds
Product Dimensions	10 x 8 x 1.5 inches
Color	Silver
Rear Webcam Resolution	8 MP
Processor Brand	MediaTek
Number of Processors	8 (Octa-core)
Flash Memory Size	64 GB
Batteries	1 Lithium Ion battery required (5100 mAh)

MAINTENANCE

Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of your tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid using harsh chemicals or abrasive materials.

Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings > Software update > Download and install**.

Battery Care

To prolong battery life, avoid extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for daily use. Avoid leaving the tablet plugged in for extended periods after it's fully charged.

Storage Management

Periodically review your stored files and applications. Delete unnecessary data to free up space and maintain device speed. Utilize the microSD card for large media files to keep internal storage clear.

TROUBLESHOOTING

Problem	Possible Solution
Device not turning on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, perform a forced restart by holding the Power button and Volume Down button simultaneously for about 7-10 seconds.
Wi-Fi connection issues	Restart your Wi-Fi router. On the tablet, turn Wi-Fi off and then on again. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps crashing or freezing	Close the app and reopen it. Clear the app's cache (Settings > Apps > select app > Storage > Clear cache). Ensure the app is updated to the latest version. Restart the tablet.
Slow performance	Close unused apps running in the background. Clear cache and temporary files. Ensure sufficient storage space is available. Restart the device regularly.

WARRANTY AND SUPPORT

Please note that this is an **International Model** and may not come with a domestic warranty in your region. Any warranty coverage would typically be provided by the seller, as indicated in the product information. For specific warranty details and support, please refer to the documentation provided by your point of purchase or contact the seller directly.

For general product information and software support, you may visit the official SAMSUNG support website for your region. Keep your purchase receipt as proof of purchase for any potential claims.

