

## Samsung BN59-01391A

# Samsung BN59-01391A Smart TV Remote Control User Manual

Model: BN59-01391A

## 1. INTRODUCTION

---

This user manual provides comprehensive instructions for the operation and maintenance of your Samsung BN59-01391A Smart TV Remote Control. This remote is designed to enhance your television viewing experience with features such as voice search, direct access to streaming applications, and an eco-friendly solar charging system. Please read this manual thoroughly before using the remote control to ensure proper functionality and longevity.

## 2. SAFETY INFORMATION

---

- Do not expose the remote control to direct sunlight for extended periods, except for charging purposes.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Keep the remote control away from water and other liquids.
- Do not attempt to disassemble or modify the remote control. This may void any warranty and cause damage.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.

## 3. PRODUCT OVERVIEW

---

The Samsung BN59-01391A remote control features a minimalist design with essential buttons for intuitive navigation and control of your Samsung Smart TV.



**Image 3.1:** Front and back view of the white Samsung BN59-01391A remote control. The front features a power button, microphone button for voice search, a 123/numeric pad button, a multi-directional navigation pad with a central select button, return, home, play/pause buttons, volume and channel rockers, and dedicated buttons for Netflix, Samsung TV Plus, Disney+, and Prime Video. The back of the remote shows the solar panel for charging.

### Key Features:

- **Voice Search:** Activate the microphone for voice commands.
- **Solar Charging:** Integrated solar panel for eco-friendly power.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, Samsung TV Plus, Disney+, and Prime Video.
- **Universal Compatibility:** Designed for Samsung TVs from 2021, 2022, and 2023.

## 4. SETUP

---

### 4.1 Initial Charging

Before first use, ensure the remote control is sufficiently charged. Place the remote control with its solar panel facing a light source (natural sunlight or indoor lighting) for at least 30 minutes. Alternatively, you can charge it via the USB-C port (cable not included) if available on your specific model.

### 4.2 Pairing with Your TV

The remote control typically pairs automatically with compatible Samsung Smart TVs. If pairing does not occur automatically, follow these steps:

1. Point the remote control at your Samsung TV.
2. Press and hold the **Return** button ( ) and the **Play/Pause** button ( ) simultaneously for 3 seconds.
3. A pairing message should appear on your TV screen, indicating successful connection.

If the remote still does not pair, ensure your TV's Bluetooth is enabled and try again. Refer to your TV's user manual for specific Bluetooth settings.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Navigation

- Use the **Directional Pad** (up, down, left, right) to navigate menus and select items.
- Press the **Center Select Button** to confirm a selection.
- Press the **Return** button to go back to the previous screen.
- Press the **Home** button to access the Smart Hub.

### 5.2 Voice Search

To use voice search:

1. Press and hold the **Microphone** button ( ).
2. Speak your command clearly into the remote control.
3. Release the button when you are finished speaking.

### 5.3 Streaming Apps

Press the dedicated buttons for **Netflix**, **Samsung TV Plus**, **Disney+**, or **Prime Video** to launch these applications directly.

### 5.4 Volume and Channel Control

- Press the **Volume rocker** up or down to adjust the sound level.
- Press the **Channel rocker** up or down to change channels.

## 6. CHARGING

---

The Samsung BN59-01391A remote control features a built-in solar panel on its back. To charge the remote:

- Place the remote control with the solar panel facing upwards in an area with sufficient light.

- Both natural sunlight and indoor artificial light can charge the remote.
- Regular exposure to light will help maintain the remote's charge, eliminating the need for disposable batteries.

## 7. TROUBLESHOOTING

Problem	Possible Solution
Remote not responding	Ensure the remote is charged. Point it directly at the TV. Re-pair the remote with the TV (see Section 4.2).
Voice search not working	Ensure the microphone button is pressed and held while speaking. Check TV's internet connection and voice assistant settings.
App buttons not launching apps	Ensure the TV is connected to the internet. Check if the apps are installed and updated on your TV.
Remote loses connection frequently	Ensure no obstructions between the remote and the TV. Check for interference from other wireless devices. Re-pair the remote.

## 8. SPECIFICATIONS

- **Model Number:** BN59-01391A
- **Compatible Devices:** Samsung Televisions (2021, 2022, 2023 models)
- **Special Feature:** Solar charged, Voice Search
- **Color:** White
- **Max Number of Supported Devices:** 1
- **Item Weight:** 2.08 ounces
- **Package Dimensions:** 7.05 x 3.03 x 0.71 inches

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your original purchase or contact the retailer/manufacturer directly. Specific warranty terms may vary based on region and point of purchase.