

FOHERE B0CW18J7WH

FOHERE 12-Inch Deep Non-Stick Electric Skillet

INSTRUCTION MANUAL

Introduction

Thank you for choosing the FOHERE 12-Inch Deep Non-Stick Electric Skillet. This appliance is designed for versatile cooking, offering a large capacity and efficient heating for various meals. Please read this manual thoroughly before first use to ensure safe operation and optimal performance. Keep these instructions for future reference.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the control probe, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended household use.

Product Overview

The FOHERE electric skillet features a durable die-cast aluminum body with a premium non-stick cooking surface, a tempered glass lid, and a detachable temperature control probe.

FOHERE Electric Skillet

One pot with multiple functions, a firm choice for your family life.



The FOHERE electric skillet includes a tempered glass lid, allowing you to monitor cooking progress without lifting the lid. The lid also features a standable design for convenience.

Setup

1. **Unpacking:** Carefully remove all packaging materials and inspect the skillet for any damage.
2. **Initial Cleaning:** Before first use, wash the skillet body and glass lid with warm, soapy water. Rinse thoroughly and dry completely. The control probe should only be wiped clean with a damp cloth.
3. **Assembly:** Insert the temperature control probe firmly into the receptacle on the side of the skillet. Ensure it is fully seated.
4. **Placement:** Place the electric skillet on a stable, heat-resistant, and dry surface away from flammable materials.

Operating Instructions

Capacity and Versatility

This 12-inch electric skillet features a 2.8-inch deep, 5-liter volume, making it suitable for cooking meals for 3-5 people. It can be used for a wide range of cooking tasks including frying, roasting, simmering, sautéing, searing, slow cooking, and reheating.

5L Large Capacity

Meet the diverse needs of many people



Egg



Pancakes



Meatloaf




Chicken Breast



Steak



Pasta

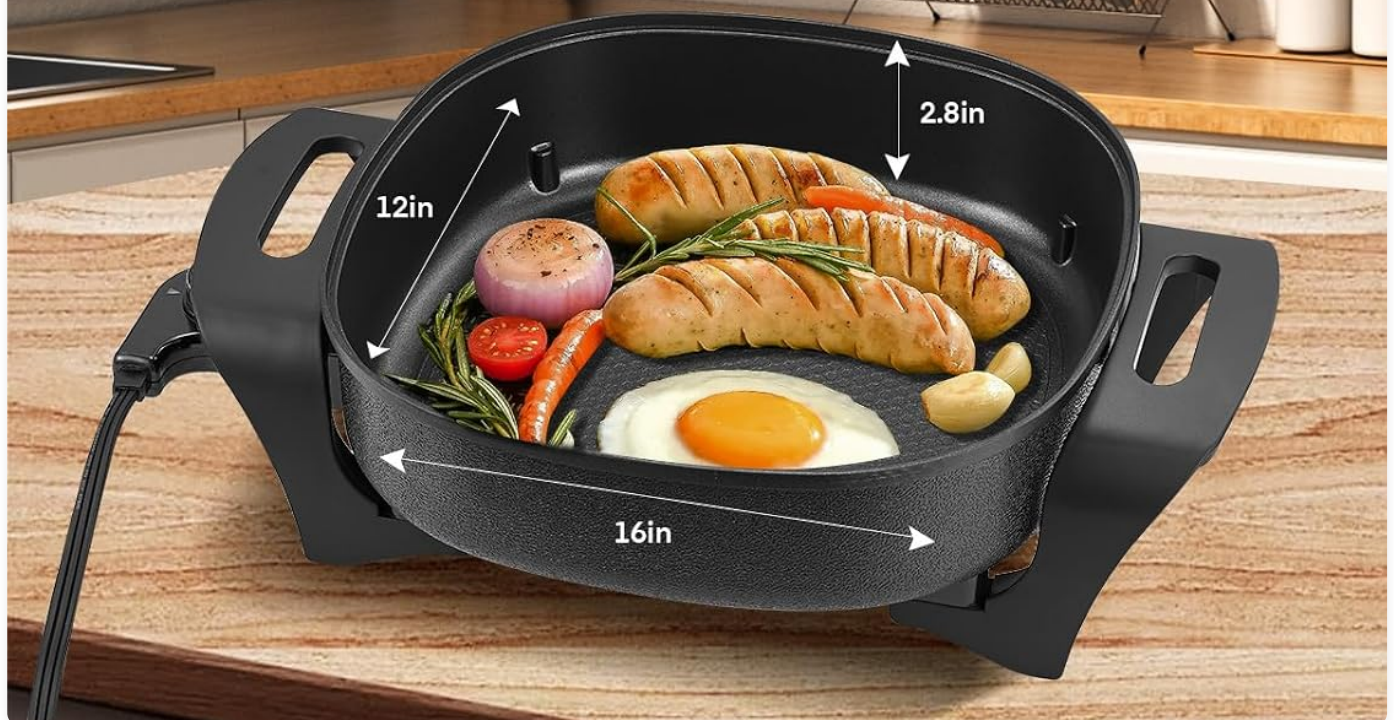

This image illustrates the generous 5-liter capacity and dimensions of the FOHERE electric skillet, suitable for preparing a variety of meals for 3-5 people. Examples include eggs, pancakes, meatloaf, chicken breast, steak, and pasta.

Temperature Control

The skillet features a temperature control dial with three marked heating levels for precise cooking:

- 1st Gear (Low Fire): 220-250°F
- 2nd Gear (Medium Fire): 320-350°F
- 3rd Gear (High Fire): 370-400°F

Three-speed Fire Adjustment

Easy temperature control, overheating and power off



The temperature control dial features three distinct heat settings for precise cooking: Low (220-250°F), Medium (320-350°F), and High

(370-400°F). Turn the dial to select the desired temperature.

Cooking Process

1. **Preheating:** Plug the control probe into a standard electrical outlet. Turn the temperature dial to your desired setting. Allow the skillet to preheat for a few minutes until the indicator light turns off, signaling it has reached the set temperature. Preheating helps ensure even cooking and prevents food from sticking.
2. **Cooking:** Add food to the preheated skillet. Adjust the temperature as needed during cooking.
3. **Even Heating:** The skillet is designed with a flat surface and a 1360W rounded heating element to provide even and continuous heat distribution.

Even Heating

Enjoy delicious food, easy cooking

*Note: Please preheat the pot before use.



This image highlights the skillet's ability to provide even and continuous heating, ensuring consistent cooking results. Always preheat the skillet before adding food.

Easy to Clean

Rinses off easily without leaving a greasy residue.



Before cooking, preheat the skillet to the desired temperature. This helps preserve food nutrition and prevents food from sticking to the non-stick surface.

- **Finishing:** Once cooking is complete, turn the temperature dial to 'OFF' and unplug the control probe from the wall outlet.

Cleaning and Maintenance

Proper cleaning and maintenance will extend the life of your electric skillet and ensure its non-stick performance.

1. **Cool Down:** Always allow the skillet to cool completely before cleaning.
2. **Remove Control Probe:** Detach the temperature control probe before cleaning the skillet body. Do not immerse the control probe in water.
3. **Skillet Body:** The die-cast aluminum body with its non-stick surface can be cleaned with a soft sponge or cloth and warm, soapy water. For stubborn food residues, soak the skillet in warm water for a few minutes before cleaning. Rinse thoroughly and dry completely. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating. The base is not dishwasher safe.
4. **Glass Lid:** The tempered glass lid is dishwasher safe for convenient cleaning. Alternatively, wash by hand with warm, soapy water, rinse, and dry.
5. **Control Probe:** Wipe the control probe with a damp cloth. Do not immerse it in water or any other liquid.
6. **Storage:** Store the clean, dry skillet and lid in a safe place.

Standable Glass Lid

Humanized design, does not take up space.



Visible
tempered glass


Anti-collision
304 stainless
steel edge

**304 Stainless
Steel**
vent hole

The premium non-stick cooking surface allows for easy cleaning. Simply wipe the interior with a soft cloth after use. The glass lid is dishwasher safe, but the main body is not.

Quality Detail Design

Note: Please brush with oil before use

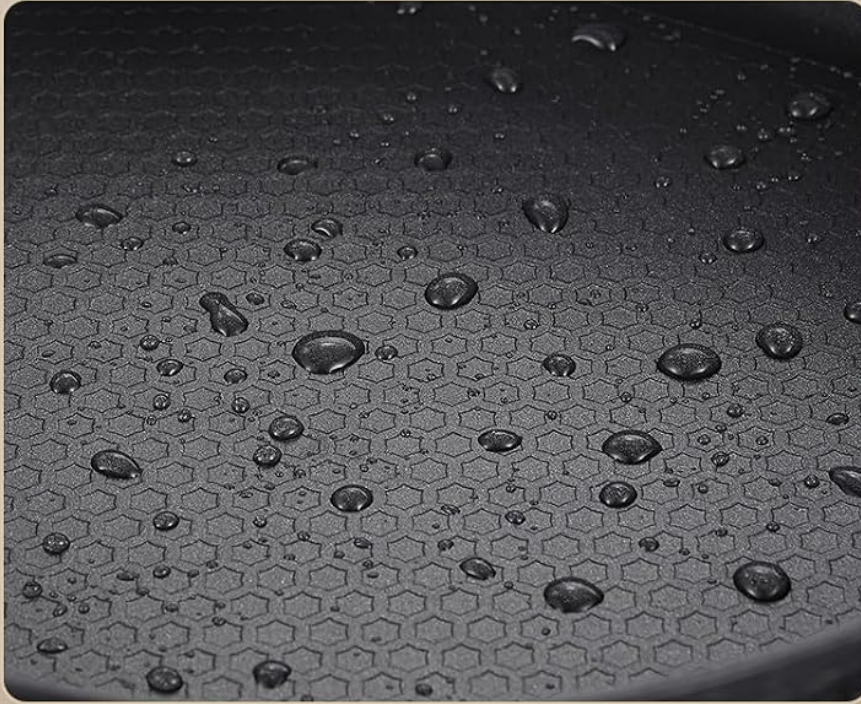

Non-stick coating design:

wear-resistant,
high-temperature
resistant, corrosion
-resistant, non-stick
food, easy to clean.



Threaded pot bottom design:

increases the heating
area for food, greatly
shortens the cooking
time, and is energy-
saving and
environmentally
friendly.



This image details the wear-resistant, high-temperature resistant, and corrosion-resistant non-stick coating, which ensures easy food release and cleaning. The threaded pot bottom design enhances heating efficiency.

Troubleshooting

Problem	Possible Cause	Solution
Skillet does not heat up.	Not plugged in correctly; temperature control probe not fully inserted; power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Verify the control probe is fully inserted into the skillet's receptacle. Check your circuit breaker.
Food sticks to the non-stick surface.	Insufficient oil/fat; cooking at too high a temperature; non-stick coating damage.	Use a small amount of cooking oil or butter. Adjust temperature to a lower setting. Avoid using metal utensils that can scratch the coating. Ensure proper preheating.
Uneven cooking.	Skillet not preheated sufficiently; too much food in the skillet.	Always preheat the skillet to the desired temperature before adding food. Avoid overcrowding the skillet to allow for proper heat circulation.

Specifications

Feature	Specification
Brand	FOHERE
Model	B0CW18J7WH
Material	Aluminum
Color	Black
Product Dimensions	12"D x 16"W x 2.8"H
Wattage	1360 watts
Item Weight	5 pounds
Capacity	5 liters
Special Features	Lightweight, Non-Stick Coating, Rapid Heat Up, Temperature Control
Included Components	Lid, Main Body
Number of Settings	3 (Temperature)

Warranty and Support

FOHERE is committed to providing quality products. While specific warranty details are not provided in this manual, we offer 24-hour online service to assist with any questions or concerns you may have regarding your electric skillet.

For support, please refer to the contact information provided with your purchase or visit the official FOHERE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question