

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [VONZOY](#) /
- › [VONZOY 7-Piece Outdoor Sectional Sofa Instruction Manual](#)

VONZOY B0CW1FPJLK

VONZOY 7-Piece Outdoor Sectional Sofa Instruction Manual

Model: B0CW1FPJLK

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your VONZOY 7-Piece Outdoor Sectional Sofa. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your furniture set.



Image 1.1: The VONZOY 7-Piece Outdoor Sectional Sofa set, showcasing its modular design and comfortable cushions in an outdoor setting.

2. PRODUCT COMPONENTS

Your VONZOY 7-Piece Outdoor Sectional Sofa set includes the following components:

- 4 x Armless Sofa Units
- 2 x Corner Sofa Units
- 1 x Coffee Table with Tempered Glass Top
- 6 x Seat Cushions (4" high-density foam)
- 6 x Backrest Cushions
- 1 x 600D Waterproof Cover (double PVC-coated)
- Assembly Hardware (screws, connectors, adjustable feet)

SET INCLUDES



Armless Sofa x4

Corner Sofa x2

Coffee Table x1

WEIGHT CAPACITY: 400 LBS/SEAT 



Image 2.1: Visual representation of the included components and their approximate dimensions.

3. SETUP INSTRUCTIONS

The furniture set is shipped in 3 separate boxes, which may arrive at different times. Please ensure all boxes have arrived before beginning assembly. Assembly typically takes approximately 60 minutes with two people. Spare screws are included for convenience.

- 1. Unpack Components:** Carefully remove all components from their packaging. Verify that all listed parts in Section 2 are present.
- 2. Assemble Frame Units:** Follow the detailed instructions provided in the separate assembly guide for connecting the PE wicker and steel frame units. Ensure all screws are securely tightened.
- 3. Attach Adjustable Feet:** Screw the adjustable foot screws into the bottom of each furniture unit. These feet help stabilize the furniture on uneven surfaces.
- 4. Place Cushions:** Position the high-density foam seat cushions and plush backrest cushions onto the assembled frames. The cushions feature non-slip granules to keep them secure.
- 5. Assemble Coffee Table:** Construct the coffee table frame and carefully place the tempered glass top into position.

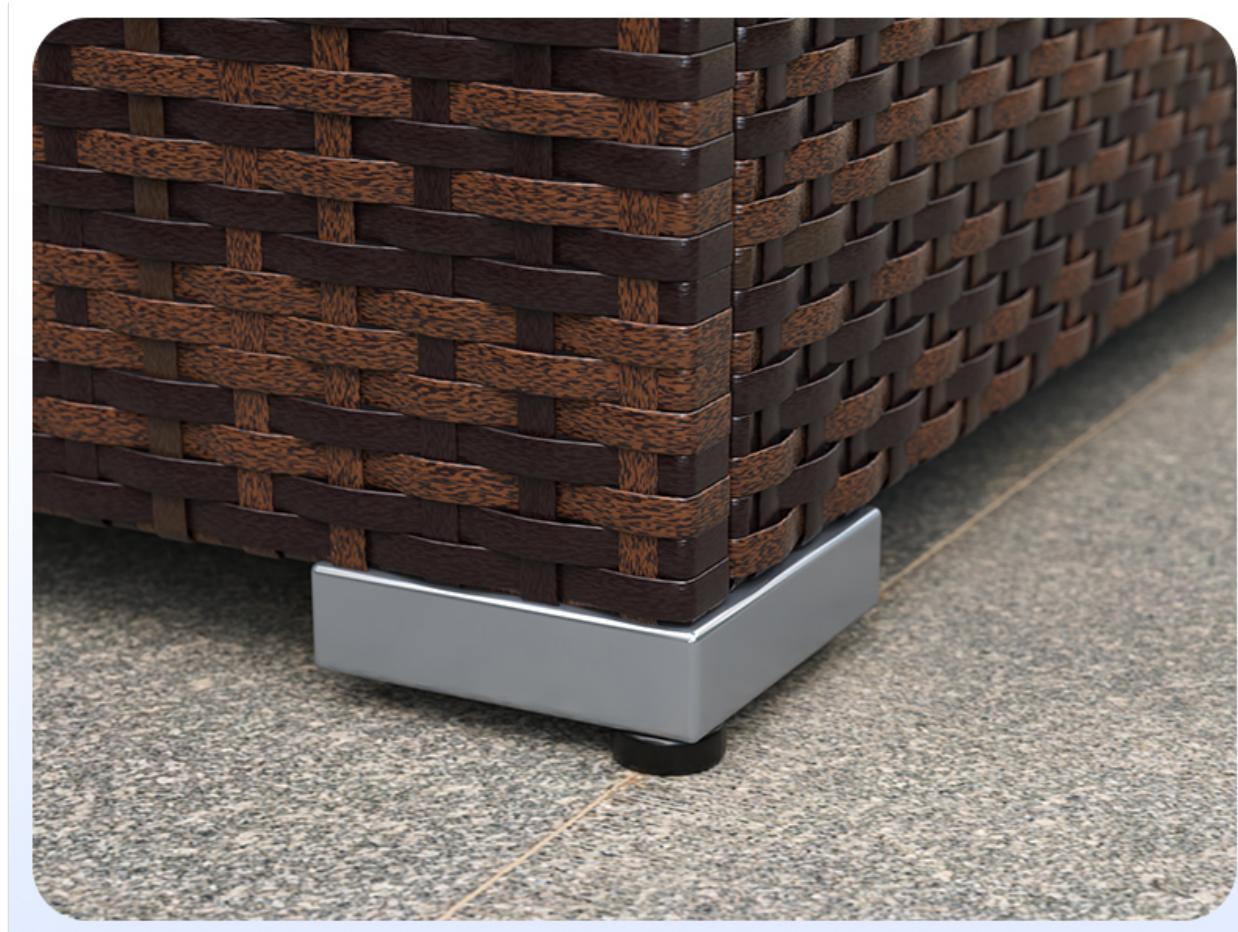


Image 3.1: Adjustable feet provide stability on various outdoor surfaces.

4. OPERATING INSTRUCTIONS (USAGE)

The modular design of your VONZOY patio furniture set allows for flexible arrangement to suit your outdoor space and needs.

- **Modular Arrangement:** Use the included clips/velcro to connect the sofa and corner units. Common configurations include L-shape for conversation, U-shape for larger gatherings, or individual pieces for versatile seating.
- **Comfort:** The 4-inch high-density foam seat cushions and plush backrests are designed for comfort.
- **Stability:** Ensure the adjustable foot screws are properly set to prevent wobbling on uneven ground.

MODULAR SEATING



Image 4.1: Examples of modular configurations for the sectional sofa.

Your browser does not support the video tag.


Video 4.1: An overview of the VONZOY All-Weather Resistance Patio Furniture Set, demonstrating its features and use in an outdoor setting.

5. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your outdoor furniture set.

- **Cushions:** The 220D waterproof fabric cushion covers are removable and machine-washable for easy cleaning. Allow to air dry completely before re-attaching.
- **PE Wicker:** The waterproof PE wicker can be cleaned with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly.
- **Waterproof Cover:** Utilize the included 600D waterproof cover to protect the furniture from sun, rain, and temperature swings when not in use. Ensure the furniture is dry before covering to prevent mildew.
- **Tempered Glass Tabletop:** Wipe clean with a soft, damp cloth. Avoid abrasive cleaners that may scratch the surface.
- **UV Resistance:** The cushions are UV-resistant to help prevent fading, but prolonged exposure to direct sunlight can still affect color over time.

FREE OUTDOOR FURNITURE COVER

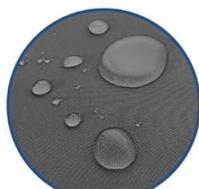

600D Waterproof Oxford Fabric

High Density Material
All-weather Protect
Wear Resistant



Anti-UV Coating
Fade Resistant
Keep Furniture Dryness



Fixed & Adjustable
Drawstring

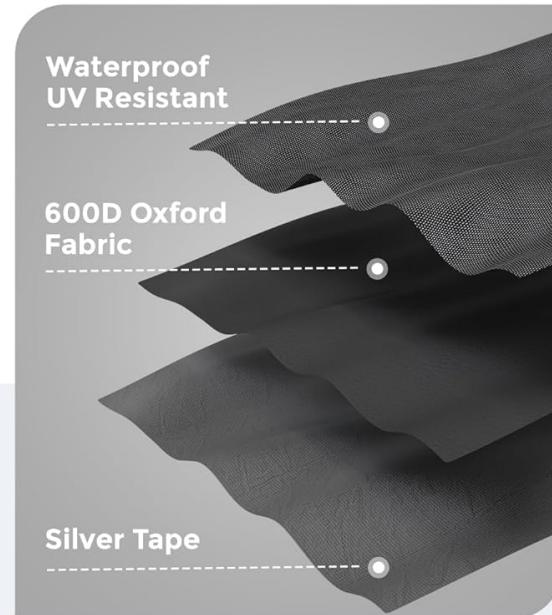


Image 5.1: The included waterproof cover provides essential protection for your furniture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Furniture wobbles	Uneven ground; adjustable feet not properly set.	Adjust the foot screws on the bottom of each unit until stable.
Cushions slide off	Non-slip granules not making proper contact; excessive movement.	Ensure cushions are pressed firmly onto the wicker base. If persistent, consider adding additional non-slip pads.
Water pooling on cover	Cover not taut or properly secured; furniture arrangement creates dips.	Rearrange furniture to create a higher point for water runoff, or place an object under the cover to create a peak. Ensure drawstring is tightened.
Difficulty assembling units	Screws not aligned; parts incorrectly oriented.	Refer to the detailed assembly guide. Ensure parts are correctly oriented before tightening screws. Do not overtighten until all screws are in place.

7. SPECIFICATIONS

- **Product Care Instructions:** Wipe with Damp Cloth
- **Material:** PE Rattan Wicker, Steel Frame, Tempered Glass, 220D Waterproof Fabric (Cushions), 600D Waterproof Oxford Fabric (Cover)
- **Manufacturer:** Vonzoy
- **Item Weight:** Approximately 124 pounds
- **Package Dimensions:** 30 x 30 x 28 inches (approximate, as shipped in multiple boxes)
- **Model Number:** B0CW1FPJLK
- **Color:** Brown-grey
- **Size:** 7PCS
- **Assembly Required:** Yes

8. SAFETY INFORMATION

Always secure the furniture to the ground using the adjustable foot screws to prevent tipping. Be cautious when using the furniture in wet or windy conditions to avoid accidents.

Do not allow children to jump on the furniture, especially the coffee table, as this may cause injury or damage to the product.

9. WARRANTY AND SUPPORT

VONZOY is committed to customer satisfaction. If you have any questions or require assistance with your product, our support team is available 24/7 and guarantees a response within 24 hours.

The product is eligible for 30-day easy returns. For further details on warranty or to contact support, please refer to your purchase documentation or the seller's contact information.

Consider purchasing an extended protection plan for additional coverage, such as the 3-Year Protection Plan or Complete Protect plan, if available at the time of purchase.

