

[Manuals.plus](#) /

› [Aeitto](#) /

› Aeitto Masticating Juicer SJ041 User Manual

Aeitto SJ041

Aeitto Masticating Juicer

MODEL: SJ041 USER MANUAL

1. Introduction

Thank you for choosing the Aeitto Masticating Juicer, Model SJ041. This slow juicer is designed to efficiently extract juice from various fruits and vegetables, preserving nutrients and flavor. Please read this manual thoroughly before operating your juicer to ensure safe and optimal performance. Keep this manual for future reference.

The Aeitto SJ041 features two speed modes for different produce types and a powerful, quiet motor that automatically stops after 20 minutes of continuous operation for safety and longevity. It also includes a reverse function to prevent clogging.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not let cord hang over edge of table or counter.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the juicer is properly assembled before operation.
- Do not put fingers or other objects into the feed chute while the appliance is operating. If food becomes lodged in the opening, use the food pusher provided.
- This appliance is for household use only.

3. Product Overview and Components



This image displays the Aeitto Masticating Juicer model SJ041 in a light green color. The juicer features a prominent control dial on its side with settings for 'Rev', 'O', 'Soft', and 'Hard'. The clear juicing chamber shows the internal auger mechanism, and a measuring cup below collects the extracted green juice, indicating measurements in milliliters and fluid ounces.

Components:

- Food Pusher
- Feed Chute
- Juicing Screw (Auger)
- Filter Screen
- Juicing Chamber
- Pulp Outlet

- Juice Outlet
- Motor Base with Control Dial (Rev, O, Soft, Hard)
- Juice Cup
- Pulp Container
- Cleaning Brush

4. Setup

1. **Unpack:** Carefully remove all parts from the packaging. Keep packaging materials for storage or disposal.
2. **Initial Cleaning:** Before first use, wash all detachable parts (juicing screw, filter screen, juicing chamber, juice cup, pulp container, food pusher) in warm, soapy water. Rinse thoroughly and dry completely. The motor base should only be wiped with a damp cloth.
3. **Assemble:**
 - Place the juicing chamber onto the motor base, aligning the arrows and twisting until it locks into place.
 - Insert the filter screen into the juicing chamber.
 - Insert the juicing screw (auger) into the filter screen, pushing down firmly.
 - Attach the feed chute assembly to the top of the juicing chamber, ensuring it clicks securely.
 - Place the juice cup under the juice outlet and the pulp container under the pulp outlet.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet.

5. Operating Instructions

1. **Prepare Ingredients:** Wash all fruits and vegetables thoroughly. Cut ingredients into pieces that fit easily into the feed chute. Remove hard pits from fruits (e.g., peaches, cherries) and tough seeds. For leafy greens, roll them into tight balls.
2. **Select Speed Mode:** Turn the control dial on the motor base to the desired setting:
 - **SOFT MODE (85-100 RPM):** Ideal for softer fruits and vegetables such as oranges, watermelon, grapes, tomatoes, and leafy greens.
 - **HARD MODE (95-110 RPM):** Suitable for harder produce like apples, pears, carrots, celery, and ginger.
3. **Start Juicing:** Slowly feed the prepared ingredients into the feed chute. Use the food pusher to gently guide the ingredients down. Do not force ingredients into the chute, as this can damage the motor or clog the juicer.
4. **Reverse Function:** If ingredients become jammed or the juicer stops, turn the control dial to the 'Rev' (Reverse) position for a few seconds to clear the blockage. Then, switch back to 'O' (Off) before selecting 'Soft' or 'Hard' mode to resume juicing.
5. **Continuous Operation:** The juicer is designed to operate for approximately 20 minutes continuously. If you need to juice for longer, allow the motor to rest for 10-15 minutes after each 20-minute cycle to prevent overheating.
6. **Finish Juicing:** Once you have finished juicing, turn the control dial to the 'O' (Off) position and unplug the appliance from the power outlet.

6. Cleaning and Maintenance

Regular cleaning ensures the longevity and hygiene of your juicer.

1. **Disassemble:** Unplug the juicer. Disassemble all removable parts in reverse order of assembly.
2. **Rinse Immediately:** Rinse all detachable parts under running water to remove most of the pulp and juice residue. This prevents drying and makes cleaning easier.
3. **Wash:** Use the provided cleaning brush to scrub the filter screen thoroughly, as pulp can easily get trapped in its fine mesh. Wash all other detachable parts with warm, soapy water.
4. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or place it under running water.
5. **Dry:** Dry all parts completely before reassembling or storing to prevent mold or mildew.
6. **Storage:** Store the cleaned and dried juicer in a cool, dry place, away from direct sunlight.

7. Troubleshooting

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; not assembled correctly; power outage.	Check power cord connection; ensure all parts are locked in place; check power supply.
Juicer stops during operation.	Overloaded with ingredients; motor overheated; ingredients jammed.	Reduce amount of ingredients; allow motor to cool down for 10-15 minutes; use 'Rev' function to clear jam.
Low juice yield or excessive pulp in juice.	Incorrect speed mode; filter screen clogged; ingredients not fresh.	Use appropriate speed mode ('Soft' for soft, 'Hard' for hard); clean filter screen thoroughly; use fresh, firm produce.
Loud noise or vibration.	Improper assembly; hard objects in juicer.	Reassemble parts correctly; ensure no pits or hard seeds are fed into the juicer.

8. Specifications

- **Brand:** Aeito
- **Model Name:** SJ041
- **Color:** Green
- **Product Dimensions:** 13"D x 12"W x 8"H
- **Item Weight:** 9.44 pounds
- **Power Source:** Corded Electric
- **Blade Material:** Stainless Steel
- **Controller Type:** Button (Dial)
- **Number of Speeds:** 2 (Soft, Hard)
- **Special Feature:** Quiet Motor, Reverse Function, Automatic Stop (after 20 mins)
- **Recommended Uses:** Carrot, Apple, Pear, Watermelon, Orange, and other fruits/vegetables.

9. Warranty and Support

This Aeitto Masticating Juicer is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty period and coverage details. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance, or warranty claims, please contact Aeitto customer service through the retailer where you purchased the product or visit the official Aeitto website for contact information.