

[Manuals.plus](#) /

› [Gudsunal](#) /

› Gudsunal 36 Inch Electric Cooktop 5 Burners User Manual

Gudsunal UC9032B9

Gudsunal 36 Inch Electric Cooktop User Manual

Model: UC9032B9

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your new electric cooktop to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the cooktop is properly grounded and connected to a dedicated 240V, 9000W circuit by a qualified electrician. Do not use extension cords.
- **Hot Surface Warning:** The cooktop surface remains hot after use. The 'H' indicator will illuminate until the surface has cooled to a safe temperature. Avoid touching hot surfaces.
- **Child Lock:** Utilize the child lock feature to prevent accidental operation by children.
- **Proper Ventilation:** Ensure adequate ventilation around the cooktop during operation.
- **Cookware:** Use flat-bottomed cookware appropriate for electric cooktops to ensure even heating and stability.
- **Cleaning:** Always allow the cooktop to cool completely before cleaning. Use only recommended cleaning agents.
- **Certification:** This cooktop is ETL and FCC certified, meeting stringent safety standards.

WHAT'S INCLUDED


Your Gudsunal Electric Cooktop package includes the following components:

- Electric Cooktop Unit
- User Manual
- Quick Guide
- Installation Kits (brackets and screws)
- Safety Tips Sheet
- Seal Tape (2 rolls)


What's In The Box



Cooktop

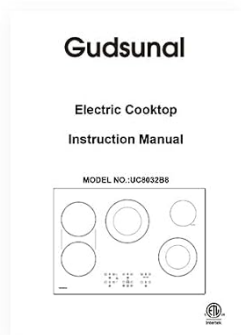

User Manual

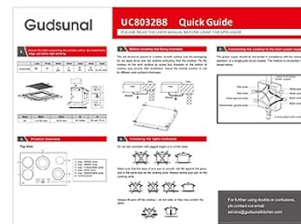 

Quick Guide



Safety Tips



Seal Tape × 2



Installation Kits



Cut-out Size Board

This image displays the various components included in the product packaging, ensuring you have everything needed for installation and operation.

SETUP AND INSTALLATION

The Gudsunal Electric Cooktop is designed for easy drop-in installation. Professional installation is recommended for electrical connections.

Pre-Installation Checklist


- **Power Supply:** Ensure a dedicated 240 Volts, 9000 Watts electrical supply is available.
- **Countertop Cutout:** Verify your countertop cutout dimensions are 33.86 inches x 19.29 inches (860mm x 490mm).
- **Ventilation:** Confirm adequate space for ventilation beneath the cooktop.

Installation Steps

1. Apply the provided seal tape around the perimeter of the cooktop's underside to create a watertight seal.
2. Carefully lower the cooktop into the prepared countertop cutout.
3. Secure the cooktop from underneath using the flexible brackets and screws provided in the installation kit. Adjust the brackets to fit your cabinet's position.
4. Connect the cooktop to the main power source. Note: The 'Keep Warm' function requires a 110V supply. Refer to the wiring diagram in the quick guide for proper connection.

Easy Installation

Designed with standard size allowing you to effortlessly make installation or replacement

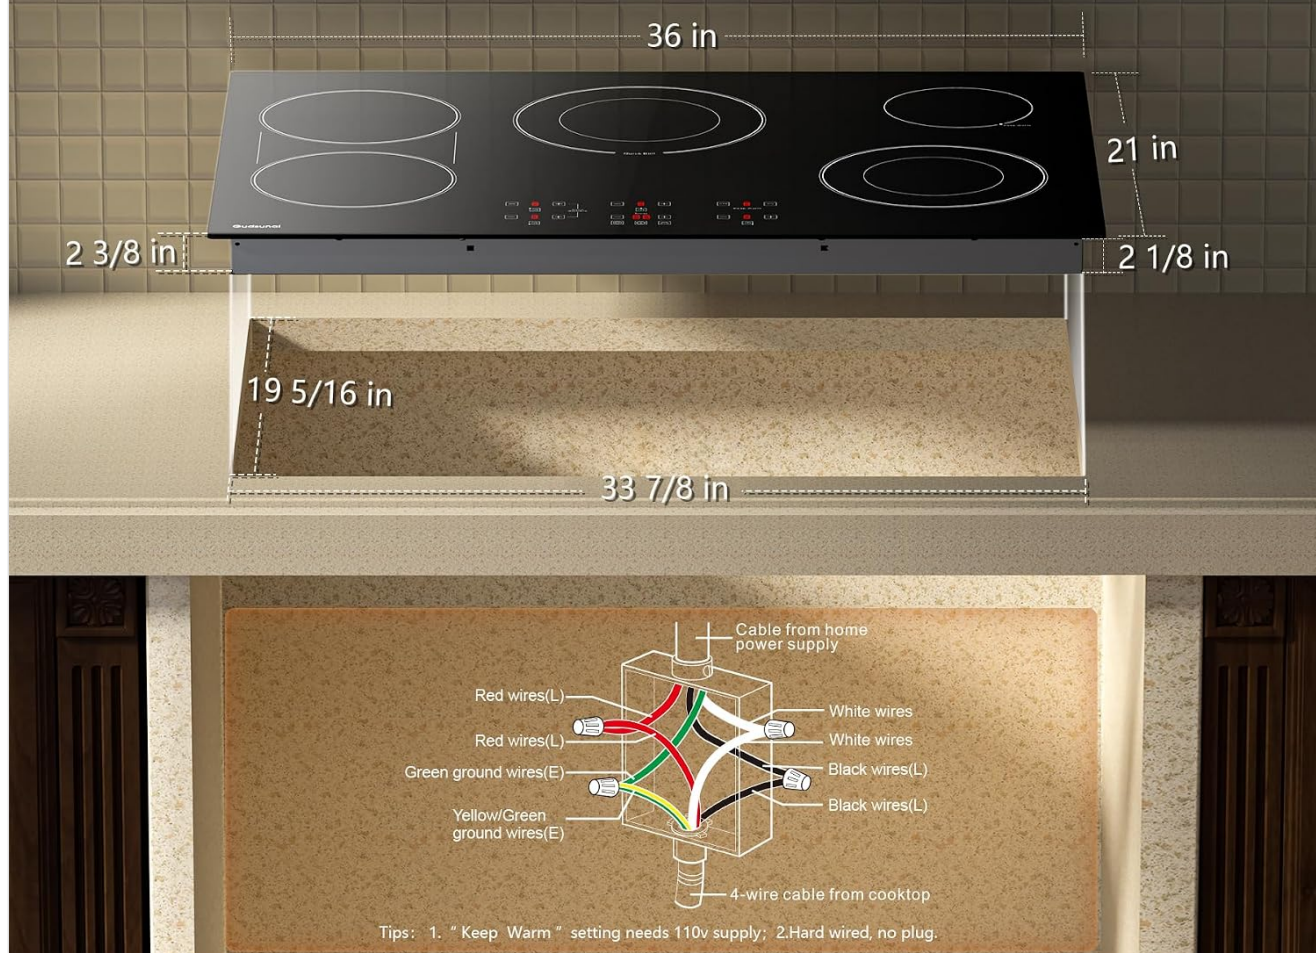

This image illustrates the precise dimensions for the cooktop and the required countertop cutout, along with a detailed electrical wiring diagram for proper installation.

Installation Video Guide

This video provides a comprehensive step-by-step visual guide for installing your Gudsunal Electric Cooktop, covering securing the unit and making electrical connections.

OPERATING YOUR COOKTOP

Familiarize yourself with the touch controls and various cooking functions of your new cooktop.

Power On/Off

To turn on the cooktop, press the main power button. To turn off, press it again. Individual burners can be activated and deactivated using their respective controls.

Heating Levels (1-9)

Each burner offers 9 heating levels, allowing for precise temperature adjustment from a gentle simmer to a rapid boil. Use the '+' and '-' buttons adjacent to each burner's display to set the desired heat level.

Precise Power Control

Advanced touch panel control allows more precise adjustment from 1-9 heating level



This image highlights the advanced touch control panel, demonstrating the intuitive adjustment of heating levels from 1 to 9 for precise cooking.

Sync Burners

The cooktop features 3600W sync burners, allowing you to combine two burners into one large cooking zone. This is ideal for accommodating oversized cookware like griddles or long pans.

This video demonstrates how to activate and utilize the Sync Burner feature, effectively combining two burners to create a larger cooking surface for specialized cookware.

Synchronized Burner

Connect and control two cooktop burners as one to create a bigger cooking surface for pans such as griddles.



This image visually demonstrates the synchronized burner feature in use, with a griddle pan placed over two connected burners for extended cooking area.

Dual-Ring Burners

Two of the cooktop's burners are dual-ring, offering up to 3000 watts of power. This design allows them to adapt to various pot and pan sizes, providing efficient heating for everything from gentle simmering to rapid boiling.

This video showcases the efficiency of the dual-ring burners, including a boil water test to highlight their rapid heating capabilities for various cooking needs.

Keep Warm Function

The cooktop includes a dedicated 200-watt 'Keep Warm' burner (located in the top right corner) designed to maintain food at an ideal serving temperature. This burner operates at a single setting and does not glow red like the main heating elements.

This video demonstrates the 'Keep Warm' function, illustrating how to activate it and its effectiveness in maintaining food temperature without further cooking.

Two Dual-Ring and Keep Warm

- Two dual-ring burners that allow for different pan sizes to be used for quick boiling
- "Keep Warm" setting features a range of heat to the power to boil water




This image shows the cooktop with a pot on the designated 'Keep Warm' burner, highlighting its function to keep food at an optimal serving temperature.

Timer Function

The integrated timer function allows you to set cooking durations from 1 to 99 minutes. This feature helps ensure your dishes are cooked precisely and evenly, preventing over or undercooking.

Easy Installation

Designed with standard size allowing you to effortlessly make installation or replacement

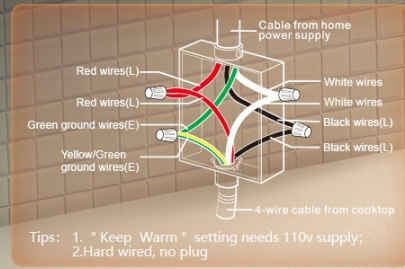

This image visually represents the timer function on the cooktop's control panel, indicating its role in simplifying and securing your cooking process.

Control Lock (Child Protection)

The control lock feature is designed to prevent accidental operation, especially by children. A quick press of the lock button activates the safety feature, and a longer press is required to unlock it, ensuring peace of mind.

Timer Function

Cooker Reminder & Precision Shutdown,
Simplifies and Secures Your Cooking



This image displays the child lock icon on the cooktop's control panel, indicating that the touch buttons are locked to prevent unintended use.

Auto Shutdown & Hot Surface Indicator

For enhanced safety, the cooktop is equipped with an auto-shutdown feature that activates after a preset maximum heating time, which varies depending on the selected power level. Additionally, a prominent 'H' indicator remains illuminated on the display until the glass surface has cooled down sufficiently to prevent accidental burns.

Auto Shutdown & Hot Surface Indicator

- The cooktop preset a certain operation time on each heating level
- After cooking, an "H" indicator appears on the display until the glass panel cooled



This image illustrates the 'H' hot surface indicator and a graph detailing the default working times for each power level before the cooktop automatically shuts down for safety.

CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your Gudsunal Electric Cooktop and keep it looking new.

Cleaning the Glass Stove Top

The flat-panel ceramic glass surface is designed for easy cleaning.

- Always ensure the cooktop has cooled completely before attempting to clean it.
- Wipe off any cooking grease or spills immediately with a damp cloth or sponge.
- For stubborn or burnt-on stains, use a specialized ceramic cooktop cleaner as per the product's instructions.
- Avoid using abrasive cleaners, scouring pads, steel wool, or harsh chemicals, as these can scratch or damage the glass surface.
- Dry the surface thoroughly after cleaning to prevent water spots.

TROUBLESHOOTING

If you encounter any issues with your Gudsunal Electric Cooktop, refer to the table below for common problems and their solutions. If the problem persists, please contact customer support.

Problem	Possible Cause	Solution
Cooktop does not power on	No power supply; circuit breaker tripped; improper wiring	Check power connection; reset circuit breaker; verify wiring (consult a qualified electrician if unsure)
Burner not heating	Incorrect heat setting; control lock activated; cookware not suitable	Adjust heat level; deactivate child lock; ensure cookware is flat-bottomed and appropriate for electric cooktops
'H' indicator remains on	Surface is still hot	This is normal. Wait for the surface to cool down.
Cooktop shuts off unexpectedly	Auto-shutdown feature activated; overheating	This is a safety feature. Allow the cooktop to cool. Ensure proper ventilation.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Gudsunal
Model Number	UC9032B9
Dimensions (L x W x H)	36 x 21 x 2.28 inches
Installation Type	Drop-In
Heating Elements	5
Burner Type	Radiant
Voltage	240 Volts
Wattage	9000 watts
Material	Ceramic
Color	Black
Special Features	Safety Lock, Digital Display, Adjustable Temperature, Hot Surface Indicator, Automatic Shut-Off
Certifications	ETL, FCC

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

For detailed information regarding the warranty coverage for your Gudsunal Electric Cooktop, please refer to the warranty card included in your product packaging. You may also find specific terms and conditions on the official Gudsunal Kitchen store page.

Customer Support

Should you require any further assistance, have questions about your cooktop, or need to report an issue, please contact Gudsunal Kitchen customer support. They are available to help with product inquiries, technical support, and warranty claims.

- Online Store:** Visit the official Gudsunal Kitchen store on Amazon for product information and support resources: [Gudsunal Kitchen Store](#)

- **Contact Information:** Refer to the contact details provided in your physical user manual or quick guide for direct support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CW1R24G5>

More documents and user manuals: <https://manuals.plus/>