

MaxxPet 88191

MaxxPet Wooden Dog Crate - Model 88191 Instruction Manual

For Indoor Use

INTRODUCTION

Welcome to your MaxxPet Wooden Dog Crate. This manual provides comprehensive instructions for the assembly, safe use, and proper maintenance of your new dog crate. Please read all instructions carefully before beginning assembly or using the product to ensure the safety and comfort of your pet.

SAFETY INFORMATION

Adhering to these safety guidelines is crucial for the well-being of your pet and household.

- Ensure all parts are securely fastened and checked regularly for tightness before and during use.
- Do not allow children to play inside or climb on the crate. This product is not a toy.
- Place the crate on a flat, stable, and level surface to prevent tipping.
- Regularly inspect the crate for any signs of damage, wear, or loose components. Discontinue use if damage is found.
- This product is designed exclusively for indoor use. Avoid exposure to outdoor elements.
- Never leave your pet unattended for extended periods, especially when first introducing them to the crate.

PACKAGE CONTENTS

Before proceeding with assembly, please verify that all the following components are present and undamaged.

- Wooden Panels (Top, Bottom, Sides, Back)
- Front Doors with Metal Grates (2 units)
- Drawer Components (Front, Back, Sides, Bottom)
- Hardware Pack (Screws, Dowels, Hinges, Door Latches, Drawer Handles)
- Assembly Instructions (This manual)

SETUP AND ASSEMBLY

Follow these step-by-step instructions to assemble your MaxxPet Wooden Dog Crate. For optimal safety and ease, assembly by

two adults is recommended.

1. **Unpack and Inspect:** Carefully unpack all components and lay them out on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches or damage. Verify all parts are present according to the package contents list.
2. **Assemble Base Frame:** Attach the side panels to the bottom panel using the provided screws and wooden dowels. Ensure the connections are snug and aligned.
3. **Install Back Panel:** Secure the back panel to the assembled side and bottom panels using the appropriate hardware.
4. **Attach Top Panel:** Place the top panel onto the assembled structure and fasten it securely with screws. Double-check all connections for stability.
5. **Mount Doors:** Attach the hinges to the front doors and then mount the doors to the main frame of the crate. Ensure the doors swing freely and align correctly.
6. **Install Latches and Handles:** Secure the door latches to keep the doors closed and attach the drawer handles to the drawer fronts.
7. **Assemble Drawers:** Assemble the drawer components and slide the completed drawers into their designated slots within the crate structure.

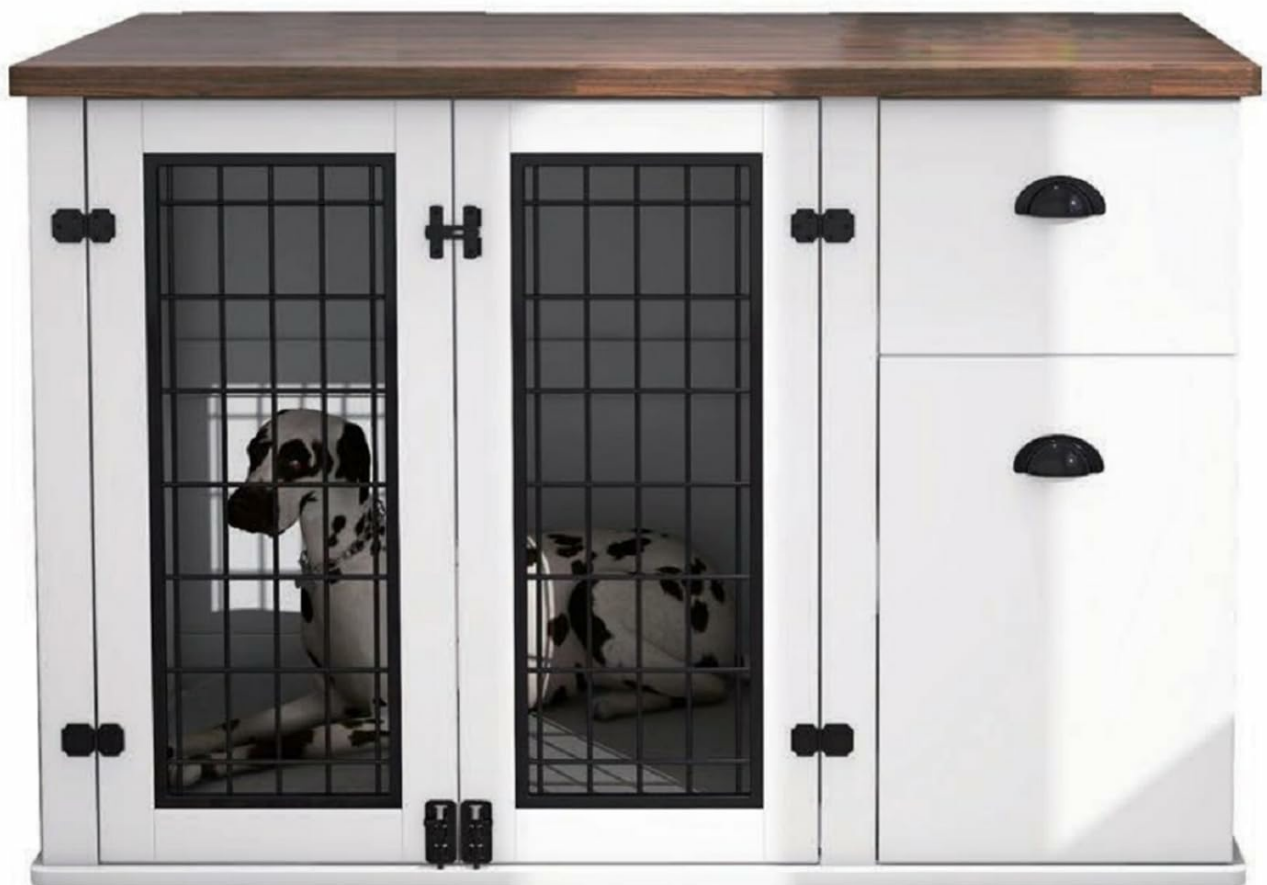


Image showing the assembled MaxxPet Wooden Dog Crate in a living room setting. The crate features a white wooden frame with a walnut-colored top, two grated doors for the dog compartment, and two white drawers on the right side. Two dogs are visible inside the crate, demonstrating its use as an indoor pet enclosure and furniture piece.

OPERATING INSTRUCTIONS

Using your MaxxPet Wooden Dog Crate is straightforward.

- **Opening the Crate:** To open the dog compartment, unlatch the door(s) by sliding the bolt or lifting the mechanism, then gently swing the door(s) open.
- **Placing Your Pet:** Guide your dog gently into the crate. You may use positive reinforcement, such as treats or a favorite toy, to encourage them to enter.
- **Closing the Crate:** Close the door(s) and ensure the latch(es) are securely fastened to prevent your pet from escaping.
- **Using Drawers:** The integrated drawers can be pulled open to store pet supplies, toys, leashes, or other household items. Push them closed when not in use.

MAINTENANCE

Proper care will extend the life and appearance of your dog crate.

- **Cleaning Wood Surfaces:** Wipe wooden surfaces with a soft, damp cloth. For stubborn marks, use a mild wood cleaner. Avoid abrasive cleaners or harsh chemicals that can damage the finish.
- **Cleaning Grates:** The metal grates can be wiped clean with a damp cloth. For deeper cleaning, a mild soap solution can be used, ensuring to rinse and dry thoroughly to prevent rust.
- **Spills and Accidents:** Clean up any spills or pet accidents immediately using a pet-safe cleaner to prevent odors and damage to the wood.
- **Hardware Check:** Periodically check all screws, hinges, and latches for tightness. Re-tighten any loose hardware to maintain structural integrity.
- **Environmental Care:** Do not expose the crate to excessive moisture, humidity, or direct sunlight for prolonged periods, as this can cause warping, fading, or damage to the wood.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Problem: Doors do not close or latch properly.

Solution: Check the hinges for proper alignment and ensure no obstructions are preventing the doors from closing fully. Re-tighten hinge screws if they appear loose. Verify the latch mechanism is clear of debris.

Problem: The crate feels wobbly or unstable.

Solution: Ensure that all assembly screws are fully tightened. Verify that the crate is placed on a completely level and stable surface. Adjust the placement if necessary.

Problem: My pet resists entering the crate.

Solution: Introduce the crate gradually. Place familiar bedding, toys, or treats inside to make it inviting. Use positive reinforcement and never force your pet into the crate. Crate training should be a positive experience.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	MaxxPet
Model Number	88191
Material	Wood
Color	White - Walnut
Overall Dimensions (L x W x H)	111 x 60 x 75 cm
Specific Use	Indoor
Included Components	Lockable Door
Number of Levels	1
Recommended Breed Size	EU-size 4 (Large)
Target Species	Dog
Manufacturer	MaxxTools bv

SUPPORT

For further assistance, product inquiries, or to report any issues, please contact MaxxPet customer support. Refer to your purchase documentation for specific contact details or visit the official MaxxPet website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question