

Ipega KP-CA329

Ipega Wireless Doorbell KP-CA329 Instruction Manual

Model: KP-CA329

INTRODUCTION

Thank you for choosing the Ipega Wireless Doorbell KP-CA329. This manual provides detailed instructions for the installation, operation, and maintenance of your new wireless doorbell system. Please read this manual thoroughly before use to ensure proper function and longevity of the product.

SAFETY INFORMATION

- Do not expose the receiver to water or high humidity. The receiver is for indoor use only.
- Ensure the transmitter is securely mounted to prevent it from falling.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for repairs.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Wireless Doorbell Transmitter
- 1 x Plug-in Doorbell Receiver
- 1 x 12V A23 Battery (for transmitter)
- Mounting Hardware (screws, adhesive tape)

ALCANCE DE 150M



This image displays the main components of the Ipega Wireless Doorbell system: the compact transmitter unit, the plug-in receiver unit, and the included 12V battery for the transmitter. The system offers a wireless range of up to 150 meters.

PRODUCT FEATURES

- **Wireless Operation:** No wiring required for installation.
- **Extended Range:** Up to 150 meters (492 feet) wireless operating range in open areas.
- **Waterproof Transmitter:** Designed to withstand various weather conditions.
- **Multiple Chimes:** 38 selectable melodies for personalized alerts.
- **Adjustable Volume:** Multiple volume levels to suit your preference.

SETUP

1. Install Battery in Transmitter

1. Gently open the back cover of the transmitter unit.
2. Insert the provided 12V A23 battery, ensuring correct polarity (+/-).
3. Close the back cover securely.

À PROVA D'ÁGUA



The doorbell transmitter is designed to be waterproof, ensuring reliable operation in various weather conditions. It features a prominent bell button for visitors.

2. Mount the Transmitter

Choose a suitable location for the transmitter, such as near your front door. Ensure the surface is clean and dry.

- **Using Adhesive Tape:** Peel off one side of the double-sided adhesive tape and attach it to the back of the transmitter. Peel off the other side and firmly press the transmitter onto the desired surface for at least 30 seconds.
- **Using Screws:** Open the transmitter cover. Mark the positions for the screw holes on the wall. Drill pilot holes if necessary, then secure the transmitter base to the wall using the provided screws. Reattach the cover.

3. Plug in the Receiver

Plug the receiver unit into a standard electrical outlet inside your home. Choose a location where the chime can be easily heard throughout your desired area.



The receiver unit plugs directly into a standard electrical outlet, providing power and allowing it to be placed conveniently within your home.



This image shows the back of the receiver unit, highlighting the two-prong electrical plug for power and the speaker grille for sound output.

4. Select Chime and Adjust Volume

On the side of the receiver unit, you will find buttons for chime selection and volume adjustment.



The side of the receiver unit features buttons for adjusting the volume and cycling through the 38 available chime melodies.

- **Chime Selection:** Press the melody button (often indicated by a music note or up/down arrows) to cycle through the 38 available chimes. The receiver will play each chime as you select it.
- **Volume Adjustment:** Press the volume button (often indicated by a speaker icon) to adjust the volume level. There are typically several levels, including mute.

OPERATING

Once set up, operating the doorbell is straightforward:

- When a visitor presses the button on the transmitter unit, it sends a wireless signal to the receiver.
- The receiver will then play the selected chime melody at the chosen volume level.

38 TIPOS DE TOQUES



A hand is shown pressing the doorbell transmitter button. The receiver unit offers 38 different chime melodies to choose from, allowing for personalization.

MAINTENANCE

- **Cleaning:** Wipe both the transmitter and receiver with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the transmitter's range decreases or it stops working, it is likely time to replace the 12V A23 battery. Follow the steps in the 'Install Battery in Transmitter' section.
- **Environmental Conditions:** While the transmitter is waterproof, prolonged exposure to extreme weather conditions (e.g., heavy storms, direct sunlight for extended periods) may affect its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Doorbell does not chime.	Transmitter battery is dead or incorrectly installed. Receiver is unplugged or not powered. Distance too far or interference.	Replace transmitter battery, ensuring correct polarity. Plug receiver into a working outlet. Move receiver closer to transmitter or away from metal objects/electronics.
Short operating range.	Low transmitter battery. Obstructions (thick walls, metal structures). Interference from other wireless devices.	Replace transmitter battery. Relocate receiver or transmitter to minimize obstructions. Move other wireless devices away from the doorbell system.
Chime volume is too low or too high.	Volume setting is incorrect.	Press the volume button on the receiver to adjust to the desired level.
Chime melody is not desired.	Incorrect melody selected.	Press the melody selection button on the receiver to cycle through and choose a different chime.

SPECIFICATIONS

Feature	Detail
Brand	Ipega
Model	KP-CA329
Manufacturer	Ipega
Wireless Range	Up to 150 meters (open area)
Chime Options	38 melodies
Transmitter Power	1 x 12V A23 Battery
Receiver Power	AC Plug-in
Product Dimensions (Transmitter)	Approx. 7.5 cm (Height) x 24.2 cm (Length) x 25.2 cm (Width)
Product Weight	140 g
ASIN	B0CW22YHBV
EAN	7908552003216

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact the retailer. For technical support or further assistance,

please contact Ipega customer service through their official website or the contact information provided with your product.

© 2026 Ipega. All rights reserved.