

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Digital Chronograph Watch Model 40/8253 User Manual

Armitron 40-8253

Armitron Sport Digital Chronograph Watch

Model: 40/8253

User Manual

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Armitron Sport Digital Chronograph Watch, Model 40/8253. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW

The Armitron Sport Digital Chronograph Watch is designed for active individuals, featuring a durable resin case and strap, a clear LCD display, and multiple functions including a chronograph, alarm, and backlight. Its water resistance makes it suitable for various activities.





Figure 1: Front view of the Armitron Sport Digital Chronograph Watch, Model 40/8253, showcasing its metallic green resin case and digital display.





Figure 2: Side view of the watch, highlighting the profile of the metallic green resin case and control buttons.





Figure 3: Back view of the watch, showing the stainless steel case back and the metallic green resin strap with buckle closure.

KEY FEATURES

- Metallic green resin case and top ring for durability and style.
- Clear LCD display showing time, seconds, day, and date.
- Multi-functional capabilities: chronograph, lap time, alarm, dual time, military time, and backlight.
- Comfortable metallic green resin strap with a secure buckle closure.
- Water resistant up to 330 feet (100 meters), suitable for swimming and showering.

SETUP: SETTING TIME AND DATE

To set the time and date on your Armitron Sport watch, follow these steps:

1. **Enter Setting Mode:** Press the **MODE** button repeatedly until the time display begins to flash, indicating you are in setting mode.
2. **Adjust Time:** Use the **RESET** button to select the hour, minute, or second digit you wish to adjust. Press the **ST/STP** button to increase the selected value. Hold **ST/STP** for faster adjustment.
3. **Set 12/24 Hour Format:** While in time setting mode, pressing the **EL** button may toggle between 12-hour (AM/PM) and 24-hour (military time) formats.
4. **Adjust Date:** After setting the time, press **MODE** again to move to date settings. Use **RESET** to select the year, month, or day, and **ST/STP** to adjust the values.
5. **Exit Setting Mode:** Once all settings are correct, press the **MODE** button to return to the normal time display.

OPERATING MODES

Your watch features several operating modes accessible via the **MODE** button.

Chronograph (Stopwatch)

The chronograph measures elapsed time. To use it:

1. Press **MODE** until "CHRONO" or "STW" appears on the display.
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to stop it.
4. Press **RESET** to reset the stopwatch to zero.
5. For lap time, press **RESET** while the stopwatch is running to display the lap time. The stopwatch continues to run in the background. Press **RESET** again to return to the running stopwatch display.

Alarm

To set and activate the alarm:

1. Press **MODE** until "ALARM" or "AL" appears.
2. Press **RESET** to select the hour or minute digit.
3. Press **ST/STP** to adjust the selected value.
4. Press **MODE** to confirm and exit alarm setting.
5. To turn the alarm ON/OFF, while in alarm mode, press **ST/STP** to toggle the alarm icon.

Dual Time

The dual time function allows you to track a second time zone.

1. Press **MODE** until "DT" or "DUAL TIME" appears.

- 2. Press **RESET** to select the hour or minute digit.
- 3. Press **ST/STP** to adjust the selected value.
- 4. Press **MODE** to confirm and exit dual time setting.

Backlight

To illuminate the display in low-light conditions:

- Press the **EL** button (Electro-Luminescent) to activate the backlight. The backlight will remain on for a few seconds.

MAINTENANCE

Water Resistance

Your Armitron Sport watch is water resistant to 100 meters (330 feet). This means it is suitable for recreational swimming and showering. However, it is important to:

- **Avoid pressing buttons underwater** as this can compromise the water seal.
- **Avoid exposure to hot water or steam** (e.g., hot showers, saunas) as temperature changes can affect the watch's seals.
- Rinse the watch with fresh water after exposure to salt water or chlorine.

Battery Replacement

The watch uses one product-specific battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the resin case and strap.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Buttons are unresponsive.	Watch may be wet or debris is lodged.	Ensure watch is dry. Clean around buttons. If problem persists, seek professional service.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the "Setup: Setting Time and Date" section to reset the time.
Water inside the display.	Water resistance compromised.	Stop using the watch immediately and seek professional repair to prevent further damage.

SPECIFICATIONS

- **Model Number:** 40-8253
- **Case Material:** Resin
- **Strap Material:** Resin
- **Display Type:** Digital LCD
- **Water Resistance:** 100 meters (330 feet)

- **Functions:** Time, Seconds, Day, Date, Chronograph, Lap Time, Alarm, Dual Time, Military Time, Backlight
- **Battery:** 1 Product Specific battery (included)
- **Package Dimensions:** 4.25 x 3.5 x 2.8 inches
- **Item Weight:** 4.13 ounces

WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the official Armitron website or contact Armitron customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

Armitron Official Website: www.armitron.com

© 2024 Armitron. All rights reserved.

This manual is for informational purposes only. Armitron reserves the right to make changes to product specifications at any time without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CW26G6QT>

More documents and user manuals: <https://manuals.plus/>