

[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Digital Chronograph Watch 40/8253 User Manual

Armitron 40/8253

Armitron Sport Digital Chronograph Watch 40/8253 User Manual

Model: 40/8253

INTRODUCTION

Welcome to your Armitron Sport Digital Chronograph Watch. This manual provides detailed instructions for operating and maintaining your watch. Please read it carefully to ensure proper use and to fully utilize all features.

PRODUCT OVERVIEW

The Armitron Sport Digital Chronograph Watch 40/8253 features a clear LCD display and multiple functions designed for active lifestyles. Familiarize yourself with the watch's components and button layout.

Watch Components

- **LCD Display:** Shows time, seconds, day, and date.
- **Metallic Taupe Resin Case:** Durable housing for the watch mechanism.
- **Metallic Taupe Resin Strap:** Comfortable and secure wristband with buckle closure.
- **Buttons:** Four control buttons for various functions.

Button Functions

Refer to the image below for button locations:



Image 1: Front view of the Armitron Sport Digital Chronograph Watch 40/8253. This image displays the watch face, showing the digital time, day, and date, along with the four control buttons labeled MODE, RESET, ST/STP, and EL.

- **MODE Button (Bottom Left):** Cycles through different modes (Time, Chronograph, Alarm, Dual Time).
- **RESET Button (Top Left):** Used for resetting values or adjusting settings in various modes.
- **ST/STP Button (Top Right):** Initiates or pauses functions like the chronograph.
- **EL Button (Bottom Right):** Activates the backlight for improved visibility in low light conditions.



Image 2: Side view of the Armitron Sport Digital Chronograph Watch 40/8253. This image highlights the profile of the watch case and the two buttons on the right side (ST/STP and EL).



Image 3: Back view of the Armitron Sport Digital Chronograph Watch 40/8253. This image shows the stainless steel case back and the resin strap with its buckle closure.

SETUP: SETTING TIME AND DATE

To set the current time and date on your watch:

1. From the normal time display mode, press the **MODE** button repeatedly until the time setting mode is activated. This is usually indicated by flashing digits (e.g., seconds or hours).
2. Use the **RESET** button to select the digit or setting you wish to adjust (e.g., seconds, hours, minutes, year, month, day).
3. Press the **ST/STP** button to increase the selected value. Hold the button to advance rapidly.
4. Repeat steps 2 and 3 until all desired time and date settings are correct.
5. Once all settings are complete, press the **MODE** button to exit the setting mode and return to the normal time display.

Note: Specific button sequences may vary slightly. If you encounter difficulty, refer to the general instructions provided or contact support.

OPERATING FUNCTIONS

Chronograph (Stopwatch)

The chronograph function allows you to measure elapsed time.

1. Press the **MODE** button until the chronograph display appears (usually indicated by "CHRO" or similar).
2. Press the **ST/STP** button to start the chronograph.
3. Press **ST/STP** again to pause the chronograph. Pressing it once more will resume timing.
4. To record a lap time while the chronograph is running, press the **RESET** button. The lap time will display briefly, and the chronograph will continue timing in the background.
5. To stop the chronograph completely, ensure it is paused, then press the **RESET** button to clear the display to zero.

Alarm

Set an alarm to sound at a specific time.

1. Press the **MODE** button until the alarm setting mode is displayed (e.g., "ALARM" or "AL").
2. Use the **RESET** button to select the hour or minute digits you wish to adjust.
3. Press the **ST/STP** button to change the selected value.
4. Once the desired alarm time is set, press the **MODE** button to confirm and exit.
5. To activate or deactivate the alarm, typically press the **ST/STP** button while in the alarm display mode. An alarm icon will appear or disappear.

Dual Time

The dual time function allows you to track a second time zone.

1. Press the **MODE** button until the dual time mode is displayed (e.g., "DT" or "T2").
2. In dual time mode, press the **RESET** button to enter setting mode (digits will flash).
3. Use the **RESET** button to select hours or minutes.
4. Press the **ST/STP** button to adjust the selected value.
5. Press the **MODE** button to exit dual time setting.

Military Time (24-Hour Format)

Your watch supports both 12-hour (AM/PM) and 24-hour (military) time formats.

- To switch between 12-hour and 24-hour formats, typically press the **ST/STP** button while in the normal time display mode, or during the hour setting process. An indicator (e.g., "24H") will appear for 24-hour format.

Backlight

The backlight illuminates the display for easy reading in low-light conditions.

- Press the **EL** button (Bottom Right) to activate the backlight. It will remain lit for a few seconds.

MAINTENANCE

Water Resistance

This watch is water resistant to 330 feet (100 meters). This means it is suitable for showering, swimming, and snorkeling. However, it is **not recommended for scuba diving**. Avoid operating buttons underwater to prevent water entry.

Battery Replacement

The watch uses 1 Product Specific battery (included). When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the resin case and strap.

TROUBLESHOOTING

- **Display is dim or blank:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not specified for this model). If the issue persists after a battery change, a professional inspection may be required.
- **Time is incorrect:** Re-set the time and date following the instructions in the "Setup" section. Check if the 12/24-hour format is set correctly.
- **Water inside the watch:** Immediately take the watch to a professional watch repair service. Do not attempt to open it yourself, as this can void the warranty and cause further damage.

SPECIFICATIONS

Model Number	40/8253 (Specific variant: 40-8253TAN)
Brand	Armitron Sport
Display Type	Digital LCD
Case Material	Resin
Strap Material	Resin
Water Resistance	100 Meters (330 Feet)
Functions	Chronograph, Lap Time, Alarm, Dual Time, Military Time, Backlight, Time, Seconds, Day, Date
Battery Type	1 Product Specific battery (included)
Dimensions	3.75 x 3 x 2.5 inches (Package)
Weight	8 ounces (Package)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Armitron website or contact Armitron customer service directly. Keep your proof of purchase for warranty claims.
Official Armitron Website: www.armitron.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CW26X544>

More documents and user manuals: <https://manuals.plus/>