

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Deolme](#) /

> [Deolme Oversized Electric Rocker Recliner User Manual](#)

Deolme Oversized Electric Recliner

Deolme Oversized Electric Rocker Recliner User Manual

Model: Oversized Electric Recliner

1. INTRODUCTION

Thank you for choosing the Deolme Oversized Electric Rocker Recliner. This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your new recliner. Please read this manual thoroughly before use and retain it for future reference.

This versatile recliner is designed to provide exceptional comfort and convenience, featuring smart voice control, power reclining, swivel and rocking functions, integrated charging ports, and immersive audio capabilities.

2. IMPORTANT SAFETY INFORMATION

Please adhere to the following safety guidelines to prevent injury or damage to the product:

- Always read and follow the assembly instructions carefully.
- Do not exceed the maximum weight capacity of 130 pounds (59 kg).
- Keep the power cord away from heat sources, water, and sharp objects.
- Do not allow children or pets to operate the chair without adult supervision.
- Always turn off the chair and unplug it from the power outlet when not in use or before cleaning.
- Ensure there is adequate clearance around the recliner when operating the reclining and swivel functions to avoid obstruction or damage.
- Avoid placing fingers or hands near moving parts during operation.

3. PACKAGE CONTENTS

Your Deolme Oversized Electric Rocker Recliner comes in one box. Please verify that all components are present and undamaged before proceeding with assembly.

- Recliner Backrest
- Recliner Seat Base (with integrated armrests, power controls, USB/Type-C ports, and speaker)
- Lumbar Pillow
- Adjustable Phone Holder Arm
- Power Adapter

- User Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly of your electric recliner is quick and straightforward, typically taking only 5 minutes with two main steps:

1. **Attach the Backrest:** Align the metal brackets on the backrest with the corresponding slots on the seat base. Slide the backrest down firmly until it clicks securely into place. Ensure both sides are fully engaged.
2. **Connect Power:** Plug the power adapter into the recliner's power input port, usually located at the rear or side of the base. Then, plug the power adapter into a standard wall outlet.

Once assembled, you can position the recliner in your desired location.



Figure 4.1: Product dimensions and assembly overview. The image shows the recliner with various measurements indicating its size (e.g., 40.55" height, 41.33" width, 35.82" depth) and a weight capacity of 350 lbs. It also illustrates the reclined position with a length of 55.12" and a footrest height of 16.69".

5. OPERATING INSTRUCTIONS

5.1 Power Reclining Function

To operate the power reclining feature, locate the control button on the side of the recliner (typically on the right armrest). Press and hold the button to smoothly recline the backrest and extend the footrest simultaneously. Release the button at any desired position between 90° (upright) and 160° (fully reclined) to lock it in place. To return to the upright position, press and hold the button again.

Note: The backrest and footrest operate together and cannot be controlled independently.



Figure 5.1: The recliner demonstrating its three adjustable positions: Napping, Home Theater, and Gaming. The image also highlights the breathable silicone leather material and thick & soft padding.



Figure 5.2: Close-up view of the control panel on the side of the recliner, showing the USB ports, Type-C port, and the button for controlling the recline function.

5.2 Smart Voice Command Control

Your recliner is equipped with smart voice command capabilities. To activate, use the wake-up phrase "Hi Terry". Once activated, you can issue commands such as:

- "Open the sofa": Commands the recliner to recline to a 160-degree position.
- "Pause the sofa": Returns the recliner to the upright, comfy chair position.
- Other commands may be available for specific functions like ambient lighting.

Ensure clear pronunciation for optimal voice recognition.

SMART SOFA

Switching by voice

SMART SOFA

HI~

OPEN SOFA

OPENING THE SOFA



Read a book



Music



Sleep

Figure 5.3: An illustration demonstrating the smart voice control feature, showing a person with a headset and speech bubbles indicating commands like "Hi Terry" and "Open the sofa" to control the recliner's position.

5.3 Swivel and Rocking Functions

The recliner features a 280° swivel function, allowing you to rotate the chair to face different directions. It also includes a 30° glider rocking motion for gentle back-and-forth movement. These functions operate manually by shifting your weight or gently pushing off the floor.

3-In-1 Function

Recliner, swivel and glider rocking



Figure 5.4: This image illustrates the 3-in-1 functionality of the chair: reclining, 30° glider rocking, and 280° swivel, with arrows indicating the range of motion for rocking and swiveling.



Figure 5.5: A visual representation of the 360° swivel capability of the recliner, showing circular arrows around the base of the chair.

5.4 USB and Type-C Charging Ports

Located on the side control panel, the recliner includes built-in USB and Type-C charging ports. Simply connect your compatible devices (smartphones, tablets, etc.) to these ports to charge them conveniently while seated.

5.5 Music 2.0 Surround Sound & Ambient Breathing Light

The recliner features integrated Music 2.0 audio for an immersive sound experience. To use, enable Bluetooth on your mobile device and connect to the recliner's Bluetooth signal. Once paired, you can play audio through the chair's speakers.

A 270° ambient breathing light is located around the base of the chair, providing a subtle glow. This light can be toggled on or off using a dedicated button, typically located near the main control panel on the right side.

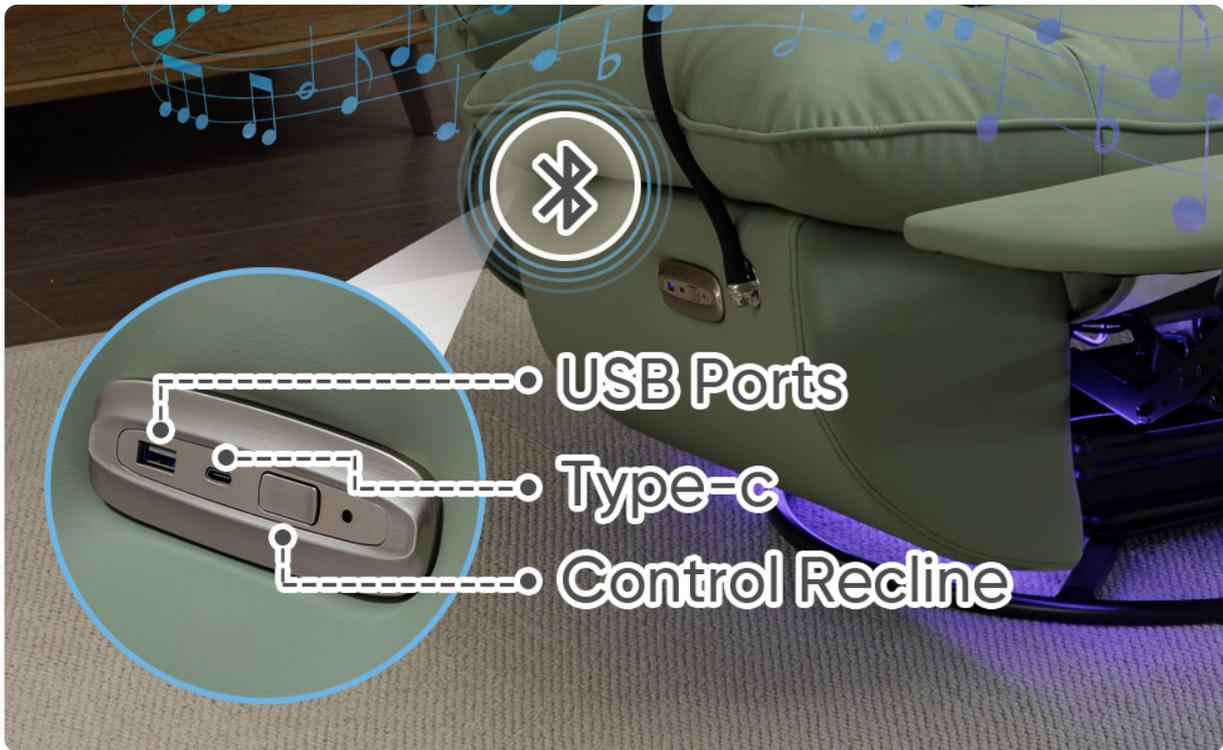


Figure 5.6: This image shows the built-in Bluetooth speaker feature, with a smartphone connected via Bluetooth to play music through the recliner's speakers.

5.6 Adjustable Phone Holder & Armrests

An adjustable phone holder arm is included, which can be inserted into a designated slot on the recliner. This allows you to position your phone at a comfortable viewing angle, freeing your hands. The armrests feature a 6-gear adjustment mechanism, allowing you to raise or lower them to your preferred height. Additionally, the armrests conceal large storage compartments for snacks, beverages, or other small items.



Figure 5.7: A close-up view showing the integrated USB and Type-C charging ports on the side of the recliner, along with a glimpse of the storage space available under the armrest, holding a tablet and headphones.

6. CARE AND MAINTENANCE

To ensure the longevity and appearance of your Deolme recliner, follow these care instructions:

- **Cleaning:** The recliner is upholstered with quality silicone leather, which is easy to clean. For spills (food, drink, oil), wipe immediately with a clean, damp cloth. For general cleaning, use a soft cloth dampened with mild soap and water, then wipe dry. Avoid harsh chemicals or abrasive cleaners.
- **Protection:** While the silicone leather is resistant to scratches to a certain extent, avoid sharp objects or excessive force that could damage the material.
- **Power Cord:** Regularly inspect the power cord for any signs of damage. If damaged, discontinue use and contact customer support.
- **Moving the Chair:** When moving the recliner, lift it rather than dragging it to prevent damage to the base or flooring.

7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Recliner does not operate.	Not plugged in; power outage; loose connection.	Ensure power cord is securely plugged into both the chair and the wall outlet. Check circuit breaker.
Voice command not responding.	Incorrect wake-up phrase; unclear pronunciation; background noise.	Ensure you are saying "Hi Terry" clearly. Reduce background noise.
Bluetooth audio quality is poor or connection issues.	Device too far; interference; speaker placement.	Ensure your device is within range. Minimize interference from other electronic devices. Note that speaker placement is near the floor, which may affect sound projection.
Phone holder cannot support device.	Device too heavy or large for the holder's capacity.	The phone holder is designed for standard-sized smartphones. Larger or heavier devices may not be adequately supported.
Backrest detaches or feels loose.	Backrest not fully engaged during assembly.	Ensure the backrest is firmly pushed down into the seat base brackets until it clicks securely on both sides.
Chair swivels unexpectedly.	This may be due to the nature of the swivel mechanism.	Ensure the chair is on a level surface. If persistent, contact customer support.

If the problem persists after attempting these solutions, please contact Deolme customer support for further assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	Deolme
Model Name	Oversized Electric Recliner
Color	Green
Product Dimensions (D x W x H)	35.82" x 41.33" x 40.55"
Seat Depth	22.83 inches
Material	Faux Leather (80% Nappa Silicone Leather), Foam Fill
Maximum Weight Recommendation	130 Pounds
Reclining Angle	90° to 160°
Swivel Angle	280°

Feature	Specification
Glider Rocking Angle	30°
Connectivity	USB Ports, Type-C Port, Bluetooth (for Music 2.0)
Special Features	Smart Voice Control, Ambient Breathing Light, Adjustable Phone Holder, 6-Gear Armrests with Storage
Item Weight	125.7 pounds

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Deolme
