

manuals.plus /

› [TIME TIMER](#) /

› [TIME TIMER Visual Timers Instruction Manual - 8-inch 60-Minute & PLUS 20-Minute Models](#)

TIME TIMER B0CW36RLRP

TIME TIMER Visual Timers Instruction Manual

Models: 8-inch 60-Minute Visual Timer & PLUS 20-Minute Visual Timer

INTRODUCTION

This manual provides instructions for the TIME TIMER 8-inch 60-Minute Visual Timer and the TIME TIMER PLUS 20-Minute Visual Timer. These devices are designed to visually represent the passage of time, aiding in time management, task completion, and focus for various activities in educational, professional, and home environments.

PRODUCT OVERVIEW

This package includes two distinct visual timers:

- **TIME TIMER Original 8-inch 60-Minute Visual Timer:** Features a large display with a red disk that disappears as time elapses. It includes a dry-erase activity card slot and magnetic backing.
- **TIME TIMER PLUS 20-Minute Visual Timer:** A portable timer with a handle, featuring a blue disk for a 20-minute countdown.



Image: The 8-inch 60-minute visual timer (left) and the 20-minute visual timer (right).

SETUP

TIME TIMER Original 8-inch 60-Minute Visual Timer

1. **Battery Installation:** Locate the battery compartment on the back of the timer. Insert 2 AA batteries (not included), ensuring correct polarity.
2. **Placement:**
 - **Desk Use:** Extend the two foldable feet on the back to stand the timer on a flat surface.
 - **Magnetic Mounting:** The timer features a magnetic back, allowing it to be attached to magnetic whiteboards or other metallic surfaces.
 - **Wall Mounting:** The timer can also be hung on a wall using a suitable hook (not included).
3. **Activity Card:** If desired, write or draw the task on the included dry-erase activity card and place it in the top slot of the timer.



Image: The 8-inch 60-minute visual timer with an activity card in its slot.

TIME TIMER PLUS 20-Minute Visual Timer

1. **Battery Installation:** Locate the battery compartment on the back. Insert 1 AA battery (not included), observing polarity.
2. **Placement:** This portable timer can be placed on any flat surface. Its integrated handle allows for easy transport.



Image: The TIME TIMER PLUS 20-Minute Visual Timer, white with a blue disk.

OPERATING INSTRUCTIONS

Setting the TIME TIMER Original 8-inch 60-Minute Visual Timer

1. **Set Time:** Turn the center knob counter-clockwise to move the red disk to your desired duration, up to 60 minutes.
2. **Countdown:** The red disk will begin to disappear clockwise as time elapses. The timer operates silently, without a ticking sound.
3. **Optional Alert:** An on/off switch on the back of the timer controls an audible alert that sounds when the timing cycle is complete. Adjust this setting based on your environment and preference.



Image: The 8-inch 60-minute visual timer in use on a whiteboard, demonstrating its magnetic capability.

Setting the TIME TIMER PLUS 20-Minute Visual Timer

1. **Set Time:** Use the center set knob to move the colored disk to the desired time, up to 20 minutes.
2. **Countdown:** The colored disk will recede as time passes. This timer also features silent operation.
3. **Optional Alert:** An optional alarm feature is available for this timer, providing an audible signal upon completion of the countdown.

Time Timer® is clinically proven to increase self regulation.

Kalynn Hall Pistorio, Michael P. Brady & Cindy Morris (2017): Using literacy-based behavioural interventions to teach self-regulation skills to young children, Early Child Development and Care, DOI:10.1080/03004430.2017.1406483



Image: A child interacting with the 20-minute visual timer, demonstrating its ease of use.

FEATURES AND BENEFITS

- **Visual Time Management:** The disappearing colored disk provides a clear, intuitive representation of remaining time, reducing anxiety and improving focus.
- **Silent Operation:** Both timers operate without a ticking sound, making them suitable for sound-sensitive environments such as classrooms, libraries, or quiet study areas.
- **Versatile Placement (8-inch model):** Can be used on a desk with foldable feet, magnetically attached to surfaces, or hung on a wall.
- **Dry-Erase Activity Card (8-inch model):** Allows users to write or draw tasks directly on the card, providing a visual reminder of the activity associated with the timed period.
- **Portability (20-minute model):** Features an integrated handle and protective lens for easy transport and durability.
- **Support for Special Needs:** The visual nature of the timers aids individuals with autism, ADHD, or other learning

disabilities in understanding time transitions and managing tasks.

MAINTENANCE

- **Cleaning:** Wipe the timers with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the timer's functionality diminishes or ceases. Dispose of used batteries responsibly.
- **Storage:** Store timers in a cool, dry place when not in use.

TROUBLESHOOTING

- **Timer Not Moving:**
 - Ensure batteries are correctly installed and not depleted.
 - Check that the center knob is turned sufficiently to set the red/blue disk.
- **Audible Alert Not Sounding (8-inch model):**
 - Verify that the alert switch on the back of the timer is in the "on" position.
 - Check battery levels.
- **Dry-Erase Card Issues:**
 - Use only dry-erase markers on the activity card.
 - Clean with a dry-erase board eraser or a soft cloth.

SPECIFICATIONS

TIME TIMER Original 8-inch 60-Minute Visual Timer

Brand	TIME TIMER
Model	Original 8-inch 60-Minute Visual Timer
Dimensions (approx.)	7.5"W x 7.5"H x 1.25"D
Power Source	2 AA batteries (not included)
Max Time Setting	60 minutes
Features	Magnetic back, foldable feet, dry-erase activity card slot, optional audible alert

TIME TIMER PLUS 20-Minute Visual Timer

Brand	TIME TIMER
Model	PLUS 20-Minute Visual Timer
Power Source	1 AA battery (not included)
Max Time Setting	20 minutes
Features	Portable handle, protective lens, silent operation, optional audible alert

- Keep batteries out of reach of small children.
- Do not mix old and new batteries, or different types of batteries.
- Do not expose the timers to extreme temperatures or moisture.
- This product is not a toy. Adult supervision is recommended for young children.

WARRANTY AND SUPPORT

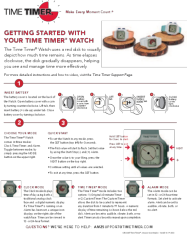

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for warranty claims.



© 2025 TIME TIMER. All rights reserved.

Related Documents - B0CW36RLRP

	<p>Getting Started with Your Time Timer MOD: User Guide</p> <p>Learn how to set up and use your Time Timer MOD. This guide covers battery installation, sound preferences, timer settings, and product care for your visual timer.</p>
	<p>Getting Started with Time Timer Original</p> <p>A guide to setting up and using your Time Timer Original (2021 & Beyond Editions), including battery installation, sound preference, time setting, and product care for 12", 8", and 3" models.</p>
	<p>How to Use the Time Timer MAX: A Comprehensive Guide</p> <p>Learn how to use the Time Timer MAX, a large visual timer designed for flexible time management. This guide covers setting the timer, changing faces, choosing durations, and display options.</p>
	<p>Time Timer WASH + SOAP: Getting Started Guide</p> <p>A quick start guide for the Time Timer® WASH + SOAP automatic soap dispenser, covering charging, filling, operation, sound settings, and maintenance tips.</p>

 <p>TIME TIMER® With Easy Memory™</p> <p>GETTING STARTED WITH YOUR TIME TIMER WATCH</p> <p>The Time Timer® Watch uses a red disk to visually track time remaining. The red disk is divided into 60 segments, each representing 1 minute. The red disk is also divided into 60 segments, each representing 1 minute. The red disk is also divided into 60 segments, each representing 1 minute.</p> <p>BATTERY INSERTION</p> <p>1. Remove the back cover of the watch by pressing the back cover release button.</p> <p>2. Insert the battery into the battery compartment.</p> <p>3. Press the back cover release button to secure the battery.</p> <p>CHOOSING MODES</p> <p>1. Press the mode button to cycle through the modes: Clock, Time Timer, Alarm.</p> <p>2. Press the mode button again to select the desired mode.</p> <p>SETTING TIME</p> <p>1. Press the time button to enter the time setting mode.</p> <p>2. Use the up and down buttons to set the time.</p> <p>3. Press the mode button to exit the time setting mode.</p> <p>SETTING ALARMS</p> <p>1. Press the alarm button to enter the alarm setting mode.</p> <p>2. Use the up and down buttons to set the alarm time.</p> <p>3. Press the mode button to exit the alarm setting mode.</p> <p>DISCLAIMER: WE'RE HERE TO HELP. ANDRE@TIMERTIMER.COM</p>	<p>Getting Started with Your Time Timer Watch</p> <p>Get started with your Time Timer Watch. This guide covers battery insertion, choosing modes (Clock, Time Timer, Alarm), and quick start instructions for setting time and alarms. Learn to use the visual red disk timer for effective time management.</p>
 <p>TIME TIMER® With Easy Memory™</p> <p>GETTING STARTED WITH YOUR TIME TIMER WATCH PLUS</p> <p>The Time Timer® Watch Plus uses a red disk to visually track time remaining. The red disk is divided into 60 segments, each representing 1 minute. The red disk is also divided into 60 segments, each representing 1 minute. The red disk is also divided into 60 segments, each representing 1 minute.</p> <p>BATTERY INSERTION</p> <p>1. Remove the back cover of the watch by pressing the back cover release button.</p> <p>2. Insert the battery into the battery compartment.</p> <p>3. Press the back cover release button to secure the battery.</p> <p>CHOOSING MODES</p> <p>1. Press the mode button to cycle through the modes: Clock, Time Timer, Alarm.</p> <p>2. Press the mode button again to select the desired mode.</p> <p>SETTING TIME</p> <p>1. Press the time button to enter the time setting mode.</p> <p>2. Use the up and down buttons to set the time.</p> <p>3. Press the mode button to exit the time setting mode.</p> <p>SETTING ALARMS</p> <p>1. Press the alarm button to enter the alarm setting mode.</p> <p>2. Use the up and down buttons to set the alarm time.</p> <p>3. Press the mode button to exit the alarm setting mode.</p> <p>DISCLAIMER: WE'RE HERE TO HELP. ANDRE@TIMERTIMER.COM</p>	<p>Getting Started with Your Time Timer Watch Plus</p> <p>Learn how to use the Time Timer Watch Plus, a digital watch featuring a unique red disk to visually track time remaining. This guide covers choosing modes, quick start instructions, and details on Clock, Time Timer, and Alarm modes.</p>