

SHARP EM-G71N-M

SHARP EM-G71N-M Mixer Grinder User Manual

Model: EM-G71N-M

INTRODUCTION

Thank you for choosing the SHARP EM-G71N-M Mixer Grinder. This appliance is designed for efficient blending, grinding, and juicing tasks in your kitchen. Featuring a powerful 750W copper motor, durable stainless steel blades, and multiple safety features, this manual provides essential information for safe operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your product.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local power supply before connecting. Do not immerse the motor unit in water or any other liquid. Always unplug the appliance from the power outlet when not in use, before cleaning, or before assembling/disassembling parts.
- **Blade Safety:** Blades are sharp. Handle with extreme care. Never touch the blades with your hands, especially when the appliance is plugged in.
- **Overload Protection:** The mixer grinder is equipped with an **Auto Cut-off Protection** feature. In case of overloading or overheating, the appliance will automatically shut off. Allow it to cool down for a few minutes, then press the reset button located at the bottom of the motor unit before restarting.
- **Stability:** Always operate the mixer grinder on a stable, flat, and dry surface. The appliance features **Anti-Skid Feet** for better grip and stability during operation.
- **Lid Security:** Ensure the jar lid is securely fastened before operating the appliance to prevent spills and ensure safe operation. The jars are designed with **Leakproof and Airtight Lids**.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Damage:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer support for assistance.
- **Ventilation:** Ensure proper ventilation around the motor unit during operation to prevent overheating.

FEATURES



This image illustrates the safety features of the SHARP Mixer Grinder, including anti-skid feet for stability, a shock-proof sturdy ABS body, and auto-cut overload protection.

PRODUCT COMPONENTS

Your SHARP EM-G71N-M Mixer Grinder comes with the following components:

- **Motor Unit:** The main body housing the 750W copper motor and control knob. Made from durable ABS material.
- **Wet Grinding Jar (1.5L):** For preparing batters, shakes, and smoothies.
- **Dry Grinding Jar (1.0L):** For grinding dry spices and ingredients into finer powders.
- **Chutney Jar (0.4L):** Ideal for small quantities, chutneys, masalas, or grinding nuts.
- **Lids:** Leakproof and airtight lids for each jar.
- **Blades:** SS 304 Grade Stainless Steel Blades for efficient processing. Comes with 2 additional blades.

SHARP PERFORMANCE SMOOTH RESULTS



**750W
COPPER MOTOR**



**SS 304 GRADE
STEEL BLADES**



**LEAKPROOF
LID**



**3 SPEED+
PULSE MODE**



The SHARP EM-G71N-M Mixer Grinder in maroon, shown with its three stainless steel jars: a 1.5L wet grinding jar, a 1.0L dry grinding jar, and a 0.4L chutney jar.



This image displays the SHARP Mixer Grinder alongside its three jars (1.0L dry, 0.4L chutney, 1.5L wet) and an illustration of its overall product dimensions.



Close-up of the durable SS 304 grade stainless steel blades designed for efficient grinding and blending.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Initial Cleaning:** Before first use, wash the jars, lids, and blades with warm soapy water. Rinse thoroughly and dry completely. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a clean, dry, stable, and flat surface, ensuring it is away from heat sources and water.
4. **Assemble Jar:** Place the desired jar onto the motor unit. Ensure it is locked into position by rotating it clockwise until it clicks.
5. **Add Ingredients:** Place your ingredients into the jar. Do not overfill. Ensure the lid is securely placed and locked onto the jar.

OPERATING INSTRUCTIONS

The SHARP EM-G71N-M Mixer Grinder features a 3-speed control knob with an additional pulse function.

1. **Connect Power:** Plug the power cord into a suitable electrical outlet.
2. **Select Speed:** Turn the control knob to the desired speed setting (1, 2, or 3) for continuous operation.
 - **Speed 1 (Low):** For light mixing and delicate ingredients.
 - **Speed 2 (Medium):** For general grinding and blending.
 - **Speed 3 (High):** For heavy-duty grinding and quick processing.
3. **Pulse Function:** For short bursts of power, turn the knob to the 'Pulse' setting and hold it. Release to stop. This is useful for coarse grinding or quick mixing.
4. **Monitor Progress:** Observe the consistency of ingredients through the transparent lid. If necessary, stop the appliance, unplug, and scrape down the sides of the jar before continuing.
5. **Finish Operation:** Once desired consistency is achieved, turn the control knob to the 'OFF' position. Unplug the appliance from the power outlet.
6. **Remove Jar:** Rotate the jar counter-clockwise to unlock and lift it from the motor unit.

FEATURES



The control knob of the SHARP Mixer Grinder, indicating Low, Medium, High, and Pulse speed settings.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygiene of your mixer grinder.

1. **Always Unplug:** Before cleaning, always ensure the mixer grinder is unplugged from the power outlet.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the motor unit in water.
3. **Jars and Lids:** Wash the jars and lids with warm soapy water immediately after use to prevent food residue from drying. Use a brush for thorough cleaning, especially around the blades. Rinse well and dry completely before storing.
4. **Blades:** Handle blades with extreme caution. They are very sharp. Clean them carefully with a brush under running water.
5. **Storage:** Store the mixer grinder and its accessories in a clean, dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

If you encounter any issues with your mixer grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not start.	◦ Not plugged in correctly. ◦ Overload protector tripped. ◦ Jar not properly locked.	◦ Check power connection. ◦ Press the reset button at the bottom of the motor unit after allowing it to cool. ◦ Ensure the jar is securely locked onto the motor unit.
Motor stops during operation.	◦ Overload or overheating. ◦ Ingredients too thick or hard.	◦ Turn off, unplug, and press the reset button after cooling. Reduce load. ◦ Add more liquid or reduce the quantity of ingredients.
Leakage from jar.	◦ Lid not properly secured. ◦ Rubber gasket/seal damaged or missing. ◦ Overfilling the jar.	◦ Ensure the lid is firmly closed and locked. ◦ Check and replace the gasket if necessary. ◦ Do not fill ingredients beyond the maximum fill line.
Unusual noise or smell.	◦ Foreign object in jar. ◦ Motor issue.	◦ Immediately turn off, unplug, and check the jar for any foreign objects. ◦ Discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact SHARP customer support.

SPECIFICATIONS

Feature	Detail
Brand	SHARP
Model Name	EM-G71N-M
Wattage	750 Watts
Voltage	230 Volts
Motor Type	Copper Motor
Number of Jars	3 (1.5L Wet, 1.0L Dry, 0.4L Chutney)
Blade Material	SS 304 Grade Stainless Steel
Body Material	Acrylonitrile Butadiene Styrene (ABS)
Controls Type	Knob (3 Speed + Pulse)

Feature	Detail
Special Features	Adjustable Speed Control, Auto Shut Off, Heavy Duty, Overheat Protection, Safety Lock, Anti-Skid Feet
Product Dimensions (D x W x H)	34.5D x 38.5W x 44H Centimeters
Item Weight	5.1 Kilograms

WARRANTY AND CUSTOMER SUPPORT

SHARP provides reliable customer support for your product.

- **Warranty:** Please refer to your purchase documentation for specific warranty details. The product typically includes a manufacturer's warranty against defects in materials and workmanship.
- **Customer Service:** For any service-related queries, technical assistance, or warranty claims, please contact SHARP customer support.
- **Contact Information:**
 - **Toll-Free:** 1800-419-4322
 - **Missed Call Service:** 9804763763
 - **E-Mail:** support@sharp-oa.com
 - **Manufacturer Address:** Sharp Business Systems (India) Private Limited, Plot No. 51, First Floor, Okhla Industrial Estate, Phase-III, New Delhi- 110020

PRODUCT VIDEOS

No official product videos from the seller were found in the provided data to embed in this manual.