



Manuals.plus /

› Eveready /

› Eveready LED Camping Lantern X-250 User Manual

Eveready E304125000

Eveready LED Camping Lantern X-250 User Manual

1. INTRODUCTION

The Eveready LED Camping Lantern X-250 is a compact and reliable lighting solution designed for various outdoor and emergency situations. It provides bright, 360-degree illumination with a long runtime, making it suitable for camping, power outages, and general utility. This manual provides essential information for the safe and effective use of your lantern.

LONG-LASTING BRIGHTNESS



250

LUMENS

50+

HOURS OF RUNTIME

360°

LIGHTING

Image 1.1: Eveready LED Camping Lantern X-250 highlighting its brightness and runtime.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the Eveready LED Camping Lantern X-250. Failure to follow these instructions may result in injury or damage to the product.

- Always read and follow all instructions provided in this manual.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries from the lantern if it will not be used for an extended period to prevent battery leakage and corrosion.
- Keep the lantern and batteries out of reach of children.
- Do not look directly into the LED light source to avoid eye strain.
- Do not attempt to disassemble or modify the lantern. This will void the warranty and may cause damage or injury.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x Eveready LED Camping Lantern X-250
- 8 x AA Carbon Zinc Batteries



Image 3.1: Contents of the Eveready LED Camping Lantern X-250 2-pack.

4. SETUP: BATTERY INSTALLATION

The Eveready LED Camping Lantern X-250 operates on either 2 or 4 AA batteries, offering flexibility for power saving or extended runtime.

1. Locate the battery compartment cover at the base of the lantern.
2. Twist the cover counter-clockwise or slide it open to access the battery compartment.
3. Insert 2 or 4 AA batteries according to the polarity indicators (+/-) molded inside the compartment. Ensure correct orientation for each battery.
4. Replace the battery compartment cover and twist it clockwise or slide it until it is securely closed.

POWER SAVING* & MAXIMUM FLEXIBILITY

CUSTOMIZE
YOUR POWER

2AA FOR
SAVINGS



OR

4AA FOR
EXTENDED
RUNTIME



*2AA (POWER SAVING OPTION)

Image 4.1: Battery installation options for power saving or extended runtime.

5. OPERATING INSTRUCTIONS

The lantern features a simple one-button control for ease of use.

1. To turn the lantern **ON**, press the power button located on the front of the lantern.
2. To turn the lantern **OFF**, press the power button again.

The lantern provides a single brightness mode, emitting up to 250 lumens of 360-degree light.

DESIGN FEATURES



**COMPACT &
LIGHTWEIGHT**



**EASY GRIP HANDLE
FOR CARRYING
& HANGING**



**ONE BUTTON CONTROL
NO COMPLEX SETTINGS**



Image 5.1: Design features and single button control of the lantern.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your lantern.

- **Cleaning:** Clean the exterior of the lantern with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or internal components.
- **Storage:** Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures. Always remove batteries if storing the lantern for extended periods to prevent potential battery leakage and damage.
- **Water Resistance:** The lantern is rated IPX4 water-resistant, meaning it is protected against splashing water from any direction. It is not designed for submersion. Ensure the battery compartment is securely closed to maintain water resistance.

DURABLE CONSTRUCTION



IPX4 WATER
RESISTANT



IMPACT
RESISTANT
MATERIALS



Image 6.1: Durable construction and water resistance of the lantern.

7. TROUBLESHOOTING

If you encounter issues with your Eveready LED Camping Lantern X-250, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lantern does not turn on.	Batteries are inserted incorrectly. Batteries are depleted. Battery compartment cover is not closed securely.	Check battery polarity and reinsert correctly. Replace with fresh batteries. Ensure the battery compartment cover is fully closed and sealed.
Light output is dim.	Batteries are low or partially depleted.	Replace all batteries with a fresh set.

8. SPECIFICATIONS

- **Model Number:** E304125000

- **Light Source:** LED
- **Brightness:** Up to 250 lumens
- **Battery Life:** Up to 100 hours (with 4 AA Carbon Zinc batteries)
- **Power Source:** 2 or 4 x AA Alkaline Batteries
- **Voltage:** 3 Volts (DC)
- **Wattage:** 5 Watts
- **Water Resistance:** IPX4 (Splash Resistant)
- **Impact Resistance:** Up to 1 meter
- **Material:** Plastic
- **Approximate Dimensions (per lantern):** 4.72" (Width) x 6.77" (Height)
- **Approximate Package Weight (2-pack):** 1.46 pounds (0.66 Kilograms)

9. WARRANTY

Warranty information for this product is not explicitly provided in the product details. Please refer to the packaging or contact Eveready customer support for specific warranty terms and conditions.

10. SUPPORT

For further assistance, product inquiries, or to report any issues, please contact Eveready customer support through their official website or the contact information provided on the product packaging.

You can visit the official Eveready store on Amazon for more products and information: [Eveready Store](#)