

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mycket](#) /

› [Mycket DAB/DAB+ FM Retro Radio User Manual - Model Mycket-DAB-Retro-1](#)

Mycket Mycket-DAB-Retro-1

Mycket DAB/DAB+ FM Retro Radio

USER MANUAL - MODEL: MYCKET-DAB-RETRO-1

Introduction

Thank you for choosing the Mycket DAB/DAB+ FM Retro Radio. This portable digital radio offers a blend of classic design with modern functionality, including DAB/DAB+ and FM radio reception, Bluetooth 5.0 connectivity, USB playback, and AUX input. Its integrated rechargeable battery allows for versatile use at home or on the go. This manual provides essential information for setting up, operating, and maintaining your radio.

Stylish Wooden Exterior Design

The wooden appearance is more suitable for gifts and has more affinity.



Wooden appearance



Image: The Mycket Retro Radio featuring its stylish wooden exterior, designed for both aesthetic appeal and portability.

Important Safety Information

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the radio near heat sources or in direct sunlight for extended periods.
- Do not open the radio casing. Refer all servicing to qualified personnel.
- Use only the provided USB power cable for charging.
- Keep out of reach of children.
- Dispose of the battery and product responsibly according to local regulations.

Package Contents

Please check that all items are present:

- 1 x Mycket DAB/DAB+ FM Retro Radio
- 1 x USB Power Cable (Type-C)
- 1 x User Manual

Product Overview and Controls

Familiarize yourself with the radio's components and control buttons.



Image: Front view of the Mycket Retro Radio, highlighting the LED display, central control knob, and function buttons.

1. **Telescopic Antenna:** For improved radio signal reception.
2. **LED Display:** Shows station information, time, mode, and battery status.
3. **Volume/Select/Enter Knob:** Rotate to adjust volume or navigate menus; press to select or confirm.
4. **Power Button (U):** Press and hold to power on/off.
5. **Mode Button:** Cycle through DAB, FM, Bluetooth, USB, and AUX modes.
6. **IN/ME Button:** Used for menu access and information display.
7. **Preset Button:** Access and save preset radio stations.
8. **Previous Track/Tune Down Button (⏮):** Skip to previous track or tune down frequency.
9. **Next Track/Tune Up Button (⏭):** Skip to next track or tune up frequency.
10. **USB Port:** For USB disk playback.
11. **AUX In Port:** For connecting external audio devices.
12. **3.5mm Headphone Jack:** For personal listening.
13. **USB-C Charging Port:** For connecting the power cable.

Setup

1. Charging the Battery

Before first use, fully charge the radio's internal battery. Connect the supplied USB Type-C cable to the charging port on the back of the radio and the other end to a USB power adapter (not included) or a powered USB port. The LED display will indicate charging status. A full charge provides approximately 8-9 hours of playback at 70% volume.



Image: The Mycket Retro Radio shown connected to a power source, illustrating its mains-powered operation.

2. Extending the Antenna

For optimal DAB/DAB+ and FM radio reception, fully extend the telescopic antenna. Adjust its position for the best signal quality.

Operating Instructions

Power On/Off

Press and hold the **U** (Power) button to turn the radio on or off.

Mode Selection

Press the **Mode** button repeatedly to cycle through available modes: DAB, FM, Bluetooth, USB, and

AUX.

DAB/DAB+ Radio Operation

1. Switch to DAB mode using the **Mode** button.
2. The radio will automatically scan for available DAB/DAB+ stations upon first use or if no stations are found.
3. Rotate the **Volume/Select/Enter** knob to browse through the list of available stations.
4. Press the **Volume/Select/Enter** knob to select and play a station.
5. **Saving Presets:** While a station is playing, press and hold the **Preset** button. Rotate the **Volume/Select/Enter** knob to choose a preset number (up to 80). Press the knob to confirm and save.
6. **Recalling Presets:** Press the **Preset** button briefly. Rotate the **Volume/Select/Enter** knob to select a saved preset, then press the knob to play.

FM Radio Operation

1. Switch to FM mode using the **Mode** button.
2. **Auto Scan:** Press and hold the **IN/ME** button to initiate an automatic scan for FM stations. The radio will save found stations to presets.
3. **Manual Tuning:** Briefly press the |<< or >>| buttons to fine-tune the frequency. Press and hold these buttons for automatic search to the next strong station.
4. **Saving Presets:** While a station is playing, press and hold the **Preset** button. Rotate the **Volume/Select/Enter** knob to choose a preset number. Press the knob to confirm and save.
5. **Recalling Presets:** Press the **Preset** button briefly. Rotate the **Volume/Select/Enter** knob to select a saved preset, then press the knob to play.

Bluetooth Mode

1. Switch to Bluetooth mode using the **Mode** button. The display will show "Bluetooth" or a pairing indicator.
2. On your smartphone, tablet, or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "Mycket-DAB-Retro-1" (or similar name) from the list to pair.
4. Once paired, you can stream audio from your device to the radio. Use the |<< and >>| buttons to control track playback.

USB Disk Playback

1. Insert a USB flash drive (U disk) containing MP3 audio files into the USB port on the radio.
2. Switch to USB mode using the **Mode** button. The radio will automatically begin playing audio files.
3. Use the |<< and >>| buttons to navigate between tracks.

USB Disk Playback

Support USB stick input, enjoy your favourite music by inserting a USB stick.



Image: The Mycket Retro Radio demonstrating its USB disk playback capability, allowing users to enjoy music from a USB stick.

AUX In Mode

1. Connect an external audio device (e.g., MP3 player, smartphone) to the AUX In port using a 3.5mm audio cable (not included).
2. Switch to AUX mode using the **Mode** button.
3. Control playback from your connected external device.

Headphone Use

For private listening, plug 3.5mm headphones into the headphone jack on the radio. The internal speaker will automatically mute.

Headphone Jack for Personal Listening

Enjoy an immersive experience by connecting your earphones using the 3.5mm headphone jack.



3.5mm headphone jack



Image: The Mycket Retro Radio featuring a 3.5mm headphone jack, enabling personal and immersive listening experiences.

Sleep Timer

The radio features a sleep timer function. Consult the on-screen menu (accessed via the **IN/ME** button) to set a desired sleep duration, after which the radio will automatically power off.

Maintenance

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the radio regularly, especially if it will not be used for an extended period.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Radio does not power on.	Battery may be depleted. Connect the radio to a power source using the USB cable and allow it to charge. Ensure the power adapter is working.
Poor DAB/FM radio reception.	Fully extend the telescopic antenna. Try repositioning the radio or the antenna. Ensure you are within a DAB/DAB+ broadcast area for digital radio. Obstructions like thick walls or other electronic devices can interfere with the signal.
Bluetooth device cannot pair.	Ensure the radio is in Bluetooth mode and discoverable. Make sure Bluetooth is enabled on your device and it is within range (typically 10 meters). Try restarting both the radio and your Bluetooth device.
No sound from USB playback.	Ensure the USB disk is properly inserted and contains supported audio files (e.g., MP3). Check if the radio is in USB mode. Adjust the volume.
Display is unreadable or frozen.	Try powering off the radio and then powering it back on. If the issue persists, allow the battery to fully discharge and then recharge it.

Technical Specifications

Model: Mycket-DAB-Retro-1

Radio Bands: DAB, DAB+, FM

Connectivity: Bluetooth 5.0, USB, AUX In, 3.5mm Headphone Jack

Output Power: 5 W

Speaker Unit: 4Ω10W, 78mm x 1

Battery: Integrated 18650 Lithium-ion, 2000 mAh (3.7V - 2.2Ah)

Battery Life: Approximately 8-9 hours (at 70% volume)

Power Supply: 5V via USB

Presets: 80 (DAB/FM combined)

Dimensions (L x W x H): 200 mm x 150 mm x 123 mm (approx. 20 x 15 x 12 cm)

Color: Wood Effect



Image: The Mycket Retro Radio with its approximate dimensions clearly indicated for reference.

Warranty and Support

The Mycket DAB/DAB+ FM Retro Radio comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.

For any questions, technical assistance, or warranty claims, please contact our customer service. We offer **24/7 customer support** to ensure your satisfaction. Refer to your purchase documentation or the retailer's website for specific contact details.