

[Manuals.plus](#) /

> [Rowenta](#) /

> Rowenta Perfect Steam Pro Steam Station DG8624 and Access Steam Handheld Steamer DR3030 User Manual

Rowenta DG8624, DR3030

Rowenta Perfect Steam Pro Steam Station DG8624 and Access Steam Handheld Steamer DR3030 User Manual

Comprehensive instructions for safe and effective use of your Rowenta steam appliances.

INTRODUCTION

This manual provides detailed instructions for the operation, maintenance, and troubleshooting of your Rowenta Perfect Steam Pro Steam Station (Model DG8624) and Rowenta Access Steam Handheld Steamer (Model DR3030). Please read all instructions carefully before using the appliances to ensure safe and optimal performance. Keep this manual for future reference.

ROWENTA PERFECT STEAM PRO STEAM STATION (MODEL DG8624)

Product Overview

The Rowenta Perfect Steam Pro Steam Station is designed for professional-level ironing results at home. It features high-pressure boiler technology for powerful steam output, a Microsteam soleplate with 400 active micro-holes for even steam distribution, and a large removable water tank for extended use. The lightweight iron ensures smooth gliding over fabrics.



Image: The Rowenta Perfect Steam Pro Steam Station, featuring a blue and black design with a large water tank and an iron connected by a cord.

Key Features

- **Professional Steam Output:** High-pressure boiler technology delivers exceptional steam power, up to 430g/min steam boost.
- **Microsteam Soleplate:** 400 active micro-holes ensure precise and even steam distribution for efficient wrinkle removal.
- **Large Removable Water Tank:** 37-ounce (1.1L) capacity for longer, uninterrupted ironing sessions and easy refills.
- **Lightweight Iron:** Designed for smooth and effortless gliding over all fabric types.
- **Calc Collector:** Ensures long-lasting performance and fabric care by collecting mineral deposits.
- **Lock System:** Provides easy and safe transportation of the unit.



LOCK SYSTEM

Easy and safe
for transportation

Image: The Rowenta Perfect Steam Pro Steam Station with a visible "LOCK SYSTEM" indicator, highlighting its secure transport feature.

Setup Instructions

1. Place the steam station on a stable, heat-resistant surface, preferably an ironing board designed for steam generators.
2. Remove the water tank and fill it with tap water up to the maximum fill line. Do not use distilled water unless specified by local water conditions.
3. Reinsert the water tank securely into the base unit.
4. Unwind the power cord and plug the appliance into a grounded electrical outlet.

Operating Instructions

1. **Power On:** Press the power button. The indicator light will illuminate, and the unit will begin to heat up.
2. **Heat-Up Time:** Wait for the steam ready indicator light to stop flashing, indicating the unit has reached the optimal temperature (typically a few minutes).
3. **Ironing:** Place the garment on the ironing board. Press the steam trigger located on the iron handle to release steam. Glide the iron over the fabric.
4. **Steam Boost:** For stubborn creases, press the steam boost button (if available) for an extra burst of steam.

5. **Vertical Steaming:** The iron can be used for vertical steaming of hanging garments. Hold the iron a few inches from the fabric and press the steam trigger.
6. **Power Off:** After use, press the power button to turn off the appliance and unplug it from the outlet.



Image: A hand operating the Rowenta Perfect Steam Pro iron, releasing steam onto a garment on an ironing board, demonstrating its powerful steam boost.

Maintenance

- **Empty Water Tank:** After each use, empty any remaining water from the tank.
- **Clean Soleplate:** If the soleplate becomes dirty, clean it with a damp cloth and a non-abrasive cleaner designed for iron soleplates.
- **Calc Collector Cleaning:** Regularly check and clean the calc collector. Refer to the specific instructions in your product's detailed manual for how to remove and rinse the collector. This helps maintain steam performance and prolong appliance life.
- **Storage:** Allow the appliance to cool completely before storing. Secure the iron to the base using the lock system and wrap the cord neatly.

Troubleshooting

Problem	Possible Cause	Solution
No steam output	Water tank empty; appliance not heated; steam trigger not pressed.	Refill water tank; wait for steam ready light; press steam trigger.
Water leaking from soleplate	Temperature too low for steam; soleplate dirty.	Allow appliance to heat fully; clean soleplate.
Calc collector full indicator	Mineral deposits need to be removed.	Clean the calc collector as per detailed manual instructions.

Specifications (Model DG8624)

- **Power:** 1800 Watts
- **Water Tank Capacity:** 37 oz (1.1 L) removable
- **Steam Boost:** Up to 430 g/min
- **Soleplate:** Microsteam Stainless Steel
- **Special Features:** High-pressure boiler, Calc Collector, Lock System

ROWENTA ACCESS STEAM HANDHELD STEAMER (MODEL DR3030)

Product Overview

The Rowenta Access Steam Handheld Steamer is designed for quick and convenient garment care, ideal for travel and everyday use. It features an ultra-compact, foldable design, rapid heat-up time, and powerful steam output to refresh and de-wrinkle fabrics without an ironing board.





Image: The Rowenta Access Steam Handheld Steamer, a compact white and black device with a bronze accent, designed for portable use.

Key Features

- **Ultra-Compact Design:** Exclusive foldable head for easy storage and travel.
- **Super Fast Heat-Up:** Ready in just 15 seconds for quick steaming.
- **Lightweight:** Feather-light design for comfortable handling.
- **Strong Performance:** 1150W of power with continuous steam on demand.
- **Sanitizing Power:** Kills up to 99.99% of viruses, bacteria, and germs with natural steam.
- **Safety Features:** Steam on-demand, self-standing design, and auto-off feature.



Image: The Rowenta Access Steam Handheld Steamer on a table next to a mug, with a graphic indicating its ability to sanitize and kill up to 99.99% of viruses, bacteria, and germs.

Setup Instructions

1. Unfold the steamer head until it locks into place.
2. Remove the water tank from the base of the steamer.
3. Fill the water tank with tap water up to the maximum fill line.
4. Reattach the water tank securely.
5. Plug the steamer into a grounded electrical outlet.

Operating Instructions

1. **Power On:** Press the power button. The indicator light will illuminate.
2. **Heat-Up Time:** The steamer will be ready in approximately 15 seconds.
3. **Steaming:** Hold the steamer vertically, a few inches from the garment. Press and hold the steam trigger to release

continuous steam. Move the steamer slowly over the fabric, from top to bottom.

4. **Safety Stand:** The steamer is designed to be self-standing for stability during pauses.

5. **Power Off:** After use, release the steam trigger, press the power button to turn off, and unplug the appliance.



**POWERFUL
STEAM**

1150 watts of power
with on demand
continuous steam

Image: A person using the Rowenta Access Steam Handheld Steamer to steam a jacket hanging on a rack, demonstrating its powerful steam output.

Maintenance

- **Empty Water Tank:** Always empty the water tank after each use to prevent mineral buildup.
- **Clean Steam Head:** Wipe the steam head with a damp cloth to remove any residue. Do not use abrasive cleaners.
- **Storage:** Allow the steamer to cool completely. Fold the head for compact storage.

Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam output	Water tank empty; appliance not heated; steam trigger not pressed.	Refill water tank; wait 15 seconds for heat-up; press steam trigger.
Water spitting	Overfilled water tank; not fully heated.	Do not overfill; ensure full heat-up before use.

Specifications (Model DR3030)

- **Power:** 1150 Watts
- **Heat-Up Time:** 15 seconds
- **Water Tank Capacity:** 4 oz (approx. 120 ml)
- **Special Features:** Foldable head, Self-standing, Auto-off

GENERAL SAFETY INSTRUCTIONS

- Always ensure the voltage of your electrical outlet matches the voltage specified on the appliance.
- Do not leave the appliance unattended while plugged in or operating.
- Keep the appliance out of reach of children and pets.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Avoid touching hot surfaces. Use handles or knobs.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance only for its intended household use.
- Steam is hot. Direct steam away from yourself and others.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official Rowenta website or contact Rowenta customer service. Keep your proof of purchase for warranty claims.

Online Support: Visit www.rowenta.com

Customer Service: Refer to your product packaging or the Rowenta website for regional contact information.

