

[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO DW41SC01 5-Tier Shoe Cabinet Instruction Manual

HOOBRO DW41SC01

HOOBRO DW41SC01 5-Tier Shoe Cabinet Instruction Manual

Model: DW41SC01

1. INTRODUCTION

Thank you for choosing the HOOBRO DW41SC01 5-Tier Shoe Cabinet. This manual provides essential information for the safe assembly, proper use, and maintenance of your new shoe cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image 1.1: The HOOBRO DW41SC01 5-Tier Shoe Cabinet in an entryway setting.

2. SAFETY INFORMATION

To ensure safe use of this product, please observe the following guidelines:

- Always follow the assembly instructions precisely.
- Secure the product to the wall using the provided anti-tip kit to prevent accidental tipping, especially in households with children or pets.
- Keep the cabinet away from open flames, heat sources, and excessively humid environments.
- Do not allow children to climb on or play with the product.
- Ensure the cabinet is placed on a stable, level surface.



Image 2.1: Illustration of the anti-tip kit installation for enhanced stability.

3. PACKAGE CONTENTS

Before assembly, verify that all parts and hardware are present and undamaged. The package includes:

- All necessary wooden panels (clearly labeled).
- Metal parts (e.g., legs, handles, hinges).
- Assembly hardware (screws, dowels, etc., often with extra pieces).
- An Allen wrench for assembly.
- Anti-tip kit.
- Detailed instruction manual.

If any parts are missing or damaged, please contact customer support for assistance.

4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward with detailed instructions and labeled parts. It is recommended to assemble the unit on a soft surface like a carpet or rug to prevent scratches.

General Assembly Tips:

- Identify all parts by their labels before starting.
- While an Allen wrench is provided, using a hex driver (preferably a ratchet driver) can significantly speed up assembly and reduce effort. Avoid using power drills to prevent stripping screws or damaging panels.
- Hand-tighten screws until resistance is felt to avoid overtightening.
- Consider assembling the main frame on a tabletop for easier access, then install slats and doors once the cabinet is upright in its final location.
- Ensure the anti-tip kit is installed as per safety guidelines.

Assembly Video:

Your browser does not support the video tag.

Video 4.1: Official HOOBRO assembly overview for the DW41SC01 shoe cabinet.

5. OPERATING INSTRUCTIONS

Adjustable Shelves:

The shoe cabinet features 3 adjustable shelves, allowing you to customize the internal storage space. To adjust a shelf, carefully remove it from its current position and reinsert it into the desired set of pre-drilled holes. This flexibility accommodates various shoe types, from flats to mid-calf boots.



Image 5.1: The adjustable shelves allow for customized storage of various shoe sizes and types.



Image 5.2: Visual guide demonstrating the adjustable shelf mechanism.

Open Storage Space:

The cabinet includes an open storage area beneath the main compartment, ideal for frequently used shoes, slippers, or small decorative items. This provides quick access and additional organization.

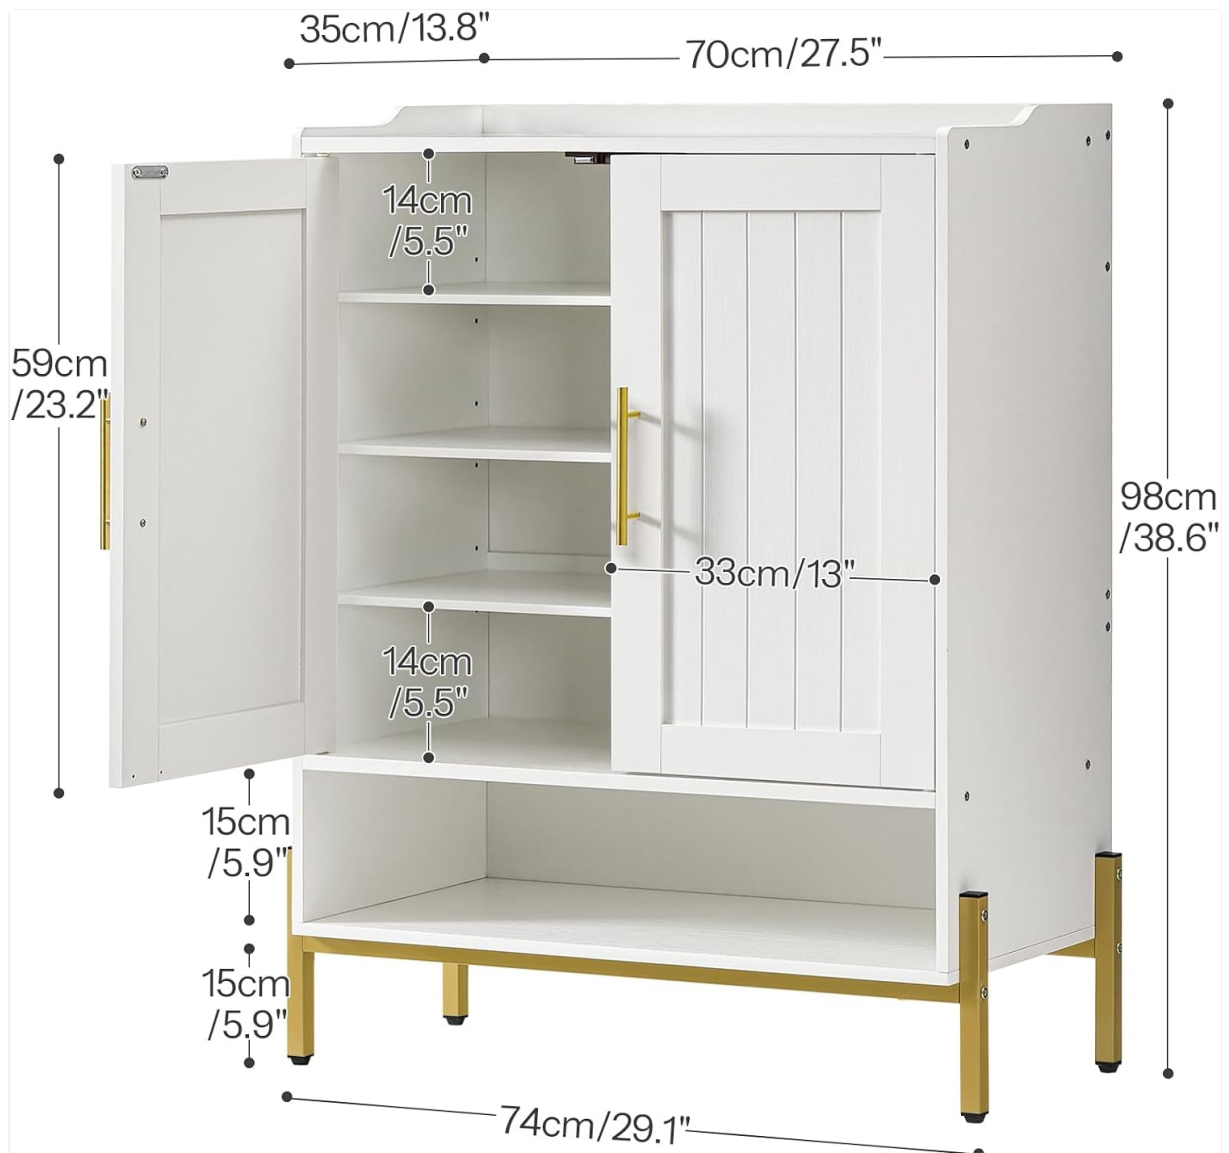


Image 5.3: The open storage area provides convenient access for everyday items.

Top Surface with Fence:

The top surface of the cabinet features a protective fence, designed to prevent items from accidentally falling off. This area is suitable for displaying home decor, keys, or other small personal belongings.

Adjustable Shelves

Easily accommodating flats, mid-calf boots, heels, and tall boots with tidiness.



Image 5.4: The top surface with a fence provides a secure space for displaying items.

Weight Capacity:

The top surface can support up to 20 lb (approximately 9 kg). Each internal shelf can also hold up to 20 lb (approximately 9 kg). Do not exceed these weight limits to ensure stability and product longevity.

6. MAINTENANCE

To maintain the appearance and longevity of your HOOBRO shoe cabinet:

- Wipe surfaces with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Dry immediately with a clean, soft cloth.
- Periodically check all screws and connections to ensure they remain tight.
- Avoid prolonged exposure to direct sunlight or extreme temperature changes.

7. TROUBLESHOOTING

If you encounter any issues during or after assembly, consider the following:

- **Difficulty with screw insertion:** Ensure you are using the correct screw for the designated hole. Do not force screws; if resistance is high, re-check alignment.
- **Cabinet instability:** Verify that all connections are securely tightened. Ensure the cabinet is on a level surface. Always install the anti-tip kit as instructed.
- **Doors not aligning:** Check that hinges are installed correctly and tightened. Minor adjustments may be possible with hinge screws.
- **Missing or damaged parts:** Refer to the package contents list. If parts are missing or damaged upon arrival, contact HOOBRO customer support immediately for replacements.

8. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	HOOBRO
Model Number	DW41SC01
Color	Gold + White
Material	Engineered Wood, Metal
Product Dimensions (L x W x H)	29.1" x 13.8" x 38.6" (73.9cm x 35.1cm x 98cm)
Item Weight	20.5 kg (45.2 lbs)
Number of Tiers/Shelves	5 (3 adjustable internal shelves)
Number of Doors	2
Top Weight Capacity	20 lb (9 kg)
Shelf Weight Capacity	20 lb (9 kg) per shelf
Installation Type	Freestanding (with anti-tip kit for wall mounting)
Room Type	Entryway

9. WARRANTY AND SUPPORT

HOOBRO is committed to providing quality products and customer satisfaction. For any questions, concerns, or assistance with your DW41SC01 shoe cabinet, please contact HOOBRO customer support. Details for contacting support can typically be found on the product packaging or the official HOOBRO website.