

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer 30000mAh Portable Charger UE30055PQ User Manual

Energizer UE30055PQ

Energizer 30000mAh Portable Charger

MODEL: UE30055PQ USER MANUAL

Introduction

Thank you for choosing the Energizer 30000mAh Portable Charger. This high-capacity power bank is designed to provide reliable and fast charging for your smartphones, tablets, and other USB-powered devices. Please read this manual carefully before using the product to ensure safe and optimal performance. Keep this manual for future reference.



Image: The Energizer 30000mAh Portable Charger UE30055PQ, showcasing its sleek design and compact form factor.

Safety Information

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the power bank to extreme temperatures (above 60°C/140°F) or direct sunlight.
- Do not immerse the power bank in water or other liquids.
- Avoid dropping, hitting, or disassembling the device.
- Keep out of reach of children.
- Use only certified cables and chargers for optimal performance and safety.
- If the power bank swells, emits odor, or becomes excessively hot, discontinue use immediately.

PowerSafe Management



Over-Current
Protection



Temperature
Protection



Over Charging
Protection



Short Circuit
Protection



Premium
Battery Cell

Image: Diagram illustrating the PowerSafe Management system, highlighting protections against over-current, temperature, overcharging, and short circuits, ensuring a premium battery cell.

Package Contents

Verify that all items are present in your package:

- Energizer 30000mAh Power Bank (UE30055PQ) x 1
- USB-C Cable x 1
- User Manual x 1

Product Overview and Setup

Familiarize yourself with the components of your power bank:

- **USB-A Output Port:** For charging devices that use a standard USB-A cable.
- **USB-C Input/Output Ports (x2):** For charging the power bank itself or charging devices with a USB-C cable.
- **LED Indicator Lights:** Display the remaining battery level and charging status.
- **Power Button:** Press once to check battery level or initiate charging.



22.5W
Smart USB-A



Fast charge for Android devices
from 0 to 80% in 30 minutes.

Image: Close-up view of the LED Battery Life Indicator on the power bank, showing four small lights that indicate the charging status and battery level.

Operating Instructions

1. Charging the Power Bank

Before first use, fully charge the power bank. To recharge:

1. Connect the provided USB-C cable to one of the USB-C input/output ports on the power bank.
2. Connect the other end of the USB-C cable to a USB wall charger (not included).
3. The LED indicator lights will illuminate and blink to show charging progress. All four lights will be solid when fully charged.



Image: Illustration showing the USB-C port functioning as both input and output, with text indicating 18W Rapid Recharge capability.

2. Charging Your Devices

The power bank features triple output ports (1x USB-A, 2x USB-C) to charge multiple devices simultaneously.

- **For USB-A Devices:** Connect your device's USB-A cable to the USB-A output port. This port delivers 22.5W for fast charging Android devices.
- **For USB-C Devices:** Connect your device's USB-C cable to either of the USB-C input/output ports. These ports provide up to 20W Power Delivery for fast charging iPhones and other USB-C devices.
- The power bank will automatically begin charging when a device is connected. If not, press the power button once.



Triple Devices Charging

1x USB-A port and 2x USB-C ports that can charge up to 3 devices simultaneously.



Image: The power bank connected to an iPhone and an Android phone, demonstrating simultaneous charging via its USB-A and USB-C ports.

20W Power Delivery

Fast charge the new iPhones from 0 to 50% in only 30 minutes, and other USB-C devices.



Image: An iPhone being fast-charged via the USB-C Power Delivery port, indicating 20W output.

LED Battery Life Indicator

Shows the charging status and battery level at a quick glance.



Image: An Android phone being fast-charged via the USB-A port, indicating 22.5W output.

3. LED Indicator Guide

The four LED lights indicate the power bank's battery level:

- **4 Lights Solid:** 75% - 100% charged
- **3 Lights Solid:** 50% - 75% charged
- **2 Lights Solid:** 25% - 50% charged
- **1 Light Solid:** 0% - 25% charged (recharge soon)
- **Blinking Lights:** Indicates charging in progress.

Maintenance

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- For optimal battery life, fully charge the power bank at least once every three months if not in regular use.

Troubleshooting

Problem	Possible Cause	Solution
Power bank not charging	Cable is faulty; charger is not working; power bank is fully charged.	Try a different USB-C cable and wall charger. Check LED indicators.
Device not charging from power bank	Power bank battery is low; cable is faulty; device is not compatible; power button not pressed.	Recharge power bank. Try a different cable. Ensure device is compatible. Press the power button.
Power bank charges slowly	Using a low-power charger; cable is not suitable for fast charging.	Use an 18W or higher USB-C PD charger. Ensure cable supports fast charging.
Power bank gets warm during use	Normal operation during high-speed charging; excessive load.	This is normal. If it becomes excessively hot, disconnect and allow to cool. Ensure proper ventilation.

Specifications

Feature	Detail
Model Number	UE30055PQ
Battery Capacity	30,000mAh (111Wh Max)
USB-A Output	22.5W (Max)
USB-C Output (PD)	20W (Max)
USB-C Input (PD)	18W (Max)
Product Dimensions	5.77 x 2.79 x 0.62 inches
Item Weight	1.54 pounds
Battery Type	Lithium Polymer
Special Features	LED Indicator Lights, Lightweight, Over Charging Protection, Fast Charging, Pocket Size



High Capacity

30,000mAh
power capacity
for all your
charging needs.

 **108hrs**
Smartphone

 **36hrs**
Small Tablet

 **24hrs**
Large Tablet

*Results vary based on user activity and device compatibility.

Image: Visual representation of the 30,000mAh high capacity, indicating approximately 108 hours for smartphones, 36 hours for small tablets, and 24 hours for large tablets.

Warranty and Support

This Energizer power bank comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or general inquiries, please contact Energizer customer service through their official website or the retailer where the product was purchased. Refer to the packaging for specific contact details.

© 2024 Energizer. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question