

[Manuals.plus](#) /

> [Energizer](#) /

> Energizer UE10050C 10000mAh Portable Charger Power Bank User Manual

Energizer UE10050C

Energizer UE10050C 10000mAh Portable Charger Power Bank User Manual

Model: UE10050C | Brand: Energizer

1. INTRODUCTION

Thank you for choosing the Energizer UE10050C 10000mAh Portable Charger Power Bank. This device is designed to provide reliable and extended power for your mobile devices, ensuring you stay connected on the go. Its compact and lightweight design makes it an ideal travel companion. This manual provides essential information on how to safely and effectively use and maintain your power bank.

2. SAFETY INFORMATION

Please read all safety warnings and instructions before using this product to avoid injury or damage. Keep this manual for future reference.

- Do not expose the power bank to extreme temperatures (above 60°C/140°F) or direct sunlight.
- Do not immerse the power bank in water or other liquids.
- Avoid dropping, hitting, or disassembling the device.
- Keep away from children.
- Use only original or certified cables for charging the power bank and your devices.
- Do not use the power bank if it is damaged or shows signs of swelling.
- Dispose of the power bank responsibly according to local regulations.
- This power bank meets international airline safety standards and is rated under 100Wh, making it safe for air travel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Energizer 10000mAh Power Bank (UE10050C) x1
- USB-C Cable x1 (Adapter not included)
- User Manual x1

4. PRODUCT OVERVIEW

The Energizer UE10050C features a sleek design with multiple charging ports and an LED indicator for battery status.



Image: Top-down view of the Energizer UE10050C 10000mAh Portable Charger Power Bank, showcasing its slim profile and the Energizer logo on the surface. The power bank is dark gray with a textured finish and features LED indicator lights on one side.

Ports and Indicators:

- **Dual USB-C Ports:** For both input (recharging the power bank) and output (charging devices).
- **USB-A Port:** For output (charging devices).
- **LED Battery Life Indicator:** Four small LED lights that show the remaining battery capacity and charging status.
- **Power Button:** Activates the power bank and checks battery status.



Image: The Energizer UE10050C power bank simultaneously charging three devices: a smartphone via USB-A, and two other devices via its dual USB-C ports. This illustrates its triple output capability.

5. SETUP

Charging the Power Bank:

1. Connect the supplied USB-C cable to one of the USB-C input/output ports on the power bank.
2. Connect the other end of the USB-C cable to a USB wall adapter (not included) or a computer's USB port.
3. The LED indicator lights will illuminate and blink to show the charging progress. When all four LEDs are solid, the power bank is fully charged.



Image: A close-up of the Energizer power bank with a USB-C cable plugged into one of its ports, indicating the process of recharging the power bank itself.

It is recommended to fully charge the power bank before its first use.

6. OPERATING INSTRUCTIONS

Charging Your Devices:

1. Connect your device's charging cable to the appropriate port on the power bank (USB-A or USB-C).
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. If it does not, press the power button once to activate charging.
4. The LED indicators will show the remaining battery level of the power bank during discharge.



High Capacity

10,000mAh
power capacity
for all your
charging needs.

 **36hrs**
Smartphone

 **12hrs**
Small Tablet

 **8hrs**
Large Tablet

*Results vary based on user activity and device compatibility.

Image: The Energizer UE10050C power bank positioned next to a smartphone, illustrating its high capacity and ability to provide extended hours of power for various devices like smartphones and tablets.

Checking Battery Level:

Press the power button once. The LED indicators will light up to show the current battery level:

- 4 LEDs: 75-100% charged
- 3 LEDs: 50-75% charged
- 2 LEDs: 25-50% charged
- 1 LED: 0-25% charged (recharge soon)

PowerSafe Management



Over-Current Protection



Temperature Protection



Over Charging Protection



Short Circuit Protection



Premium Battery Cell

Image: A close-up of the Energizer power bank highlighting the four small LED lights that serve as the battery life indicator, showing the charging status and remaining power at a glance.

7. MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for extended periods, charge the power bank at least once every three months to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Cable is faulty; adapter is not working; power bank is fully charged.	Try a different USB-C cable and/or wall adapter. Ensure the power bank is not already full.

Problem	Possible Cause	Solution
Device not charging from power bank	Power bank is depleted; cable is faulty; device is not compatible; power bank needs activation.	Recharge the power bank. Try a different charging cable. Ensure your device is compatible. Press the power button on the power bank.
Slow charging	Cable is not suitable; device requires higher input; multiple devices charging simultaneously.	Use a high-quality cable. Ensure the power bank's output matches your device's input requirements. Charging multiple devices may reduce individual charging speed.
LED indicators not working	Power bank is off; internal issue.	Press the power button to activate. If the issue persists, contact customer support.

9. SPECIFICATIONS

- Model:** UE10050C
- Battery Capacity:** 10000 Milliamp Hours (mAh)
- Product Dimensions:** 5.72 x 2.71 x 0.64 inches
- Item Weight:** 9.9 ounces
- Connector Type:** USB Type C, USB Type A
- Voltage:** 5 Volts
- Special Features:** Short Circuit Protection, LED Indicator Lights, Lightweight, Over Charging Protection, Pocket Size
- Manufacturer:** Tennrich International Corp.
- Date First Available:** February 22, 2024

10. WARRANTY AND SUPPORT

The Energizer UE10050C Portable Charger Power Bank comes with a 1-year warranty. For technical support, warranty claims, or general inquiries, please visit the official Energizer website or contact their customer service department. Refer to the contact information provided in your product packaging or on the Energizer brand store on Amazon:

Energizer Store: [Visit the Energizer Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CW5TBWNQ>

More documents and user manuals: <https://manuals.plus/>