

COOCHEER QAXC180822

COOCHEER 58CC Gas Powered 4-in-1 String Trimmer & Brush
Cutter Instruction Manual

Model: QAXC180822
Brand: COOCHEER

- Introduction
- Safety Information
- Package Contents
- Setup
- Operating
- Instructions
- Maintenance
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your COOCHEER 58CC Gas Powered 4-in-1 String Trimmer and Brush Cutter. Please read this manual thoroughly before using the product and keep it for future reference. This versatile tool is designed for various landscaping tasks, including trimming weeds, cutting grass, and clearing brush.

2. SAFETY INFORMATION

Your safety and the safety of others are paramount. Always follow these safety precautions to reduce the risk of injury or damage.

General Safety Warnings:

- **Read the entire manual:** Understand all instructions and warnings before operating the tool.
- **Personal Protective Equipment (PPE):** Always wear safety glasses or goggles, hearing protection, heavy-duty long pants, long sleeves, and sturdy footwear. Gloves are also recommended.
- **Fuel Handling:** Handle gasoline with extreme care. It is highly flammable. Store fuel in an approved container in a well-ventilated area, away from ignition sources. Never refuel a hot engine.
- **Work Area:** Keep the work area clear of other people, children, and pets. Inspect the area for debris that could be thrown by the cutting head.
- **Operation:** Operate the tool only in well-ventilated outdoor areas. Do not operate when tired, ill, or under the influence of drugs or alcohol.
- **Maintenance:** Perform all maintenance as described in this manual. Disconnect the spark plug wire before performing any maintenance or adjustments.
- **Storage:** Store the tool in a secure, dry place, out of reach of children.

Warning: The brush cutter gas powered has two packages. Please verify that both packages are received before assembly. If only one package is received, contact customer service for tracking information.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure you have received the following components:

- 58CC 2-Cycle Engine Unit
- Straight Shaft Assembly
- U-Handle with controls
- 2 x 0.08" Dual Line Bump Feed Head (String Trimmer Head)
- 1 x 3T Brush Cutter Blade
- 1 x Circular Saw Blade
- Shoulder Strap
- Safety Guard
- Plastic Fuel Mixing Bottle
- Tool Kit for Installation (wrenches, screwdriver, etc.)
- Extra Start Pull Rope
- Extra Spark Plug
- Instruction Manual



Image: All components included in the package, including the engine, shaft, various cutting heads, tools, and accessories.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your 4-in-1 String Trimmer and Brush Cutter. Ensure the engine is off and cool before beginning assembly.

4.1 Attaching the Handle and Safety Guard

- Attach the U-handle to the shaft at a comfortable operating position using the provided clamps and screws.
- Secure the safety guard above the cutting head to protect against debris.

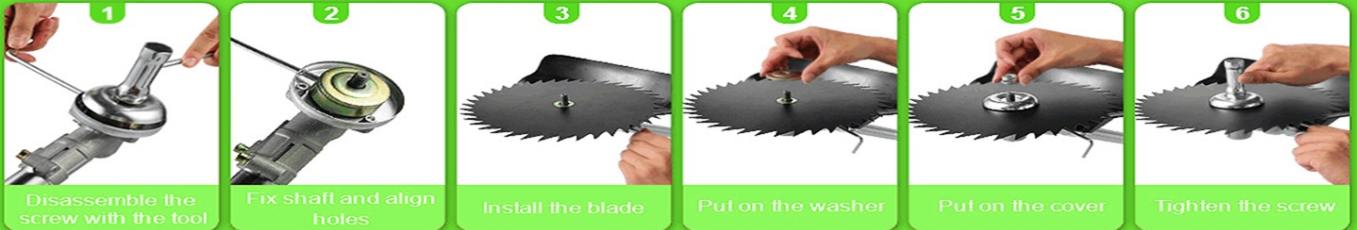


Image: Details of the adjustable U-handle, quick-release shaft, and safety guard for user comfort and protection.

4.2 Installing the Trimmer Head or Blade

The unit comes with multiple cutting heads for different tasks. Choose the appropriate head and follow the installation steps.

HOW TO INSTALL TRIMMER HEAD



STARTING PROCEDURE



Image: Visual instructions for installing the trimmer head, including disassembling the screw, fixing the shaft, installing the blade, washer, cover, and tightening the screw.

1. Disassemble the screw with the provided tool.
2. Fix the shaft and align the holes.
3. Install the desired blade (brush cutter or circular saw blade) or the dual line trimmer head.
4. Place the washer.
5. Put on the cover.
6. Tighten the screw securely.



Image: Illustration of the three types of cutting heads: 3T blade for dense grass, round saw blade for heavy bush, and dual line for lawn grass, highlighting their specific uses.

5. OPERATING INSTRUCTIONS

Before starting, ensure you have read and understood all safety warnings. Always wear appropriate PPE.

5.1 Fuel Mixing and Filling

This is a 2-cycle engine and requires a specific fuel mixture of gasoline and 2-cycle engine oil. Refer to the engine manufacturer's recommendations for the correct mixing ratio (typically 25:1 or 50:1). Use the provided mixing bottle for accuracy.

- Mix fresh unleaded gasoline with 2-cycle engine oil in the mixing bottle.

- Shake the mixture thoroughly.
- Carefully pour the mixed fuel into the fuel tank. Do not overfill.
- Securely close the fuel cap.

5.2 Starting the Engine

Follow these steps to start the COOCHEER gas weed eater:

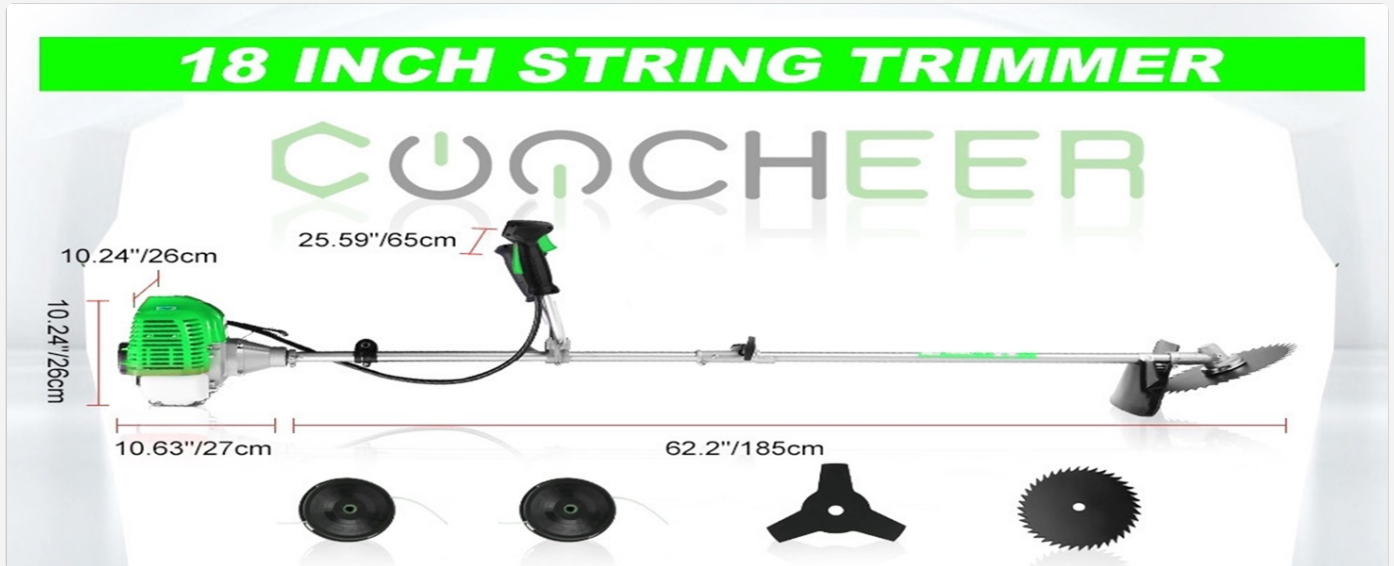


Image: Visual instructions for starting the engine, showing the ignition switch, fuel pump, choke lever, and starter cord.

1. Turn on the ignition switch.
2. Add gasoline and engine oil (if not already done).
3. Squeeze the oil bubble until the pipe is filled with oil (prime the carburetor).
4. Push the damper rod lever up (choke).
5. Pull the starter cord gently until resistance is felt, then pull quickly and firmly.
6. Once the engine attempts to start or runs briefly, push the damper rod lever down (open choke).
7. Pull the starter cord again until the engine starts.

Your browser does not support the video tag.

Video: Demonstrates the correct procedure for starting the COOCHEER gas weed eater, including switch operation, priming, choking, and pulling the starter cord.

5.3 Operating the Trimmer/Brush Cutter

Once the engine is running, allow it to warm up for a few moments. To begin cutting, press the throttle trigger. The ergonomic U-handle and shoulder strap are designed for balanced and comfortable operation.



Image: A user demonstrating the operation of the string trimmer in a garden setting, highlighting its ease of use.

Your browser does not support the video tag.

Video: Shows the COOCHEER gas weed wacker in action, demonstrating its effectiveness in clearing weeds and grass.

Your browser does not support the video tag.

Video: Illustrates the weed eater string trimmer's performance in various conditions, showcasing its cutting capabilities.

Your browser does not support the video tag.

Video: Another demonstration of the COOCHEER gas string trimmer effectively weeding a garden area.

Your browser does not support the video tag.

Video: A short preview video showing the weed wacker brush cutter in use, demonstrating its quick action.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your tool. Always turn off the engine and disconnect the spark plug wire before performing any maintenance.

6.1 Air Filter Cleaning

- Remove the air filter cover.
- Clean the air filter with warm, soapy water, rinse thoroughly, and allow it to dry completely.
- Alternatively, replace the air filter if it is heavily soiled or damaged.
- Reinstall the air filter and cover.

6.2 Spark Plug Inspection

- Remove the spark plug using a spark plug wrench.
- Inspect the electrode for wear or carbon buildup. Clean or replace if necessary.
- Ensure the spark plug gap is correct according to the specifications.
- Reinstall the spark plug and connect the wire.

6.3 Fuel System

- Regularly check fuel lines for cracks or leaks.
- If storing the tool for an extended period, drain the fuel tank or use a fuel stabilizer to prevent fuel degradation.

6.4 Cutting Head Maintenance

- Inspect trimmer lines and blades for wear or damage before each use. Replace as needed.
- Keep blades sharp for efficient cutting.

7. TROUBLESHOOTING

If you encounter issues with your COOCHEER String Trimmer/Brush Cutter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Engine does not start	No fuel, incorrect choke setting, fouled spark plug, clogged fuel filter, old fuel.	Check fuel level and mixture. Adjust choke. Clean or replace spark plug. Replace fuel filter. Use fresh fuel.
Engine runs poorly or stalls	Clogged air filter, incorrect fuel mixture, carburetor issues, loose spark plug.	Clean air filter. Ensure correct fuel mixture. Consult a service technician for carburetor. Tighten spark plug.
Lack of cutting power	Dull blade/worn trimmer line, engine running slow, incorrect cutting technique.	Replace or sharpen blade/trimmer line. Check engine speed. Adjust cutting angle.
Excessive vibration	Loose components, damaged cutting head/blade, bent shaft.	Check all fasteners. Replace damaged cutting head/blade. Contact service for bent shaft.

If the problem persists after attempting these solutions, please contact COOCHEER customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	COOCHEER

Feature	Detail
Model Number	QAXC180822
Power Source	Gas Powered
Engine Displacement	58CC
Engine Type	2-Cycle
Max Engine Speed	9300 RPM
Cutting Width (String Trimmer)	10 inches (dual line bump feed head)
Cutting Width (Brush Cutter)	18 inches (brush cutter blade)
Item Weight	14.77 Pounds
Item Dimensions (L x W)	73"L x 10"W (assembled)
Required Assembly	Yes
Recommended Uses	Landscaping, gardening, yard maintenance

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the warranty card included in your package or visit the official COOCHEER website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you have any questions or require assistance, please contact COOCHEER customer service.

© 2024 COOCHEER. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CW5Y3M7Q>

More documents and user manuals: <https://manuals.plus/>