

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OSOTEK](#) /

› [OSOTEK H200 Pro Cordless 4-in-1 Wet and Dry Vacuum Cleaner User Manual](#)

## OSOTEK H200 PRO

# OSOTEK H200 Pro Cordless 4-in-1 Wet and Dry Vacuum Cleaner

## USER MANUAL

### 1. Introduction

Thank you for choosing the OSOTEK H200 Pro Cordless 4-in-1 Wet and Dry Vacuum Cleaner. This appliance is designed to provide efficient and versatile cleaning for various floor types, combining vacuuming, mopping, washing, and drying functions. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and to maximize the lifespan of your device.

### 2. Product Overview

Familiarize yourself with the main components of your OSOTEK H200 Pro.



*Image: The OSOTEK H200 Pro vacuum cleaner, showcasing its sleek design and main body with the floor head.*

**Key Components:**

- Main Body with Handle
- Clean Water Tank (CWT)
- Dirty Water Tank (DWT)
- Roller Brush

- Floor Head Assembly
- LED Display Screen
- Charging Base
- Power Adapter

## 3. Setup and Initial Use

### 3.1 Assembly

1. Carefully unpack all components from the packaging.
2. Insert the handle into the main body until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are correctly seated in their respective compartments.

### 3.2 Initial Charging

1. Place the vacuum cleaner on its charging base.
2. Connect the power adapter to the charging base and plug it into a wall outlet.
3. The LED display will indicate charging status. For first use, fully charge the device, which typically takes several hours.

## 4. Operation

### 4.1 Filling the Clean Water Tank

- Remove the clean water tank from the main body.
- Fill the tank with clean tap water up to the MAX fill line. For enhanced cleaning, a small amount of non-foaming floor cleaning solution can be added (refer to solution instructions).
- Securely close the tank and reinsert it into the vacuum cleaner.

### 4.2 Powering On and Cleaning Modes

- Press the Power button to turn on the vacuum cleaner.
- The device will typically start in Auto mode, which intelligently adjusts suction and water flow based on floor conditions.
- Additional modes such as Boost mode for stubborn messes or Water Suction mode for liquid spills can be selected via the mode button on the handle.

### 4.3 Advanced Cleaning Features

- **180° Flat Cleaning:** The OSOTEK H200 Pro features a unique design that allows the main body to lay nearly flat, enabling easy cleaning under low-clearance furniture such as beds and sofas.



## Einfache Reinigung unter Möbeln

*Image: The OSOTEK H200 Pro demonstrating its 180-degree flat cleaning capability, allowing it to reach under low furniture.*

- **Edge-to-Edge Cleaning:** Designed with dual-sided edge cleaning, the vacuum effectively cleans along baseboards and into corners, leaving no dirty edges behind.



## Verbesserte Reinigung von Kante zu Kante

*Image: The OSOTEK H200 Pro cleaning close to a wall, illustrating its improved edge-to-edge cleaning feature.*

- **Forward Traction:** The motorized brush roll provides forward traction, making the vacuum easier to maneuver and reducing user effort during cleaning.



## Vorwärtszugkraft für mühelose Reinigung

*Image: A visual representation of the OSOTEK H200 Pro's forward traction, indicating effortless movement during cleaning.*

### 4.4 LED Display and Voice Prompts

- The integrated LED display provides real-time information on battery level, cleaning mode, and maintenance alerts.
- Intelligent voice prompts guide you through operation and alert you to necessary actions, such as emptying the dirty water tank or cleaning the brush roll.



·)) Akkustand ist niedrig, bitte aufladen.

·)) Bitte reinigen Sie den Schmutzwassertank rechtzeitig.



·)) Bitte überprüfen und reinigen Sie die Bürstenrolle.

## LED-Anzeige und intelligente Sprachansagen

*Image: Close-up of the OSOTEK H200 Pro's LED display showing battery level, mode indicators, and examples of intelligent voice prompts.*

### 4.5 Runtime and Coverage

- The OSOTEK H200 Pro offers up to 40 minutes of runtime on a single charge, capable of cleaning areas up to 250 m<sup>2</sup>.
- The clean water tank has a capacity of 0.75 liters, and the dirty water tank has a capacity of 0.64 liters.

**Reinigt effektiv bis zu 250 m<sup>2</sup>**

*Image: An illustration showing the OSOTEK H200 Pro's 40-minute runtime and the capacities of its clean (0.75L) and dirty (0.64L) water tanks.*

#### 4.6 Usage Scenarios

- The versatile design of the OSOTEK H200 Pro makes it suitable for various rooms and floor types, including kitchens, bedrooms, bathrooms, and living rooms.





*Image: A collage of images demonstrating the OSOTEK H200 Pro being used in different household environments like the kitchen, bedroom, bathroom, and for cleaning under furniture in the living room.*

## 5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

### 5.1 One-Click Self-Cleaning & Hot Air Drying

- After each use, place the vacuum cleaner on its charging base.
- Press the dedicated self-cleaning button. The device will automatically clean the roller brush and internal pipes.
- Following the self-cleaning cycle, the hot air drying function will activate, drying the roller brush to prevent odors and bacterial growth.



*Image: An illustration depicting the one-click self-cleaning and hot air drying process of the OSOTEK H200 Pro, showing hot air circulating to dry the brush.*

## 5.2 Self-Cleaning with 2-Direction Rotation

- During the self-cleaning cycle, the roller brush rotates in two directions to ensure a thorough clean, dislodging hair and debris effectively.



*Image: A diagram illustrating the two-direction rotation of the brush during self-cleaning, designed to prevent tangles and ensure thorough cleaning.*

### 5.3 Emptying the Dirty Water Tank

- After each cleaning session or when the DWT full indicator appears, remove the dirty water tank.
- Carefully empty the contents into a drain.
- Rinse the tank with clean water and allow it to air dry before reinserting.

### 5.4 Cleaning the Roller Brush

- Even with self-cleaning, it is recommended to periodically remove the roller brush for manual inspection and cleaning, especially if hair or debris is tangled.
- Use the provided cleaning tool to remove any tangled hair or debris.
- Rinse the brush under running water and allow it to air dry completely before reattaching.

### 5.5 Filter Maintenance

- The OSOTEK H200 Pro uses a HEPA filter. Periodically check the filter for dirt and debris.
- Rinse the filter under running water as needed. Ensure it is completely dry before reinserting to prevent damage to the motor.

## 6. Troubleshooting

Refer to this section for common issues and their solutions. For persistent problems, contact customer support.

Problem	Possible Cause	Solution
Device not turning on	Low battery; improper assembly	Charge the device fully; ensure handle and tanks are securely installed.
Poor suction or cleaning performance	Dirty water tank full; clean water tank empty; clogged brush roll/filter	Empty DWT; refill CWT; clean brush roll and filter.
Streaks on floor	Dirty roller brush; excessive cleaning solution; dirty water tank not emptied	Run self-cleaning cycle; clean brush roll manually; use recommended amount of solution; empty DWT.
Unpleasant odor	Dirty water tank not cleaned; roller brush not dried properly	Thoroughly clean DWT; ensure hot air drying cycle completes or manually dry brush.
Voice prompts active	System alerts for maintenance or status	Follow instructions from the voice prompt (e.g., "Akku stand ist niedrig, bitte aufladen." - Battery level is low, please charge. "Bitte reinigen Sie den Schmutzwassertank rechtzeitig." - Please clean the dirty water tank in time. "Bitte überprüfen und reinigen Sie die Bürstenrolle." - Please check and clean the brush roll.).

## 7. Specifications

Technical specifications for the OSOTEK H200 Pro.

Feature	Detail
Brand	OSOTEK
Model Number	H200 PRO
Dimensions (L x W x H)	26.8 x 23.3 x 109.9 cm
Weight	5.1 Kilograms
Clean Water Tank Capacity	0.75 Liters
Dirty Water Tank Capacity	0.64 Liters
Voltage	230 Volts
Runtime	Up to 40 minutes

Feature	Detail
Special Features	Self-cleaning and hot air drying
Filter Type	HEPA Filter
Power Source	Battery Powered (Lithium-polymer)
Recommended Surface	Various hard and soft surfaces

## 8. Warranty and Support

Your OSOTEK H200 Pro comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, spare parts, or any inquiries, please contact OSOTEK customer service through the contact information provided on the official OSOTEK website or your purchase platform.

Keep your proof of purchase for warranty claims.