

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LIORQUE](#) /

> [LIORQUE Digital Kitchen Timer Model YGH5249 Instruction Manual](#)

LIORQUE YGH5249

LIORQUE Digital Kitchen Timer Model YGH5249 Instruction Manual

Your versatile timing companion for cooking, studying, and daily tasks.

1. PRODUCT OVERVIEW

The LIORQUE Digital Kitchen Timer Model YGH5249 is a multi-functional device designed to assist with various timing needs. It features a large LCD display, adjustable alarm volume, and multiple placement options. This timer can function as a countdown timer, a count-up stopwatch, and a digital clock.



Image 1.1: Front view of the LIORQUE Digital Kitchen Timer, highlighting its large LCD screen and control buttons.

Key Features:

- **3-in-1 Functionality:** Timer, Stopwatch, and Clock modes.
- **Large LCD Display:** Ensures clear readability of time.
- **Adjustable Alarm Volume:** Three levels (Mute, Low, High) to suit different environments.
- **Custom Mode:** Save frequently used countdown times for quick access.
- **Versatile Placement:** Magnetic back, foldable stand, and lanyard hole for flexible use.
- **Delay Reminder:** Automatically starts counting up after countdown finishes.
- **Auto-Restore:** Remembers the last set countdown time.



Image 1.2: Visual representation of the timer's main features and functions.

2. SETUP AND BATTERY INSTALLATION

The timer requires 2 AAA batteries (included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover open.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The timer will power on automatically once batteries are installed.

3. OPERATING INSTRUCTIONS

3.1 Switching Modes (Timer/Stopwatch/Clock)

The LIORQUE timer offers three modes: Timer (countdown), Stopwatch (count-up), and Clock. To switch between Timer mode and Clock mode, press and hold the **ST/SP** button for 2 seconds. The timer will display the current time in Clock mode or the timer interface in Timer mode.

Digital Timer & Clock

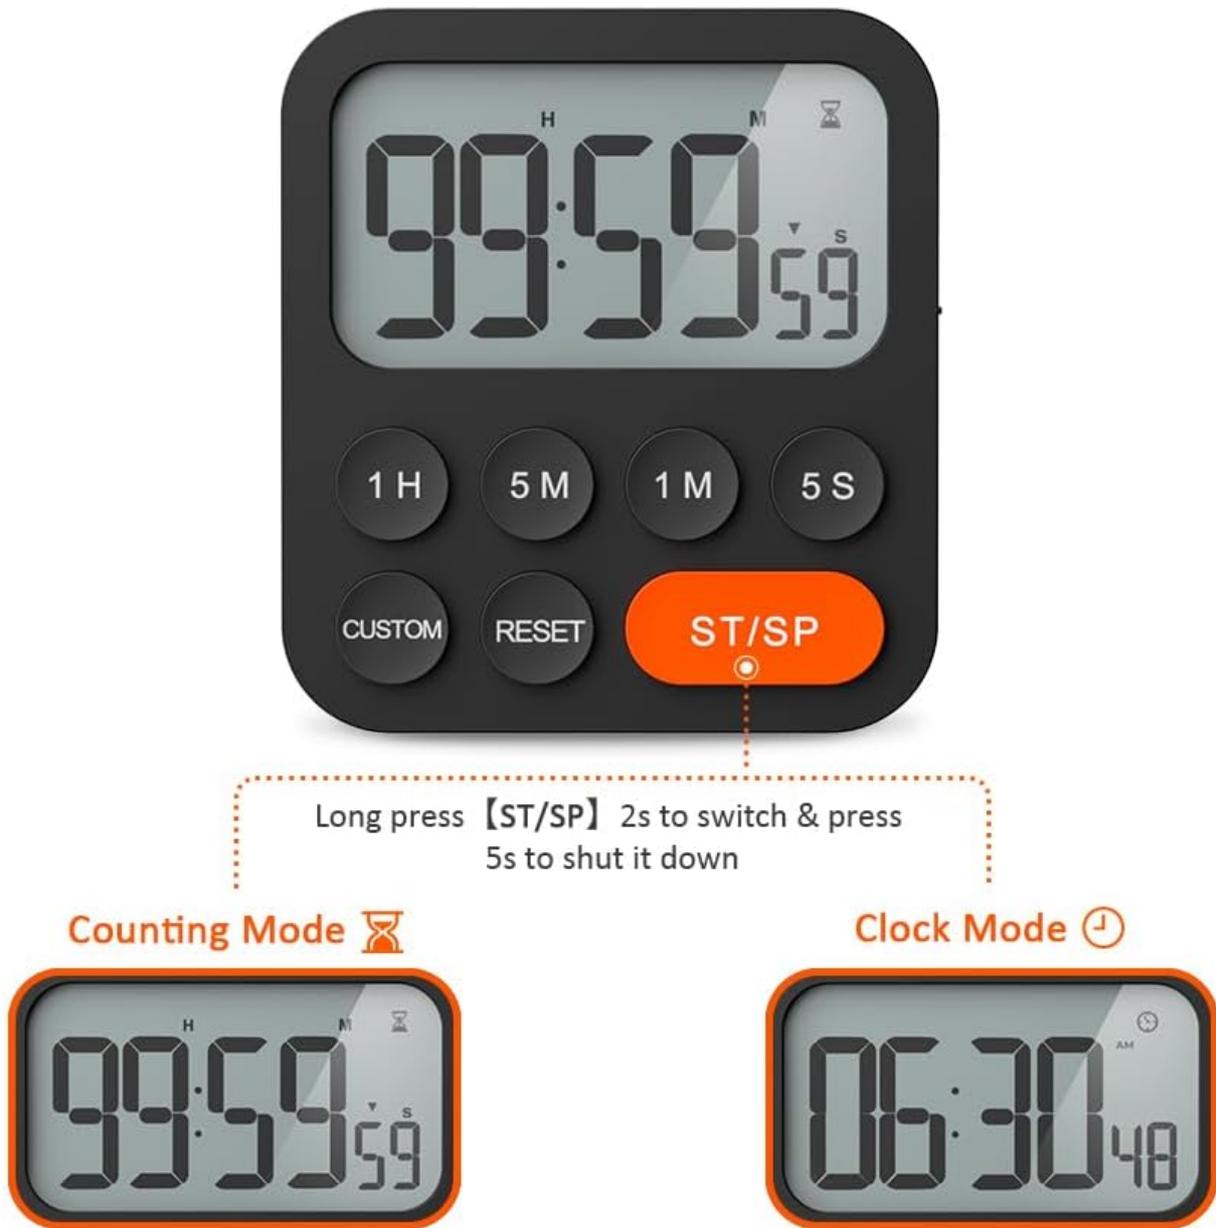


Image 3.1: Switching between Counting Mode and Clock Mode.

3.2 Setting Countdown Timer

1. Ensure the timer is in Timer mode (displaying H:M:S).
2. Use the **1H**, **5M**, **1M**, and **5S** buttons to set the desired countdown time. Each press adds the corresponding time increment.
3. Press the **ST/SP** button to start the countdown.
4. To pause the countdown, press **ST/SP** again. Press it once more to resume.
5. To reset the timer to zero, press the **RESET** button.
6. When the countdown reaches zero, the alarm will sound for 1 minute.

3.3 Using Stopwatch (Count-Up)

1. Ensure the timer is in Timer mode and reset to 00:00:00.
2. Press the **ST/SP** button to start counting up.
3. To pause the stopwatch, press **ST/SP** again. Press it once more to resume.

4. To reset the stopwatch to zero, press the **RESET** button.

Two Kinds of Counting Modes

Count up 



 Countdown



Image 3.2: Illustration of Count-up and Countdown modes.

3.4 Shortcut Setting

The timer allows for quick setting of common intervals:

- Press **1H** for 1 hour.
- Press **5M** for 5 minutes.
- Press **1M** for 1 minute.
- Press **5S** for 5 seconds.

Shortcut Setting



Press 5M-button for 2 times



Press 1M-button for 2 times

Image 3.3: Examples of using shortcut buttons for quick time setting.

3.5 Custom Mode

The Custom Mode allows you to save a frequently used countdown time for instant recall.

1. In Timer mode, set your desired countdown time using the **1H**, **5M**, **1M**, and **5S** buttons.
2. Press and hold the **CUSTOM** button for 2 seconds. The timer will remember this setting.
3. Each subsequent short press of the **CUSTOM** button will automatically load the saved time.



Custom Mode

- ① Long press **ST/SP** to enter the counting mode
- ② Short press **1H/5M/1M/5S** to set your time
- ③ Long press **CUSTOM** to save the setting



Image 3.4: Setting and recalling a custom timer value.

3.6 Adjusting Alarm Volume

The timer features a 3-level alarm volume adjustment (Mute, Low, High). A switch on the side of the timer allows you to select the desired volume level.



Image 3.5: Volume adjustment switch and its three settings.

3.7 Placement Options

The LIORQUE timer offers flexible placement options:

- **Magnetic:** Attach the timer to metal surfaces like refrigerators using its strong magnetic back.
- **Stand:** Use the integrated foldable stand to place the timer on any flat surface, such as a countertop or desk.
- **Lanyard Hole:** Hang the timer using a rope through the designated lanyard hole.



Lanyard Hole



2-powerful Magnet
& Anti-Slip Pad



Durable Stand



Durable Stand

2-powerful Magnet
& Anti-Slip Pad

Lanyard Hole

Image 3.6: Various ways to place and use the timer.

3.8 Additional Functions

- **Delay Reminder:** After a countdown finishes, the timer will automatically start counting up, indicating the elapsed time since the alarm.
- **Auto-Restore:** Once a countdown is complete and the alarm has sounded, pressing the **ST/SP** button will restore the timer to the last set countdown time, making it convenient for repetitive tasks.

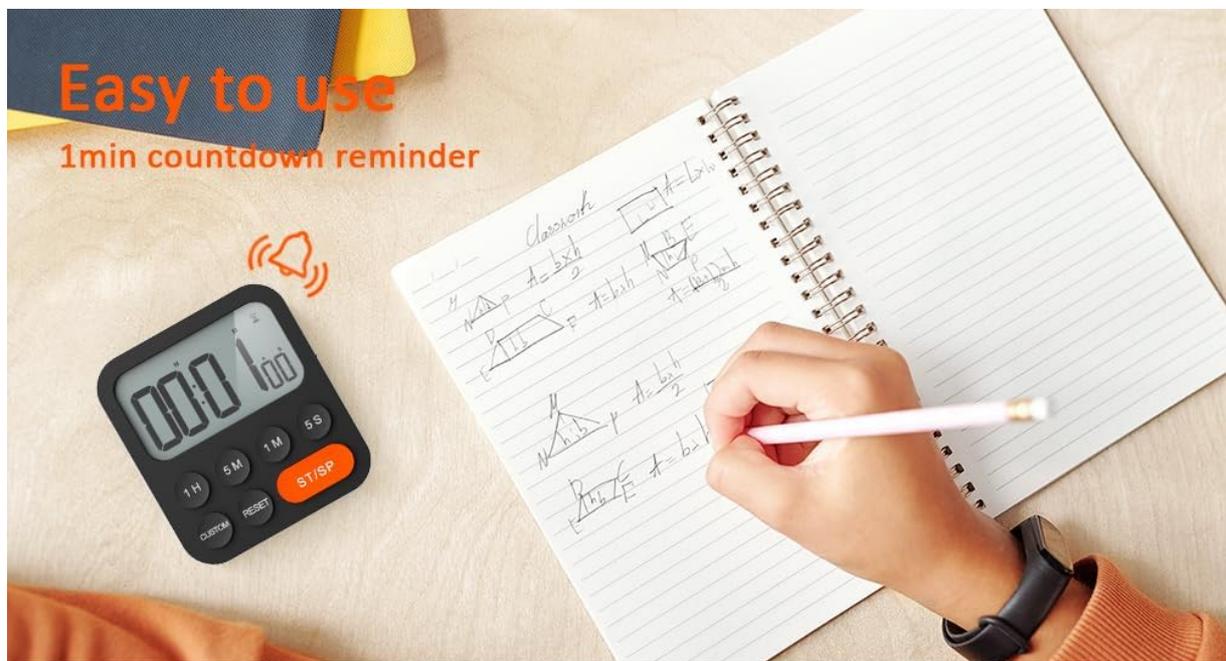


Image 3.7: Explanation of Delay Reminder and Auto-restore features.

4. MAINTENANCE

- Clean the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- Replace batteries when the display becomes dim or the timer functions erratically.
- Store the timer in a cool, dry place when not in use for extended periods.

5. TROUBLESHOOTING

- **Timer not responding:** Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
- **Alarm too quiet/loud:** Adjust the volume switch on the side of the timer to your preferred level.
- **Display is blank:** Ensure batteries are installed and functional. If the issue persists, contact customer support.

6. SPECIFICATIONS

Feature	Detail
---------	--------

Brand	LIIORQUE
Model Number	YGH5249
Color	Black
Product Dimensions	0.94"D x 0.94"H
Item Weight	4.2 ounces
Power Source	2 AAA batteries (included)
Number of Settings	3 (Volume)
Screen Size	1E+1 Centimeters

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact LIIORQUE customer service through their official website or the retailer where the product was purchased. Keep your purchase receipt for warranty claims.
