

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› **vidaXL Reclining Massage Armchair, Black Fabric - Instruction Manual**

vidaXL 374132

vidaXL Reclining Massage Armchair, Black Fabric - Instruction Manual

Model: 374132

1. PRODUCT OVERVIEW

This manual provides instructions for the assembly, operation, and maintenance of your vidaXL Reclining Massage Armchair. This armchair is designed for comfort and relaxation, featuring a manual reclining mechanism and a 6-point vibration massage function. It also includes convenient cup holders and a side pocket.



Image 1.1: The vidaXL Reclining Massage Armchair in a typical home environment.

2. SETUP INSTRUCTIONS

2.1 Unpacking

- Carefully remove all components from the packaging.
- Verify that all parts listed in the included assembly guide are present and undamaged.
- Retain packaging materials until assembly is complete in case of returns or missing parts.

2.2 Assembly

Assembly is required for this product. Please refer to the separate assembly guide provided with your purchase for detailed, step-by-step instructions. Ensure all connections are secure before use.

2.3 Power Connection for Massage Function

- The massage function is powered via a USB connection.
- A certified 5V USB power adapter is **not included** and must be purchased separately.
- Connect the USB cable from the armchair to a compatible 5V USB power adapter.

3. OPERATING INSTRUCTIONS

3.1 Reclining Function

To recline the armchair:

1. Locate the manual reclining handle on the right side of the armchair.
2. Pull the handle to release the footrest and recline the backrest.
3. Adjust the position to your desired comfort level, up to a maximum recline of 135 degrees.
4. To return to the upright position, pull the handle again and push the backrest forward with your body weight.

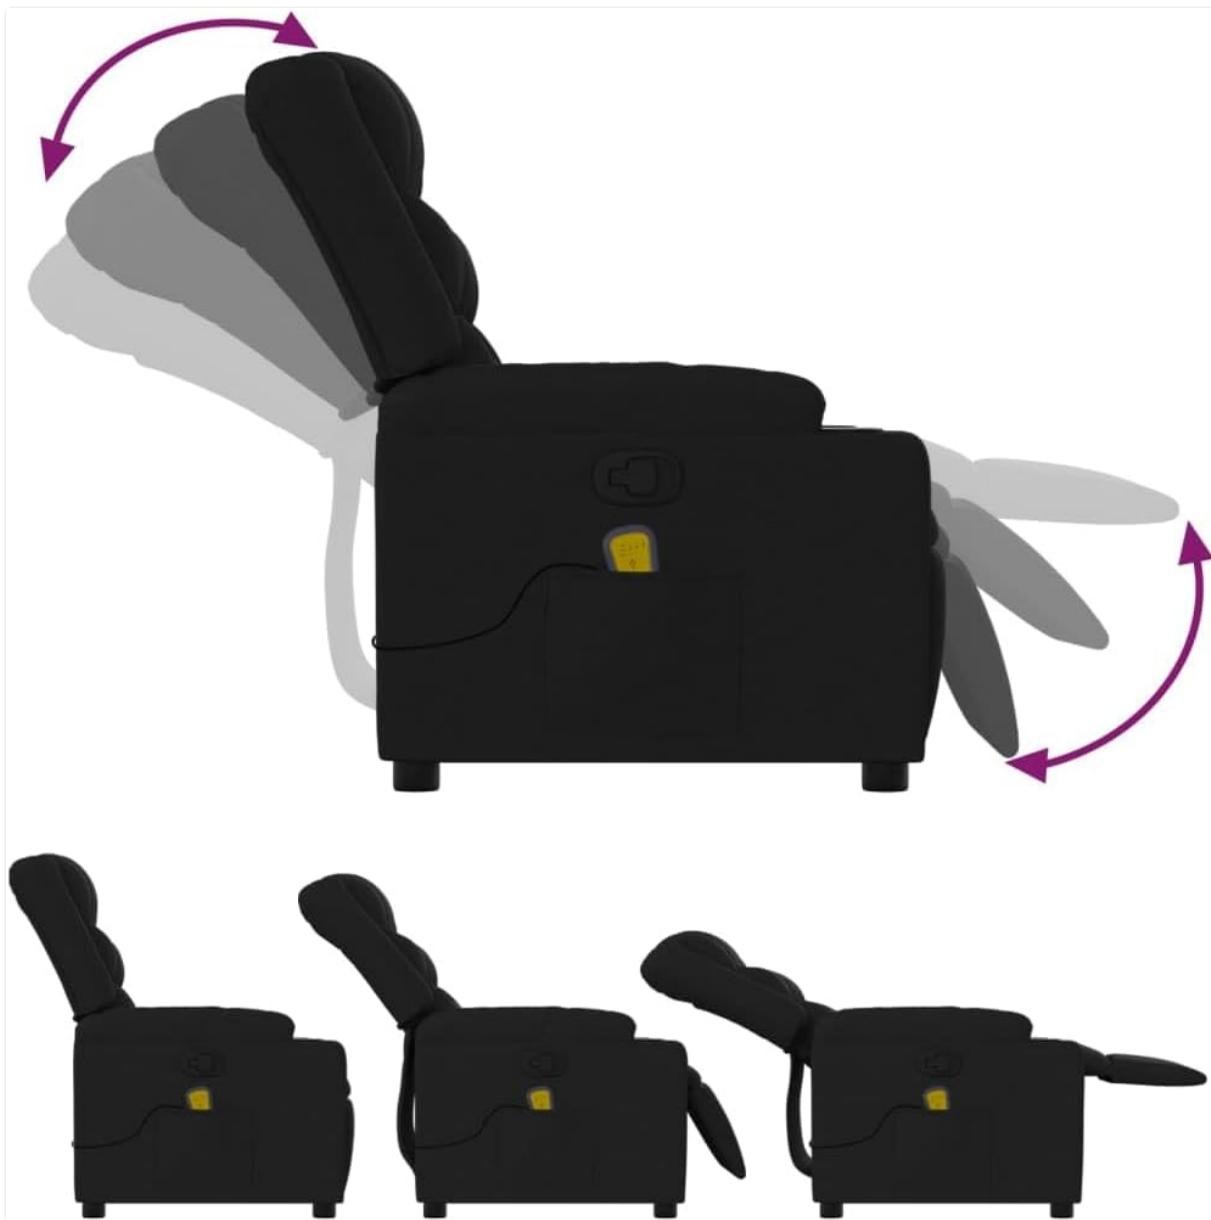


Image 3.1: Visual representation of the armchair's reclining positions.

3.2 Massage Function

The armchair features a 6-point vibration massage system for targeted relaxation.

- Ensure the armchair is connected to a 5V USB power source (adapter not included).
- Use the included remote control to select different massage programs and intensity levels.
- The massage points are strategically located to provide a comprehensive massage experience.



Image 3.2: The armchair with an overlay indicating the 6 massage points.

3.3 Cup Holders and Side Pocket

- The armchair is equipped with two convenient cup holders, one on each armrest.
- A side pocket is located on the right side of the armchair, suitable for storing the remote control or other small items.



Image 3.3: Detailed view of the remote control, cup holder, and reclining lever.

4. MAINTENANCE

4.1 Cleaning the Fabric Upholstery

- Regularly vacuum the fabric upholstery using a soft brush attachment to remove dust and loose debris.
- For spills, blot immediately with a clean, dry cloth. Avoid rubbing, as this can spread the stain.
- For stubborn stains, use a mild fabric cleaner specifically designed for upholstery. Test the cleaner on an inconspicuous area first to ensure it does not cause discoloration.
- Allow the fabric to air dry completely before using the armchair.

4.2 General Care

- Avoid exposing the armchair to direct sunlight for prolonged periods to prevent fading.
- Keep the armchair away from heat sources and excessive moisture.
- Periodically check all screws and bolts to ensure they are tight. Tighten if necessary.

5. TROUBLESHOOTING

5.1 Reclining Mechanism Not Working Smoothly

- **Check for obstructions:** Ensure there are no objects blocking the reclining mechanism or footrest.
- **Lubrication:** If the mechanism feels stiff, a small amount of silicone-based lubricant can be applied to

moving parts. Consult a professional if unsure.

5.2 Massage Function Not Activating

- **Power connection:** Verify that the USB cable is securely connected to both the armchair and a functional 5V USB power adapter.
- **Power source:** Ensure the power adapter is plugged into a live electrical outlet. Try a different USB port or adapter if available.
- **Remote control:** Check the remote control's battery (if applicable) and ensure it is functioning correctly.

6. SPECIFICATIONS

Feature	Detail
Color	Black
Material	Fabric (100% Polyester), Metal, Plywood
Filling Material	Foam, PP fibers
Dimensions (Sitting Position)	77 x 93 x 99 cm (W x D x H) / 30.3" x 36.6" x 39"
Dimensions (Reclined Position)	77 x 149.5 x 79 cm (W x D x H) / 30.3" x 58.9" x 31.1"
Seat Width	50 cm / 19.7"
Seat Depth	58.5 cm / 23"
Seat Height from Ground	43.5-44.5 cm / 17.1"-17.5"
Armrest Height from Ground	56.5 cm / 22.2"
Massage Type	6-point vibration massage
Massage Power Input	5V DC, 2A (USB connection)
Maximum Load Capacity	110 kg / 242.5 lbs
Assembly Required	Yes
Model Number	374132

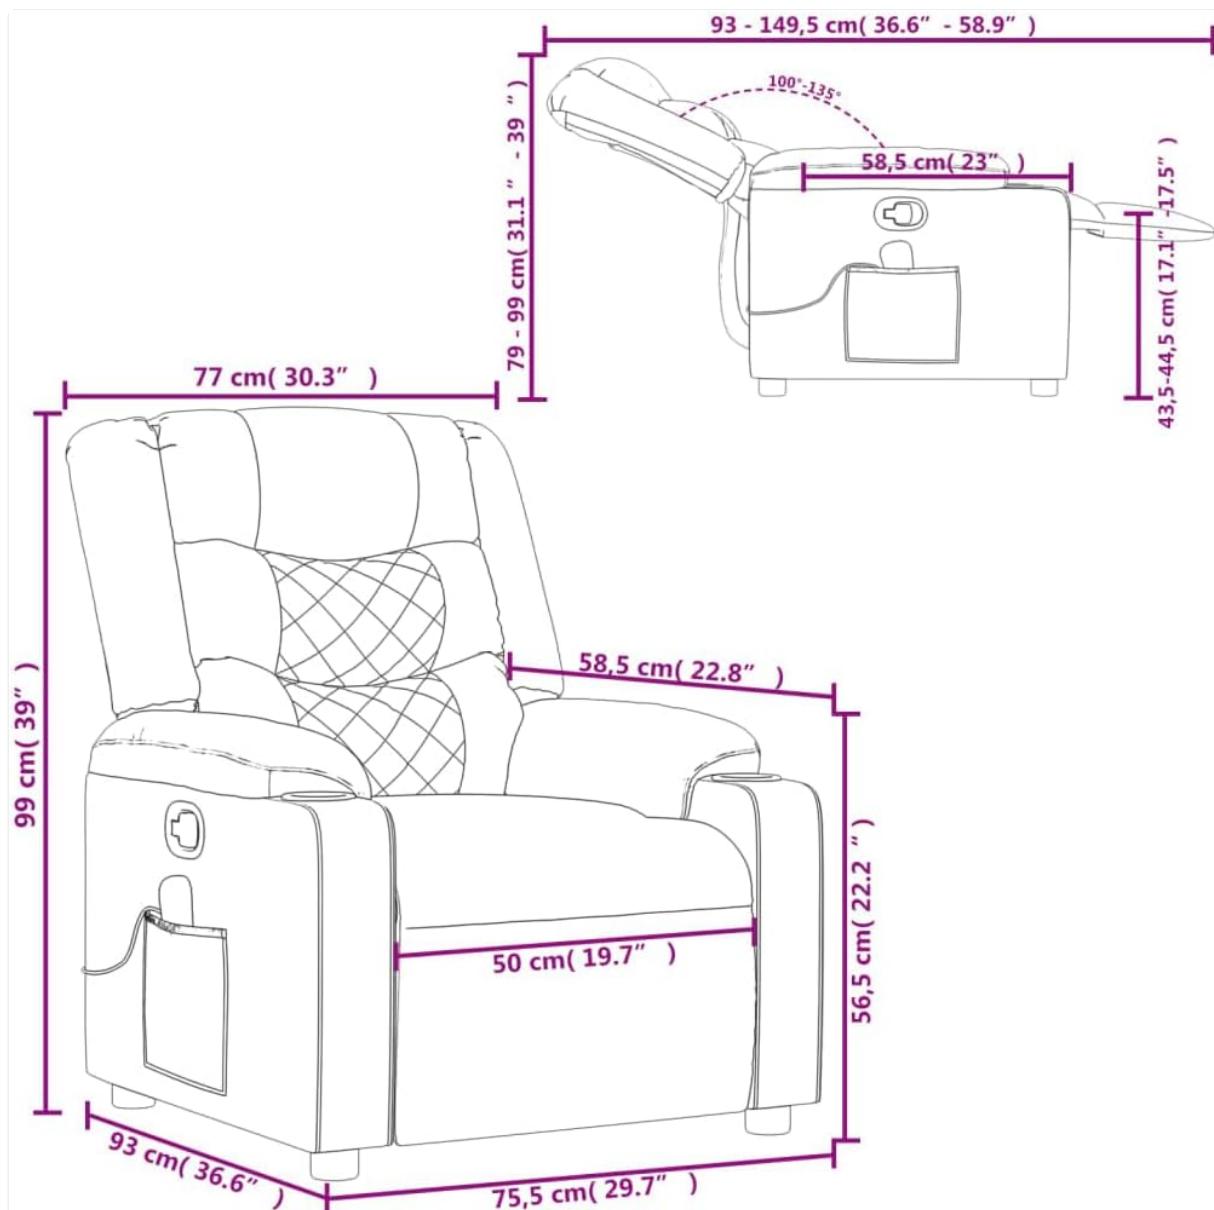


Image 6.1: Detailed dimensions of the armchair in both sitting and reclined positions.

7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the warranty card included with your purchase or contact vidaXL customer service directly. Contact details can typically be found on the manufacturer's official website or on your purchase receipt.