

QS-7805

Kimiso QS-7805 Bluetooth Speaker Instruction Manual

MODEL: QS-7805

Introduction

Thank you for purchasing the Generic Kimiso QS-7805 8-Inch 1200W Bluetooth Speaker. This powerful and versatile speaker system is designed to provide high-quality audio for various occasions, including parties and karaoke sessions. With its built-in microphone, Bluetooth connectivity, and multiple playback options, you can enjoy your favorite music and vocal performances with ease. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan.

Safety Information

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid placing the speaker near heat sources or in direct sunlight.
- Do not attempt to disassemble, repair, or modify the unit yourself. Refer all servicing to qualified personnel.
- Use only the specified charging adapter and cables.
- Keep the speaker away from children and pets.
- Ensure proper ventilation around the speaker during operation.
- Do not block any ventilation openings.
- Adjust volume to a comfortable level to avoid hearing damage.

Package Contents

Please check the box for the following items:

- Kimiso QS-7805 Bluetooth Speaker
- Wired Microphone
- Remote Control
- Charging Cable
- User Manual (this document)



Image: The Kimiso QS-7805 Bluetooth Speaker, its wired microphone, remote control, and charging cable are displayed alongside the product's retail packaging, which features the "KIMISO" logo and "QS-7805" model number.

Product Overview

Familiarize yourself with the main components and controls of your QS-7805 speaker.

- **Control Panel:** Located on the top of the speaker, featuring buttons for mode selection, playback control, volume adjustment, and input ports.
- **Speaker Grille:** Protects the 8-inch loudspeaker.
- **LED Lights:** Integrated into the speaker for dynamic visual effects.
- **Microphone Input:** For connecting the wired microphone.
- **USB Port:** For USB flash drives.
- **TF Card Slot:** For TF (microSD) cards.
- **AUX Input:** For connecting external audio devices via a 3.5mm cable.
- **Charging Port:** For connecting the charging cable.
- **Handle:** For easy portability.

Setup

1. Charging the Speaker:

Before first use, fully charge the speaker. Connect the charging cable to the speaker's charging port and the other end to a suitable power source (e.g., USB wall adapter). The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.

2. Powering On/Off:

Locate the power switch on the speaker's control panel. Flip the switch to the "ON" position to power on the speaker. You will hear an audible prompt. To power off, flip the switch to the "OFF" position.

3. Connecting the Microphone:

Insert the microphone cable into the microphone input jack on the speaker's control panel. Ensure it is securely connected.

Operating Instructions

Bluetooth Connection

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing light or audible prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "QS-7805" or a similar name from the list of devices.
4. Once connected, you will hear a confirmation sound, and the Bluetooth indicator light will become solid.
5. You can now play audio from your device through the speaker.

USB / TF Card Playback

1. Insert a USB flash drive or TF (microSD) card into the corresponding port/slot on the speaker.
2. The speaker will automatically switch to USB/TF mode and begin playing audio files.
3. Use the playback controls (Play/Pause, Next/Previous Track) on the speaker or remote control to manage your music.

FM Radio

1. Press the "Mode" button on the speaker or remote control until you hear "FM Mode" or see "FM" on the display.
2. Press and hold the "Play/Pause" button to initiate an automatic station scan. The speaker will scan and save available FM stations.
3. Use the "Next/Previous Track" buttons to navigate between saved stations.

AUX Input

1. Connect one end of a 3.5mm audio cable (not included) to the AUX input port on the speaker.
2. Connect the other end of the cable to the audio output jack of your external device (e.g., MP3 player, computer).
3. Press the "Mode" button on the speaker or remote control until you hear "AUX Mode" or see "AUX" on the display.
4. Control playback and volume from your external device.

Karaoke Function (Microphone Use)

1. Ensure the wired microphone is securely connected to the microphone input jack.
2. Play music through any mode (Bluetooth, USB, TF, AUX).
3. Adjust the microphone volume using the dedicated knob on the control panel (if available) or the main volume control.
4. Speak or sing into the microphone. Your voice will be amplified through the speaker.

TWS (True Wireless Stereo) Function

The TWS function allows you to pair two QS-7805 speakers together for a true stereo sound experience. (Requires two

QS-7805 speakers).

1. Ensure both QS-7805 speakers are powered on and not connected to any Bluetooth device.
2. On one of the speakers (this will be the primary speaker), press and hold the "TWS" button (or a similar button, refer to speaker markings) for a few seconds.
3. The speaker will search for another QS-7805 speaker. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Connection" section.
5. Audio will now play in stereo through both speakers.

LED Lights

The speaker features dynamic LED lights. These lights typically activate automatically when the speaker is powered on. Some models may have a dedicated button on the control panel or remote control to cycle through light modes or turn them off/on.

Remote Control

The included remote control allows you to conveniently operate the speaker from a distance. Functions typically include:

- Power On/Off
- Mode Selection (Bluetooth, FM, AUX, USB/TF)
- Volume Up/Down
- Play/Pause
- Next/Previous Track/Station
- Mute
- EQ Presets (if available)

Ensure the remote control has working batteries and is pointed towards the speaker's sensor for optimal performance.

Maintenance

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or dead.	Charge the speaker fully.
No sound from speaker.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase volume; Select correct input mode (Bluetooth, AUX, USB/TF); Reconnect device.
Bluetooth pairing fails.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker.	Ensure speaker is in pairing mode; Turn on device Bluetooth; Move device closer (within 10 meters).
Microphone not working.	Microphone not connected; Microphone volume too low.	Ensure microphone is securely plugged in; Increase microphone volume.
FM radio reception is poor.	Weak signal; No antenna.	Try repositioning the speaker; Ensure any external antenna (if applicable) is extended.

Specifications

Feature	Detail
Model	QS-7805
Speaker Size	8-inch
Peak Music Power Output (P.M.P.O)	1200W
Connectivity	Bluetooth, USB, TF Card, AUX
Power Source	Battery Powered (Rechargeable)
Features	Karaoke System, FM Radio, TWS Function, LED Lights, Remote Control
Product Dimensions (L x W x H)	20 x 10 x 20 cm (approximate)

Warranty and Support

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Kimiso

