

Aitek M1910

Aitek M1910 19-Inch LED Monitor User Manual

Model: M1910

1. INTRODUCTION

Thank you for choosing the Aitek M1910 19-inch LED Monitor. This manual provides essential information for the proper installation, operation, and maintenance of your new monitor. Please read this manual thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- Ensure the monitor is placed on a stable, flat surface to prevent accidental falls.
- Do not expose the monitor to rain, moisture, or extreme temperatures.
- Avoid blocking ventilation openings to prevent overheating.
- Use only the power adapter supplied with the monitor.
- Disconnect the power cable from the outlet before cleaning or if the monitor will not be used for an extended period.
- Do not attempt to repair the monitor yourself. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact your retailer.

- Aitek M1910 19-inch LED Monitor
- Monitor Stand (Base and Neck)
- Power Adapter and Cable
- HDMI Cable
- User Manual (this document)

4. PRODUCT OVERVIEW

4.1 Front View



This image displays the front of the Aitek M1910 monitor, featuring the 19-inch LED screen, slim bezels, and the Aitek logo centered on the bottom bezel. The monitor is mounted on its included stand.

4.2 Rear View and Ports



The rear view of the monitor highlights the available input/output ports and the VESA mounting holes. From left to right, the ports typically include:

- **USB Port:** For connecting USB devices or for service.
- **Audio Out (3.5mm Jack):** For connecting external speakers or headphones.
- **RCA Audio/Video Inputs (Yellow, White, Red):** For connecting older devices with composite video and stereo audio.
- **HDMI Ports (x2):** For high-definition digital video and audio input.
- **VGA Port:** For analog video input.
- **DC Power Input:** For connecting the power adapter.

The rear also features standard VESA mounting holes for wall or arm mounting.

5. SETUP

5.1 Stand Assembly

1. Carefully remove the monitor and stand components from the packaging.
2. Attach the stand neck to the monitor's rear panel, ensuring it clicks securely into place or is fastened with screws if provided.
3. Connect the stand base to the stand neck, typically by aligning and tightening a screw from the bottom of the base.

4. Place the assembled monitor on a stable, level surface.

5.2 Connecting to a Computer or Device

Choose the appropriate cable based on your computer's output ports.

- **HDMI Connection:** Connect one end of the HDMI cable to an HDMI port on your computer and the other end to an HDMI port on the monitor. HDMI transmits both video and audio.
- **VGA Connection:** Connect one end of the VGA cable to the VGA port on your computer and the other end to the VGA port on the monitor. VGA transmits video only; separate audio connection may be required if your computer has an audio output.
- **RCA Connection:** For devices with composite video (yellow) and stereo audio (white/red) outputs, connect the corresponding cables to the RCA inputs on the monitor.

5.3 Power Connection

1. Connect the power adapter cable to the DC Power Input port on the monitor.
2. Plug the power adapter into a wall outlet.

5.4 Wall Mounting (Optional)

The Aitek M1910 monitor supports VESA wall mounting. To mount the monitor on a wall or an articulating arm:

1. Remove the stand from the monitor.
2. Attach a VESA-compatible wall mount bracket (not included) to the mounting holes on the back of the monitor using appropriate screws.
3. Follow the instructions provided with your wall mount for secure installation.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- Press the power button, usually located on the bottom right bezel or rear of the monitor, to turn it on.
- Press the power button again to turn it off.

6.2 Input Source Selection

The monitor will typically auto-detect the active input. If not, or if you wish to switch inputs:

- Press the "Input" or "Source" button on the monitor (refer to the physical buttons on your monitor).
- Use the navigation buttons to select the desired input (HDMI1, HDMI2, VGA, AV).
- Press the "Menu" or "OK" button to confirm your selection.

6.3 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings.

1. Press the "Menu" button to open the OSD menu.
2. Use the navigation buttons (Up/Down or Left/Right) to browse through menu options.
3. Press "OK" or "Menu" again to enter a sub-menu or confirm a selection.
4. Use the navigation buttons to adjust values (e.g., brightness, contrast, color temperature).
5. Press the "Exit" or "Menu" button repeatedly to close the OSD menu.

Common OSD settings include:

- **Picture:** Brightness, Contrast, Sharpness, Color Temperature.
- **Audio:** Volume, Mute.
- **Input:** Source selection.
- **OSD Settings:** OSD language, OSD timeout.
- **Reset:** Restore factory default settings.

7. MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a non-ammonia, non-alcohol based screen cleaner. Do not spray cleaner directly onto the screen.
- **Cleaning the Casing:** Use a soft, dry cloth to wipe the monitor casing. Avoid abrasive cleaners.
- **Ventilation:** Ensure the ventilation holes on the back of the monitor are not obstructed to prevent overheating.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working; Monitor power button off.	Check power cable connections; Test outlet with another device; Press monitor power button.
No signal / "No Input" message	Video cable not connected; Incorrect input source selected; Computer not powered on or in sleep mode.	Ensure video cable (HDMI/VGA) is securely connected; Select correct input source via OSD; Power on computer or wake it from sleep.
Image is blurry or distorted	Incorrect resolution; Loose video cable; Monitor settings.	Set computer's display resolution to 1920x1080p; Reconnect video cable; Adjust sharpness or reset picture settings in OSD.
No sound from monitor speakers (if applicable)	Volume too low or muted; Incorrect audio output selected on computer; Audio cable not connected (for VGA).	Increase volume via OSD or computer; Ensure HDMI is used or separate audio cable is connected for VGA; Check computer's audio output settings.

9. SPECIFICATIONS

Feature	Specification
Model	Aitek M1910
Screen Size	19 Inches
Display Type	LED
Resolution	1920 x 1080p (Full HD)
Aspect Ratio	16:9
Response Time	5 Milliseconds

Feature	Specification
Refresh Rate	60 Hz
Viewing Angle	170 Degrees
Connectivity	2x HDMI, 1x VGA, 1x USB, RCA Audio/Video
Mounting Type	Wall Mount (VESA Compatible)
Special Features	Wide Viewing Angle

Note: Specifications are subject to change without notice.

10. WARRANTY AND SUPPORT

Aitek products are manufactured to high-quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific duration and terms of your warranty may vary by region and retailer.

For warranty claims, technical support, or service inquiries, please contact your original retailer or visit the official Aitek website for customer service contact information. Please have your product model number (M1910) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

