

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Hisense](#) /
- > [Hisense RT31D6ABX1 Mini-Fridge Instruction Manual](#)

Hisense RT31D6ABX1

Hisense RT31D6ABX1 Mini-Fridge Instruction Manual

Model: RT31D6ABX1 | Brand: Hisense

1. SAFETY INFORMATION

Please read all safety instructions carefully before operating your Hisense RT31D6ABX1 mini-fridge. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded electrical outlet. Do not use extension cords or adapter plugs. Unplug the refrigerator before cleaning or performing any maintenance.
- **Ventilation:** Maintain adequate space around the refrigerator for proper air circulation. Blocked vents can lead to overheating and reduced efficiency.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with flammable propellants in this appliance. Keep flammable materials and vapors away from the refrigerator.
- **Children:** Supervise children to ensure they do not play with the appliance. Keep packaging materials out of reach of children to prevent suffocation.
- **Disposal:** When disposing of the appliance, follow local regulations for the disposal of refrigerants and flammable insulation gas. Remove the doors to prevent children from becoming trapped.

2. PRODUCT OVERVIEW

The Hisense RT31D6ABX1 is a compact 3.1 cubic feet mini-fridge designed for efficient food and beverage storage. It features an independent freezer compartment and several convenient storage options.

Key Features:

- **3.1 Cubic Feet Capacity:** Ample space for snacks, beverages, and small food items.
- **Independent Freezer:** Separate compartment for frozen goods, maintaining temperatures slightly above freezing point.
- **Adjustable Thermostat:** Features 7 temperature ranges for precise cooling control.
- **Quiet Operation:** Engineered for low noise levels, ensuring a peaceful environment.
- **Reversible Door:** The door can be adjusted to open from either the left or right side to suit your space layout.
- **Adjustable Leveling Feet:** Provides stability on uneven surfaces.
- **Defrost Tray:** Collects water during the manual defrost process for easier maintenance.
- **Tempered Glass Shelf:** Durable and easy-to-clean storage surface.

- **Crisper Drawer:** Designed to maintain humidity for keeping fruits and vegetables fresh longer.
- **2-Liter Bottle Storage:** Dedicated space in the door for larger bottles.

Product Components:



Hisense RT31D6ABX1 mini-fridge interior with food items, showcasing storage capacity and organization.



Hisense RT31D6ABX1 mini-fridge interior, empty, showing shelves, crisper, and door bins.



Hisense RT31D6ABX1 mini-fridge in a kitchen setting.



Close-up of the adjustable thermostat dial inside the Hisense RT31D6ABX1 mini-fridge.



Independent freezer compartment of the Hisense RT31D6ABX1 mini-fridge.



Crisper drawer for fruits and vegetables in the Hisense RT31D6ABX1 mini-fridge.



Door storage of the Hisense RT31D6ABX1 mini-fridge, designed for 2-liter bottles.



Diagram illustrating the reversible door feature of the Hisense RT31D6ABX1 mini-fridge.

3. SETUP AND INSTALLATION

Unpacking:

- Remove all packaging materials, including foam and adhesive tape.
- Inspect the refrigerator for any shipping damage. Report any damage to your retailer immediately.

Placement:

- Place the refrigerator on a firm, level surface that can support its weight when fully loaded.
- Avoid placing the unit in direct sunlight or near heat sources like stoves, ovens, or radiators.
- Ensure adequate ventilation by leaving at least 4 inches (10 cm) of space around the sides, back, and top of the appliance.

Leveling:

The refrigerator is equipped with adjustable leveling feet. To level the unit:

1. Turn the leveling feet clockwise to raise the refrigerator or counter-clockwise to lower it.
2. Adjust until the refrigerator is stable and level. This helps reduce vibration and noise.



Adjustable leveling feet at the base of the Hisense RT31D6ABX1 mini-fridge.

Door Reversal:

The door of your Hisense RT31D6ABX1 mini-fridge is reversible, allowing it to open from either the left or right side. This feature provides flexibility for placement in various room layouts. Refer to the detailed instructions in the full user manual for the door reversal procedure.

Power Connection:

Plug the refrigerator into a dedicated 110V, 60Hz grounded electrical outlet. Do not share the outlet with other appliances.

4. OPERATING INSTRUCTIONS

Initial Startup:

1. After placing the refrigerator in its final position, allow it to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle.
2. Plug the refrigerator into the power outlet.
3. Set the thermostat to a medium setting (e.g., '4' or '5').
4. Allow the unit to run empty for 2-3 hours to reach its operating temperature before loading food.

Temperature Control:

Your mini-fridge is equipped with an adjustable thermostat, offering 7 temperature settings. The dial is typically located inside the refrigerator compartment.

- Setting '1' is the warmest, and '7' is the coldest.
- For normal use, a setting between '3' and '5' is usually sufficient.
- Adjust the thermostat based on ambient temperature, frequency of door openings, and the amount of food stored.

Food Storage Guidelines:

- **Refrigerator Compartment:** Store fresh foods, dairy products, and beverages. Ensure food is covered to prevent drying out and odor transfer.
- **Freezer Compartment:** Suitable for short-term storage of frozen items. Do not store hot food in the freezer.
- **Crisper Drawer:** Ideal for storing fruits and vegetables to maintain their freshness and moisture.
- Avoid overloading the refrigerator, as this can impede air circulation and cooling efficiency.

5. MAINTENANCE AND CLEANING

Defrosting:

The freezer compartment of this mini-fridge requires manual defrosting. Frost buildup can reduce cooling efficiency.

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from both compartments and store them in a cooler.
3. Place towels around the base of the refrigerator to absorb melting ice.
4. Allow the frost to melt naturally. Do not use sharp objects or heating devices to speed up the defrosting process, as this can damage the unit.
5. Once defrosted, clean and dry the interior thoroughly.
6. The defrost tray will collect water during this process. Empty and clean the tray.

Cleaning the Interior:

- Unplug the appliance before cleaning.
- Wash the interior surfaces, shelves, crisper drawer, and door bins with a solution of mild detergent and warm water.
- Rinse thoroughly with clean water and dry with a soft cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they can damage surfaces.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft cloth dampened with a mild detergent solution.
- Dry thoroughly.
- Regularly clean the door gaskets with warm, soapy water to ensure a proper seal.

6. TROUBLESHOOTING

Before contacting customer service, review the following common issues and their potential solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, power cord unplugged, circuit breaker tripped.	Check power supply, ensure cord is securely plugged in, reset circuit breaker.
Refrigerator is not cold enough.	Thermostat set too high (warm), door opened too frequently, poor ventilation, too much food.	Adjust thermostat to a colder setting, minimize door openings, ensure proper clearance, do not overload.

Problem	Possible Cause	Solution
Food freezes in the refrigerator compartment.	Thermostat set too low (cold).	Adjust thermostat to a warmer setting.
Excessive noise.	Refrigerator is not level, something is touching the back of the unit.	Adjust leveling feet, move the refrigerator away from walls or cabinets.
Water on the floor.	Defrost tray is full or improperly positioned, drain plug is blocked.	Empty and correctly position the defrost tray, clear any blockages in the drain.

7. SPECIFICATIONS

Feature	Detail
Brand	Hisense
Model Number	RT31D6ABX1
Color	Black
Dimensions (W x D x H)	50 x 54 x 90 cm (19.7 x 21.3 x 35.4 inches)
Capacity	3.1 Cubic Feet
Voltage	110V
Annual Energy Consumption	332 Kilowatt Hours Per Year
Special Features	Base Drawer, Compact, Energy Efficient, Low Noise, Separate Freezer
Product Weight	25 Kilograms (55.1 lbs)
Number of Doors	2
Defrost System	Manual

8. WARRANTY AND SUPPORT

Your Hisense RT31D6ABX1 mini-fridge comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including coverage duration and claim procedures.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Hisense customer service:

- **Option 1 (Phone):** 800 0088 880
- **Option 2 (Online):** Visit the official Hisense website (hisense.com.mx) and look for 'Technical Support Chat' in the bottom left corner. You can also call +55 41 53 1200.

Service Hours:

Monday - Friday: 9:00 am to 9:00 pm

Saturday: 9:00 am to 3:00 pm

9. HISENSE BRAND OVERVIEW

The following video provides a general overview of the Hisense brand and its range of products. Please note that this video is not specific to the RT31D6ABX1 mini-fridge but offers insight into the manufacturer's commitment to quality and innovation.

Your browser does not support the video tag.

Official Hisense brand overview video, showcasing various Hisense products and brand values. This video is not a specific instruction guide for the RT31D6ABX1 mini-fridge.