

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Livoo](#) /

› [Livoo DOH141 Cordless Vacuum Cleaner User Manual](#)

Livoo DOH141

Livoo DOH141 Cordless Vacuum Cleaner User Manual

Model: DOH141 | Brand: Livoo

1. INTRODUCTION

Thank you for choosing the Livoo DOH141 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The Livoo DOH141 is a versatile cordless stick vacuum designed for comprehensive home cleaning. It features a powerful 150W motor, two-speed settings, a HEPA filter, and a 40-minute runtime, offering flexibility for various cleaning tasks.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia, drain cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.

- Use extra care when cleaning on stairs.
- Store the appliance indoors. After use, put the appliance away to prevent accidents.
- Only use the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Livoo DOH141 Cordless Vacuum Cleaner.



Figure 3.1: The Livoo DOH141 Cordless Vacuum Cleaner in its full stick configuration.

Components:

- Main Motor Unit (Handheld)
- Extension Tube (Telescopic)
- Floor Brush (2-in-1 for hard floors and carpets)

- 2-in-1 Crevice Tool
- Brush Attachment for fabrics and sofas
- Wall Mount Bracket
- Power Adapter/Charger
- HEPA Filter (inside dustbin)
- Dustbin (0.55L capacity)



Figure 3.2: Included accessories: wall mount, brush, crevice tool, and charger.

4. ASSEMBLY

The Livoo DOH141 can be assembled in various configurations for different cleaning needs.

4.1. Assembling the Stick Vacuum

1. Insert the extension tube into the main motor unit until it clicks securely into place.
2. Attach the floor brush to the other end of the extension tube, ensuring it clicks firmly.



Figure 4.1: The vacuum cleaner can be conveniently stored on its wall mount.

4.2. Assembling the Handheld Vacuum

1. Detach the extension tube from the main motor unit by pressing the release button.
2. Attach either the 2-in-1 crevice tool or the brush attachment directly to the main motor unit until it clicks.



Figure 4.2: Using the Livoo DOH141 in handheld mode for upholstery.



Figure 4.3: The handheld unit with crevice tool is ideal for tight spaces and corners.

5. CHARGING THE BATTERY

The Livoo DOH141 is powered by a 2200 mAh lithium battery, providing up to 40 minutes of runtime.

1. Ensure the vacuum cleaner is turned off.
2. Connect the power adapter to the charging port on the main motor unit.
3. Plug the power adapter into a suitable wall outlet.
4. The charging indicator light will illuminate, indicating that the battery is charging.
5. A full charge takes approximately 5 hours. The indicator light will change or turn off once charging is complete.
6. Do not overcharge the battery. Unplug the charger once the battery is fully charged.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off and Speed Selection

1. To turn on the vacuum cleaner, press the power button located on the main motor unit. It will start in the default speed mode.
2. To switch between the two available speeds (standard and max), press the speed selection button.
3. To turn off the vacuum cleaner, press the power button again.

6.2. Using the Floor Brush

The 2-in-1 floor brush is designed for effective cleaning on both hard floors and carpets. Guide the vacuum cleaner across the surface, ensuring the brush roll makes contact with the floor.

6.3. Using Attachments

- **2-in-1 Crevice Tool:** Ideal for cleaning narrow gaps, corners, and hard-to-reach areas.
- **Brush Attachment:** Suitable for cleaning upholstery, curtains, and other delicate surfaces.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Livoo DOH141.

7.1. Emptying the Dustbin

Empty the 0.55L dustbin regularly, preferably after each use, or when the MAX fill line is reached.

1. Ensure the vacuum cleaner is turned off and disconnected from the charger.
2. Locate the dustbin release button on the main motor unit.
3. Press the button to detach the dustbin.
4. Hold the dustbin over a trash can and open the bottom flap to release the collected debris.
5. Close the flap and reattach the dustbin to the main motor unit until it clicks.



Figure 7.1: The transparent dustbin allows easy monitoring of fill level.

7.2. Cleaning the HEPA Filter

The HEPA filter should be cleaned regularly (e.g., monthly, depending on usage) to maintain suction power.

1. Remove the dustbin as described above.
2. Carefully remove the HEPA filter from inside the dustbin.
3. Tap the filter gently over a trash can to dislodge dust and debris.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry before reinserting **Do not use hot water or detergents.**
5. Reinsert the dry HEPA filter into the dustbin, then reattach the dustbin to the main unit.

7.3. Cleaning the Brush Roll

Periodically check the floor brush roll for tangled hair or debris. Use scissors to cut away any tangled hair and remove it.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
	Power button not pressed correctly.	Ensure the power button is pressed firmly.

Problem	Possible Cause	Solution
Low suction power.	Dustbin is full.	Empty the dustbin.
	HEPA filter is clogged.	Clean or replace the HEPA filter.
	Nozzle or extension tube is blocked.	Check and clear any blockages.
Brush roll not spinning.	Hair or debris tangled in brush roll.	Clean the brush roll.

9. SPECIFICATIONS

Feature	Specification
Brand	Livoo
Model Number	DOH141
Power/Wattage	150 W
Voltage	22.2 V
Suction Power	10 kPa / 100 Air Watt
Number of Speeds	2
Battery Type	2200 mAh Lithium Battery
Runtime	Up to 40 minutes
Charging Time	Approx. 5 hours
Dustbin Capacity	0.55 L
Filter Type	HEPA Filter
Noise Level	76 Decibels
Product Dimensions	32 x 12.5 x 120 cm
Item Weight	2.1 kg
Special Features	Cordless, 2-in-1 (Stick & Handheld)
Included Components	Brushes, Filters, User Manual, Charger

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Livoo customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance or inquiries, please visit the official Livoo website or contact their support channels.



