

[Manuals.plus](#) /

› [Aspiron](#) /

› Aspiron 4000PSI Electric High Pressure Washer User Manual

Aspiron AS-TH002

Aspiron 4000PSI Electric High Pressure Washer User Manual

Model: AS-TH002

1. PRODUCT OVERVIEW

The Aspiron 4000PSI Electric High Pressure Washer is designed for efficient and effortless cleaning of various outdoor surfaces. Its powerful motor and versatile nozzle system make it ideal for tasks such as car washing, patio cleaning, and floor maintenance.



Figure 1: Aspiron 4000PSI Electric High Pressure Washer and included accessories.

Key Features:

- **Powerful Cleaning:** 1800W motor delivering up to 4200 PSI for effective dirt and grime removal.
- **Versatile Nozzles:** Includes four quick-connect metal spray nozzles (0°, 15°, 25°, 40°) for various cleaning tasks.
- **Foam Cannon:** Integrated foam cannon for applying detergent and creating rich foam for thorough cleaning.
- **Total Stop System (TSS):** Automatically shuts off the pump when the trigger is not engaged, saving energy and prolonging pump life.
- **Safety Features:** Equipped with a GFCI circuit breaker and copper-core motor with overheating protection for enhanced safety.
- **Convenient Storage:** Features a built-in hose reel, spray gun rack, power cord hook, and nozzle holder for organized storage.
- **Extended Reach:** Comes with a 20 ft high-pressure hose and a 35 ft power cord for wide cleaning coverage.

2. SETUP GUIDE

Follow these steps to assemble and prepare your pressure washer for use.

2.1 Assembly

1. Attach the handle to the main unit using the provided screws. Ensure it clicks securely into place.
2. Assemble the hose reel components and attach them to the designated slot on the unit.
3. Connect the high-pressure hose to the pressure washer's outlet and the spray gun.
4. Attach the desired quick-connect nozzle to the spray gun.
5. If using the foam cannon, fill it with appropriate detergent and attach it to the spray gun.

2.2 Connections

- Connect your garden hose to the water inlet on the pressure washer. Ensure a tight connection to prevent leaks.
- Plug the power cord into a grounded electrical outlet. The GFCI circuit breaker should be tested before each use.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the pressure washer's operation for effective and safe cleaning.

3.1 Starting the Unit

1. Ensure all connections are secure and the water supply is turned on.
2. Turn the pressure washer's main switch to the

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question