

[Manuals.plus](#) /

› [AIIONP](#) /

› AIIONP Squeegee for Window Cleaning with Spray User Manual

AIIONP AIi6987

AIIONP Squeegee for Window Cleaning with Spray User Manual

Model: AIi6987

1. INTRODUCTION

Thank you for choosing the AIIONP Squeegee for Window Cleaning with Spray. This innovative 3-in-1 tool is designed to simplify your window cleaning tasks, offering a dual-sided mist spray, retractable pole, and effective cleaning capabilities. Please read this manual thoroughly before use to ensure safe and optimal performance.



Figure 1.1: AIIONP Squeegee for Window Cleaning with Spray and included microfiber cloths.

2. SAFETY INFORMATION

- Always ensure the pole is securely locked when extended to prevent accidental retraction.
- Do not use abrasive cleaning agents that may damage the squeegee blade or window surfaces.
- Keep out of reach of children and pets.
- Avoid using the squeegee on extremely hot or cold glass, as this may cause damage.
- Do not attempt to clean windows from unsafe positions. Use the retractable pole to reach high areas safely.

3. PRODUCT COMPONENTS

The AIIONP Squeegee for Window Cleaning with Spray includes the following main components:

- Squeegee Head with integrated spray nozzle and dual scraping bars.
- Retractable Pole (extends up to 130cm/51.12in).
- Microfiber Scrubber Pads (quantity varies by package, e.g., 3 included with this model).
- Water/Cleaning Solution Reservoir.

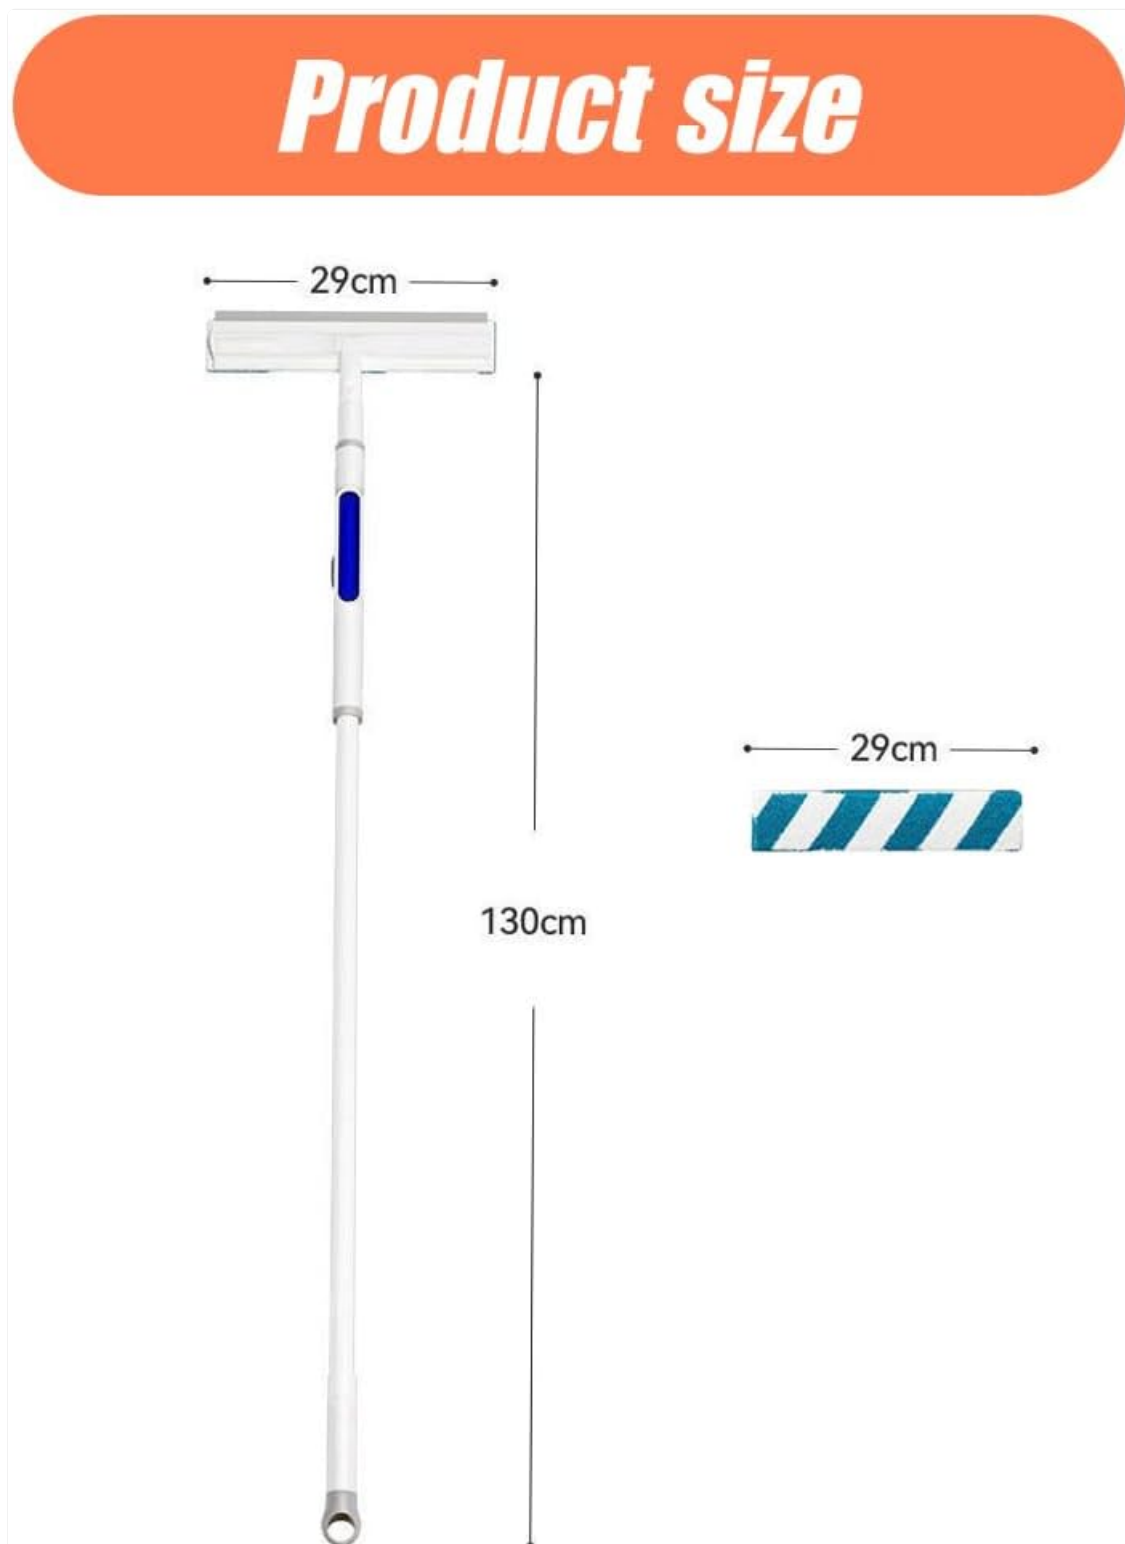


Figure 3.1: Product dimensions. The squeegee head is 29cm wide, and the pole extends up to 130cm.

4. SETUP

1. **Attach Microfiber Pad:** Align the microfiber scrubber pad with the squeegee head and firmly press it onto the hook-and-loop fasteners until secure.
2. **Fill Reservoir:** Locate the water/cleaning solution reservoir cap on the squeegee handle. Open the cap and fill the reservoir

with clean water or your preferred window cleaning solution. Close the cap securely to prevent leaks.



Figure 4.1: Filling the cleaning solution reservoir.

3. **Extend Pole (Optional):** To extend the pole, twist the locking mechanism counter-clockwise, pull the pole to the desired length, and then twist clockwise to lock it in place. Ensure it is firmly locked before use.



Figure 4.2: Using the telescopic rod for high and low glass cleaning.

5. OPERATING INSTRUCTIONS

Follow these steps for effective window cleaning:

1. **Spray Cleaning Solution:** Point the squeegee head towards the window surface. Press the spray button located on the handle to release a fine mist of water or cleaning solution onto the glass. The fan-shaped spray ensures even coverage.
2. **Scrub with Microfiber Pad:** Use the microfiber scrubber pad to gently scrub the window surface, loosening dirt and grime. The dual-sided design allows for effective cleaning.
3. **Squeegee Clean:** Flip the squeegee head to use the rubber blade. Starting from the top of the window, apply even pressure and pull the squeegee downwards in a straight, overlapping stroke. For best results, wipe the blade clean after each stroke with a separate cloth. The dual scraping bars (front and rear) facilitate both downward and upward scraping, minimizing drips.



Figure 5.1: Detail of the dual scraping bars.

4. **Versatile Use:** This tool is suitable for various glass surfaces, including windows, mirrors, glass doors, shower enclosures, and car windows.



Scope of use



Figure 5.2: Scope of use for the AIIONP Squeegee.

Demonstration Video

Your browser does not support the video tag.

Video 5.1: Official product demonstration showing the squeegee's spray, scrub, and wipe functions on windows.

6. MAINTENANCE

- **Clean Microfiber Pads:** After each use, remove the microfiber scrubber pads and wash them with mild soap and water. They are reusable and can be machine washed. Allow them to air dry completely before reattaching or storing.
- **Empty Reservoir:** Empty any remaining cleaning solution from the reservoir after use to prevent residue buildup. Rinse the reservoir with clean water if necessary.
- **Clean Squeegee Blade:** Wipe the rubber squeegee blade with a damp cloth to remove any dirt or residue. Ensure the blade is clean and free of debris for streak-free results.
- **Storage:** Store the squeegee in a clean, dry place, away from direct sunlight and extreme temperatures. The retractable

design allows for compact storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Sprayer not working or weak mist.	Reservoir empty; Nozzle clogged; Spray button mechanism issue.	Refill reservoir; Clean nozzle with a small brush or pin; Ensure spray button is fully depressed.
Streaks left on window.	Dirty squeegee blade; Damaged blade; Uneven pressure; Insufficient cleaning solution.	Clean blade after each stroke; Inspect blade for damage and replace if necessary; Apply consistent pressure; Ensure adequate cleaning solution is applied.
Pole not extending/retracting smoothly.	Locking mechanism not fully disengaged/engaged; Dirt in pole mechanism.	Ensure locking mechanism is twisted completely; Clean pole sections if visible dirt is present.
Microfiber pad not staying attached.	Hook-and-loop fasteners worn out or dirty.	Clean fasteners; Replace microfiber pad if fasteners are no longer effective.

8. SPECIFICATIONS

Feature	Detail
Brand	AIIONP
Model Number	AI6987
Product Dimensions	13"W x 51.12"H (33cm W x 130cm H when fully extended)
Blade Material	Rubber
Handle Material	Plastic
Color	White (with blue accents, as per product images)
UPC	751031419575
Country of Origin	China

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your AIIONP Squeegee for Window Cleaning with Spray, please contact AIIONP customer service through the retailer where you purchased the product or visit the official AIIONP store page on Amazon:

[Visit the AIIONP Store on Amazon](#)

Please retain your proof of purchase for any warranty claims or support inquiries. Specific warranty details may vary by region and retailer.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question