

[Manuals.plus](#) /

› [CHIC HOUSE](#) /

› CHIC HOUSE CURLIN Full Size Pull Out Sofa Bed Instruction Manual

CHIC HOUSE CURLIN

CHIC HOUSE CURLIN Full Size Pull Out Sofa Bed Instruction Manual

Model: CURLIN (Full Size, Corduroy Beige)

1. INTRODUCTION

Thank you for choosing the CHIC HOUSE CURLIN Full Size Pull Out Sofa Bed. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before use and retain them for future reference.



Image 1.1: The CHIC HOUSE CURLIN sofa bed shown as a sofa and extended into a bed.

The CURLIN sofa bed is designed for versatility, offering a comfortable seating area and a convenient full-size bed. It features a durable construction, integrated USB charging ports, LED lighting, and cup holders to enhance your living space.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Keep the sofa bed away from open flames, heaters, and other high heat sources to prevent fire hazards.
- Ensure children and pets are supervised around the sofa bed, especially during conversion, to avoid entrapment risks.
- Always follow the assembly instructions carefully to ensure the sofa bed is stable and safe for use.
- Do not exceed the maximum weight limit of 500 pounds (227 kg) on the sofa or the extended bed.
- Avoid standing or jumping on the sofa bed frame.
- Periodically check all fasteners to ensure they remain tight. Retighten as necessary.

3. PACKAGE CONTENTS

Your CHIC HOUSE CURLIN sofa bed is delivered in two separate packages. These packages may arrive at different times. Please ensure you have received both packages before beginning assembly.

Comfort Mode

Position the back and seat cushions as shown for comfortable back support.



Image 3.1: Illustration of the sofa bed components arriving in two packages.

The packages should contain the following components:

- Sofa frame components
- 3-inch memory foam mattress
- Two throw pillows
- Hardware kit (screws, bolts, washers)
- Assembly tools (if applicable, usually an Allen wrench)

If any parts are missing or damaged, please contact CHIC HOUSE customer support immediately.

4. SETUP AND ASSEMBLY

Assembly is required for this product. It is recommended that at least two people assist with assembly due to the weight and size of the components, although it can be done by one person. All necessary tools are included.

4.1 Initial Preparation

1. Unpack all components from both boxes and lay them out on a clean, soft surface (e.g., a rug or blanket) to prevent scratches.
2. Identify all parts against the parts list provided in your package.
3. Locate the back cushions and the USB strip/red cord within the armrests.



Image 4.1: Steps to access the USB strip and back cushions from the armrests. Flip the armrest, take out the back cushion, pull out the USB strip/red cord, then reattach the Velcro-lined black fabric.

4.2 Frame Assembly

Follow the detailed step-by-step instructions provided in the separate assembly guide included in your packaging. Generally, this involves:

- Attaching the backrest to the seat base.
- Securing the armrests to the main frame.
- Installing the sofa legs.
- Ensuring all connections are tight and secure.

4.3 Mattress and Cushion Placement

1. Once the frame is assembled, place the 3-inch memory foam mattress onto the pull-out bed mechanism.
2. Position the seat and back cushions onto the sofa.
3. Place the two throw pillows as desired.

5. OPERATING INSTRUCTIONS

The CHIC HOUSE CURLIN sofa bed offers multiple functionalities for various scenarios.

5.1 Converting from Sofa to Bed

The sofa features a quick-fold mechanism for easy conversion. To convert the sofa into a bed:

1. Remove all cushions and pillows from the sofa.

2. Grasp the handle or strap located at the front of the seat base.
3. Pull the mechanism outwards and upwards to unfold the bed frame.
4. Lower the bed frame until it is fully extended and stable.
5. To convert back to a sofa, reverse these steps, ensuring the mechanism locks securely into place.



3.5-Inch Cup Holders

Multifunctional and comfortable, adapt different life styles.

Image 5.1: Visual guide for the quick-fold mechanism to open and close the sofa bed.

5.2 Multifunctional Features

- **USB Charging Ports:** Located on the armrests, these ports allow you to charge your electronic devices conveniently. Connect the power cord from the sofa to a wall outlet.
- **Night-time Lighting Strips:** Integrated LED lighting strips are located beneath the sofa. Activate them for ambient lighting, particularly useful when the bed is extended.
- **Cup Holders:** Dual cup holders are built into the armrests for easy access to beverages.



CHIC HOUSE – CURLIN

Corduroy Sleeper Sofa

Image 5.2: Details of the integrated USB charging ports, 3.5-inch cup holders, solid wood frame, and cushioned armrest pillow.

5.3 Sofa States for Various Scenarios

The CURLIN sofa bed adapts to four primary usage modes:



High Density Foam Cushions

Enhanced Comfort and Durability

Image 5.3: The four sofa states: Standard Mode (compact sofa), Comfort Mode (reclined sofa bed with back support), Nightlight Mode (extended bed with LED lights on), and Sleep Mode (fully extended bed for sleeping).

- **Standard Mode:** The sofa is in its compact, upright position for daily seating.
- **Comfort Mode:** Adjust the back and seat cushions as shown in the diagram to create a reclined position, ideal for lounging or reading.
- **Nightlight Mode:** With the bed extended, activate the bottom LED light strip for soft illumination, useful for nighttime navigation.
- **Sleep Mode:** The bed is fully extended with the 3-inch memory foam mattress providing optimal support for sleeping.

6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your CHIC HOUSE CURLIN sofa bed.

- **Cleaning:** Wipe clean with a dry cloth. For spills, blot immediately with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cushion Care:** The seat cushion covers are removable for cleaning. The back cushions are semi-attached. Refer to the fabric care label for specific cleaning instructions for the corduroy upholstery.
- **Frame Care:** Periodically check and tighten all screws and bolts to ensure structural integrity.
- **Mattress Care:** The 3-inch memory foam mattress should be rotated regularly to ensure even wear. A mattress topper can be used for additional comfort and protection.

Ultra-Comfort Certified Corduroy Fabric

Soft, Skin-Friendly, Warm to the Touch

Image 6.1: The OEKO-TEX certified corduroy fabric, known for its soft, skin-friendly, and warm texture.

7. TROUBLESHOOTING

If you encounter any issues with your sofa bed, refer to the following common solutions:

Problem	Possible Cause	Solution
Sofa bed mechanism is stiff or difficult to operate.	Mechanism may need lubrication or adjustment; components are not aligned.	Ensure all cushions are removed before operating. Check for any obstructions. Apply a silicone-based lubricant to moving parts if necessary. Refer to the assembly guide for alignment checks.
USB charging ports are not working.	Power cord not connected; faulty connection; device incompatibility.	Ensure the sofa's power cord is securely plugged into a functional wall outlet. Check the connection of the USB strip inside the armrest (refer to Image 4.1). Try a different device or USB cable.
LED lighting strip is not illuminating.	Power cord not connected; loose connection; damaged LED strip.	Verify the main power cord is connected. Check the LED strip connection point. If the strip is visibly damaged, contact customer support.
Sofa feels unstable or wobbly.	Loose fasteners; uneven floor.	Retighten all assembly screws and bolts. Ensure the sofa is placed on a level surface. Use furniture pads if needed to stabilize.
Mattress feels too firm or uncomfortable.	Personal preference; new mattress firmness.	Allow time for the memory foam mattress to fully expand and adapt. Consider adding a mattress topper for personalized comfort.

If these solutions do not resolve the issue, please contact CHIC HOUSE customer support for further assistance.

8. SPECIFICATIONS

Below are the key specifications for the CHIC HOUSE CURLIN Full Size Pull Out Sofa Bed:



Image 8.1: Detailed dimensions of the sofa in both compact and extended bed configurations.

Feature	Detail
Brand	CHIC HOUSE
Model	CURLIN
Type	Sofa Bed
Color	Corduroy Beige
Size	Full Size
Product Dimensions (Sofa)	34"D x 63.8"W x 36"H (86.4 cm D x 162.1 cm W x 91.4 cm H)
Extended Dimensions (Bed)	63.8"L x 85.0"W x 33.1"H (162.1 cm L x 215.9 cm W x 84.1 cm H)
Item Weight	100 Pounds (45.4 kg)

Feature	Detail
Weight Limit	500 Pounds (227 kg)
Seating Capacity	3
Upholstery Fabric Type	Corduroy
Frame Material Type	Alloy Steel, Wood (FSC-certified solid wood frame)
Seat Fill Material	Foam (High-density sponge, Memory Foam)
Mattress Thickness	3 Inches (7.6 cm)
Included Components	Hardware, Mattress, 2 Throw Pillows
Additional Features	Cup Holder, LED Lighting, USB Charging Ports
Assembly Required	Yes (Includes all assembly tools)

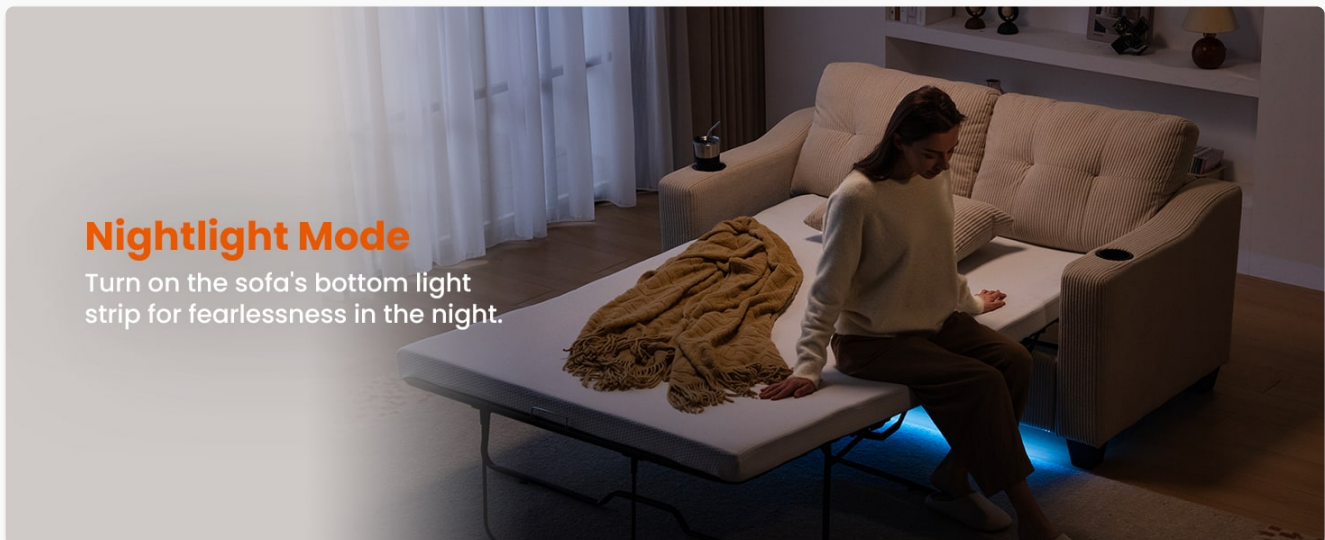


Image 8.2: The solid wood bed frame with multi-section support slats designed to disperse sleep pressure.



Image 8.3: The 3-inch memory foam mattress providing comfortable support on the sofa bed.

9. WARRANTY AND CUSTOMER SUPPORT

9.1 Warranty Information

The CHIC HOUSE CURLIN sofa bed comes with a **Lifetime Warranty**. This warranty covers manufacturing defects and ensures the quality and durability of your product. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

CHIC HOUSE is committed to providing exceptional after-sales service. If you have any questions, concerns, or require assistance with your sofa bed, please do not hesitate to contact our customer support team.

Contact Information:

- **Email:** support@chichouse.com
- **Phone:** 1-800-XXX-XXXX (Please refer to your purchase documentation for the most current phone number)
- **Website:** Visit the [CHIC HOUSE Store on Amazon](#) for FAQs and additional resources.