

MONODEAL MD706

MONODEAL MD706 Portable CD Player User Manual

Model: MD706 | Brand: MONODEAL

INTRODUCTION

Thank you for choosing the MONODEAL MD706 Portable CD Player. This versatile device combines a CD player, FM radio, and Bluetooth speaker into one compact unit, offering multiple playback options and portability for use at home, in the car, or outdoors. This manual provides detailed instructions on setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The MONODEAL MD706 Portable CD Player shown with its USB-C charging cable, AUX cable, and remote control.

WHAT'S IN THE BOX

- MONODEAL MD706 CD Player
- Type-C Charging Cable
- AUX Cable
- Remote Control
- Owner's Manual (this document)



Image: Visual representation of the items included in the product package.

KEY FEATURES

- Bluetooth 5.0 Connectivity:** Equipped with both Bluetooth transmitting (TX) and receiving (RX) functions for stable and fast connections. Connect to Bluetooth headphones, speakers, or stream music from your mobile phone, computer, or tablet.
- Multiple Playback Modes:** Supports CD, CD-R, CD-RW, MP3, WMA formats. Features FM radio (76MHz-108MHz), USB mode (up to 32GB U disk), and AUX-in mode for versatile audio playback.
- Built-in Dual Speakers:** Features 2*3W high-power speakers for clear and enjoyable audio directly from the unit.
- Remote Control:** Convenient remote control with a 10m range, offering functions like fast forward/rewind, A-B repeat, and speed adjustment, ideal for language learners and audiobook listeners.
- Rechargeable & Portable:** Built-in 2000 mAh battery provides up to 12 hours of playback (FM Radio mode) after 3-4 hours of charging. Compact design for easy portability.
- Anti-Jump Feature:** Ensures uninterrupted playback even during movement, suitable for car use or outdoor activities.
- LED Display:** Clear LED screen for intuitive operation and mode indication.

All in One Multifunction CD Player

2024

NEW



CD Player



Bluetooth



FM Radio



AUX-in Car



USB Input



HIFI Speaker



Headphone jack



Image: Overview of the MD706's multi-functionality.

SETUP

1. Charging the Device

Before first use, fully charge the MD706. Connect the provided Type-C charging cable to the DC Charging Port (14) on the back of the unit and the other end to a USB power adapter (not included). The LED display will indicate charging status. A full charge takes approximately 3-4 hours.

2. Powering On/Off

To power on the device, press and hold the Power On/Off button (15) located on the back. To power off, press and hold the same button.

3. Inserting a CD

Gently lift the CD Cover Open (13) on the top of the unit. Place a CD (CD, CD-R, CD-RW, MP3, WMA format) onto the spindle, ensuring it is seated correctly. Close the CD cover.

PERFECT GIFT FOR LOVER AND FRIENDS



Image: Demonstrates CD insertion and various connectivity options.

OPERATING MODES

1. CD Mode

After inserting a CD and powering on, the device will automatically switch to CD mode and begin playback.

- **Supported Formats:** CD, CD-R, CD-RW, MP3, WMA.
- Use the **Previous** (8) and **Next** (9) buttons to navigate tracks.
- Press **Pause/Play** (11) to pause or resume playback.
- Press **Stop** (10) to stop playback.
- The MD706 features an anti-jump function to prevent interruptions during movement.

Built in Dual Speaker with Stereo Sound



CD



CDR



HDCD



MP3



WMA



32G

Playing Modes



Repeat All



Playfirst 10s offile



Random Play



A-B repeat



Repeat a track



Play in order

Image: Illustrates supported CD formats and various playback options.

2. Bluetooth Transmit (BT TX) Mode

This mode allows the MD706 to transmit audio from a CD or USB to external Bluetooth headphones or speakers.

1. Ensure the MD706 is playing audio (e.g., a CD).
2. Put your Bluetooth headphones or speaker into pairing mode.
3. Press the **BT TX** (7) button on the MD706. The Bluetooth icon on the display will flash, indicating it's searching for devices.
4. Once connected, the Bluetooth icon will stop flashing and remain solid.

Enjoy Favorite CD with Your HIFI Devices



Image: Demonstrates Bluetooth transmitting functionality to external audio devices.

3. Bluetooth Receive (BT RX) Mode

This mode allows the MD706 to act as a Bluetooth speaker, receiving audio from your smartphone, tablet, or computer.

1. Press the **MODUS** (2) button repeatedly until "bt" appears on the display.
2. On your external device (phone, tablet), enable Bluetooth and search for "MD706".
3. Select "MD706" to pair. Once connected, you can play audio from your device through the MD706 speakers.

Enjoy Your Stream Music



Image: Illustrates Bluetooth receiving functionality from mobile devices.

4. FM Radio Mode

Listen to your favorite FM radio stations.

1. Press the **CD/FM** (4) button to switch to FM mode.
2. Extend the telescopic antenna on the back of the unit for better reception.
3. Use the **Previous** (8) and **Next** (9) buttons to tune to different frequencies.

FM RADIO 87.5-108MHz



Image: Depicts the MD706 in FM radio mode, highlighting its antenna and frequency display.

5. AUX-in Mode

Connect external audio devices using the provided AUX cable.

1. Connect one end of the AUX cable to the AUX Out Port (16) on the back of the MD706.
2. Connect the other end to the audio output of your external device (e.g., smartphone, car audio system).
3. Press the **MODUS** (2) button repeatedly until "AUX" appears on the display.
4. Play audio from your external device.



Image: Shows the MD706 connected via AUX cable, suitable for car use.

6. USB Mode

Play audio files directly from a USB flash drive.

1. Insert a USB flash drive (up to 32GB) into the USB Port (17) on the back of the MD706.
2. Press the **MODUS** (2) button repeatedly until "USB" appears on the display.
3. The device will automatically detect and play audio files from the USB drive.

CONTROLS OVERVIEW

Familiarize yourself with the buttons and ports on your MONODEAL MD706.



Image: Detailed diagram of the MD706's control panel and rear ports.

No.	Control/Port	Function
1	Standby	Enters/Exits standby mode.
2	MODUS	Switches between playback modes (CD, Bluetooth RX, USB, AUX, FM).
3	EQ	Adjusts equalizer settings (Flat, Jazz, Pop, Rock, Classic).

No.	Control/Port	Function
4	CD/FM	Switches between CD and FM radio modes.
5	VOL+	Increases volume.
6	VOL-	Decreases volume.
7	BT TX	Activates Bluetooth transmit mode for connecting external Bluetooth devices.
8	Previous	Skips to the previous track/station.
9	Next	Skips to the next track/station.
10	Stop	Stops playback.
11	Pause/Play	Pauses or resumes playback.
12	CD Dust Lid	Protective lid for the CD compartment.
13	CD Cover Open	Mechanism to open the CD cover.
14	DC Charging Port	Port for connecting the Type-C charging cable.
15	Power on/off	Powers the device on or off.
16	Earphone / AUX Out Port	Connects headphones or serves as AUX audio output.
17	USB Port	Connects USB flash drives for audio playback.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- CD Handling:** Always handle CDs by their edges to avoid fingerprints and scratches. Store CDs in their cases when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery or power adapter issue.	Charge the device fully. Ensure the charging cable and adapter are working correctly.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly. Unsupported CD format.	Clean the CD with a soft cloth. Check for deep scratches. Reinsert the CD correctly. Ensure the CD format is supported (CD, CD-R, CD-RW, MP3, WMA).
Bluetooth pairing fails.	Device not in pairing mode, too far from source, or interference.	Ensure the MD706 is in the correct Bluetooth mode (TX or RX). Place devices closer together. Turn off other Bluetooth devices to reduce interference. Refer to the "Operating Modes" section for specific pairing steps.

Problem	Possible Cause	Solution
Poor FM radio reception.	Antenna not extended or weak signal.	Fully extend the telescopic antenna. Try repositioning the device for better signal.
No sound from speakers/headphones.	Volume too low, incorrect mode, or faulty connection.	Increase volume. Ensure the correct playback mode is selected. Check AUX/headphone cable connection.

SPECIFICATIONS

- Model:** MD706
- Product Dimensions:** 7 x 5.5 x 2.4 inches
- Item Weight:** 1.85 pounds
- Connectivity Technology:** Bluetooth 5.0, AUX, USB
- Supported CD Formats:** CD, CD-R, CD-RW, MP3, WMA
- FM Radio Range:** 76MHz-108MHz
- Battery:** Built-in 2000 mAh rechargeable battery
- Playback Time:** Up to 12 hours (FM Radio mode)
- Charging Time:** 3-4 hours
- Speaker Output:** 2 * 3W

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the MONODEAL MD706 Portable CD Player.

WARRANTY AND SUPPORT

MONODEAL is committed to providing high-quality products and excellent customer service.

- Warranty:** The product comes with a 12-month replacement policy and lifetime support.
- Customer Support:** For any questions or problems, please contact MONODEAL customer service via Amazon buyer-seller messaging, available 24/7.



Image: Information regarding MONODEAL's customer support and warranty.

© 2024 MONODEAL. All rights reserved.