

VBESTLIFE VBESTLIFEtv3wu5zmgr

VBESTLIFE HD 1080p Brooch Recorder Camera User Manual

1. INTRODUCTION

This manual provides detailed instructions for the VBESTLIFE HD 1080p Brooch Recorder Camera. Please read this manual carefully before using the device to ensure proper operation and to maximize its performance and lifespan. Keep this manual for future reference.

2. PRODUCT OVERVIEW

2.1 Key Features

- **True HD Video Quality:** Records in 1920 x 1080p, capturing clear evidence with vibrant colors and details.
- **Advanced Night Vision:** Equipped with four night vision cameras that automatically switch to night vision mode for clear images in low light conditions.
- **Stable and Portable Design:** Features a back clip for easy attachment to clothing and magnets for securing to metal surfaces.
- **Versatile Connectivity:** Connects to smartphones via OTG for video playback and file management. Can also connect directly to a computer.
- **Extended Battery Life:** Built-in 1400 mAh battery provides up to 10 hours of continuous recording. Fully charges in approximately one hour.
- **Memory Expansion:** Supports up to 128GB Micro SD card (not included).

2.2 Package Contents

- 1 x Brooch Recorder Camera
- 1 x USB Cable
- 1 x User Manual

Brooch Recorder Camera



Figure 1: Front view of the VBESTLIFE Brooch Recorder Camera.



Figure 2: Back view of the camera, showing the integrated clip for attachment.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the camera. Connect the camera to a USB power adapter (not included) or a computer's USB port using the provided USB cable. The charging indicator light will show the charging status and turn off when fully charged. A full charge takes approximately 1 hour.

3.2 Inserting a Micro SD Card

The camera requires a Micro SD card (up to 128GB, not included) to store recordings. Locate the Micro SD card slot on the side of the camera. Gently insert the Micro SD card with the gold contacts facing down until it clicks into place. To remove, push the card in again until it springs out.



Figure 3: The camera and its USB charging cable.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **To Power On:** Press and hold the power button for a few seconds until the indicator light turns on.
- **To Power Off:** Press and hold the power button again until the indicator light turns off.

4.2 Recording Video

Once powered on, the camera typically starts recording automatically. The indicator light will flash to indicate

recording is in progress. Videos are recorded in 1920x1080p resolution. To stop recording, press the record button briefly. The camera will save the current file and stop recording.



Figure 4: The camera records in high definition 1920x1080p, ensuring clear video evidence.

4.3 Night Vision

The camera is equipped with four night vision cameras that automatically activate in low light conditions. This ensures clear black and white images even in complete darkness, providing continuous surveillance capabilities.

Four night vision cameras, this recorder automatically switches to black and white night vision mode

Clear images even in low light conditions, ensuring visibility in the dark



Figure 5: The camera's advanced night vision system provides clear visibility in dark conditions.

4.4 Connecting to a Smartphone (OTG)

To view or manage files on your smartphone, connect the camera using an OTG adapter (not included) and the provided USB cable. Your smartphone must support OTG functionality. Once connected, you can access the camera's storage to play back videos, delete files, or transfer them to your phone.

Connects to smartphones via OTG for video playback, deletion, and other related operations



Figure 6: Connecting the camera to a smartphone using an OTG cable for video playback and file management.

4.5 Connecting to a Computer

Connect the camera to your computer using the provided USB cable. The camera will appear as a removable disk drive. You can then access the stored video files directly from your computer for viewing, backup, or deletion.

4.6 Mounting the Camera

The camera features a back clip for easy attachment to clothing, such as a shirt pocket or lapel. It also has integrated magnets, allowing it to be securely attached to metal surfaces like stands or handlebars, providing stable and flexible shooting positions.

Stable and Portable

Back clip allows for easy attachment to clothing

Magnetically attached to metal surfaces such as stands or handlebars



Figure 7: The camera's design allows for stable attachment to clothing via its clip or to metal surfaces using magnets.

4.7 Battery Life

The camera is equipped with a 1400 mAh battery, providing up to 10 hours of continuous recording on a full charge. A full charge takes approximately 1 hour.

1400mAh battery that provides up to 10 hours of continuous recording, can be fully charged in just 1 hour



Figure 8: The 1400mAh battery provides extended recording time.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. Do not use liquid cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Resistance:** This device is not waterproof. Avoid exposure to water or high humidity.

6. TROUBLESHOOTING

6.1 Device Not Turning On

- Ensure the battery is charged. Connect the camera to a power source and allow it to charge for at least 15 minutes before attempting to power on again.
- Verify the power button is pressed and held correctly.

6.2 Not Recording Video

- Check if a Micro SD card is inserted correctly.
- Ensure the Micro SD card has sufficient free space. Delete old files or replace the card if full.
- Format the Micro SD card if it's a new card or if recording issues persist (note: formatting will erase all data).
- Ensure the battery has enough charge.

6.3 Cannot Connect to Smartphone/Computer

- Ensure the USB cable is securely connected to both the camera and the smartphone/computer.
- If connecting to a smartphone, ensure your phone supports OTG functionality and that the OTG adapter is working correctly.
- Try a different USB port or cable.
- Restart the camera and the connected device.

7. SPECIFICATIONS

Item Type	Brooch Recorder Camera
Material	ABS, Magnet
Video Resolution	1920 x 1080p
Battery	1400 mAh Lithium Battery (integrated)
Max Memory Expansion	128GB Micro SD Card (not included)
Dimensions (Package)	13 x 8 x 6 cm
Weight (Package)	157 grams
Manufacturer	VBESTLIFE
Model Number	VBESTLIFEtv3wu5zmgr
Power	1 Watt

8. WARRANTY INFORMATION

Specific warranty information for this product is not available in the provided data. Please refer to the purchase documentation or contact your retailer for details regarding warranty coverage.

9. SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact the retailer where you purchased the product or the manufacturer's customer support for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question