

[Manuals.plus](#) /

› [Luqeeeg](#) /

› Luqeeeg Mini 3-Key USB Mechanical Gaming Keypad User Manual

Luqeeeg Luqeeegi82gyn1rhm

Luqeeeg Mini 3-Key USB Mechanical Gaming Keypad User Manual

1. INTRODUCTION

Thank you for choosing the Luqeeeg Mini 3-Key USB Mechanical Gaming Keypad. This compact and versatile keypad is designed to enhance your gaming, office, and creative workflows with its programmable keys and rotary knob. Featuring durable red mechanical switches, it offers a responsive and tactile experience. This manual provides detailed instructions for setup, operation, customization, and maintenance to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The Luqeeeg Mini 3-Key Keypad is a compact input device featuring three mechanical keys and one rotary knob. It is constructed from ABS, acrylic, and metal materials, ensuring durability. The keypad connects via a USB-C data cable and is designed for various applications including gaming, office tasks, and media control.



Figure 2.1: Angled view of the Luqeeq Mini 3-Key Keypad, showing the three white keycaps and the silver rotary knob.

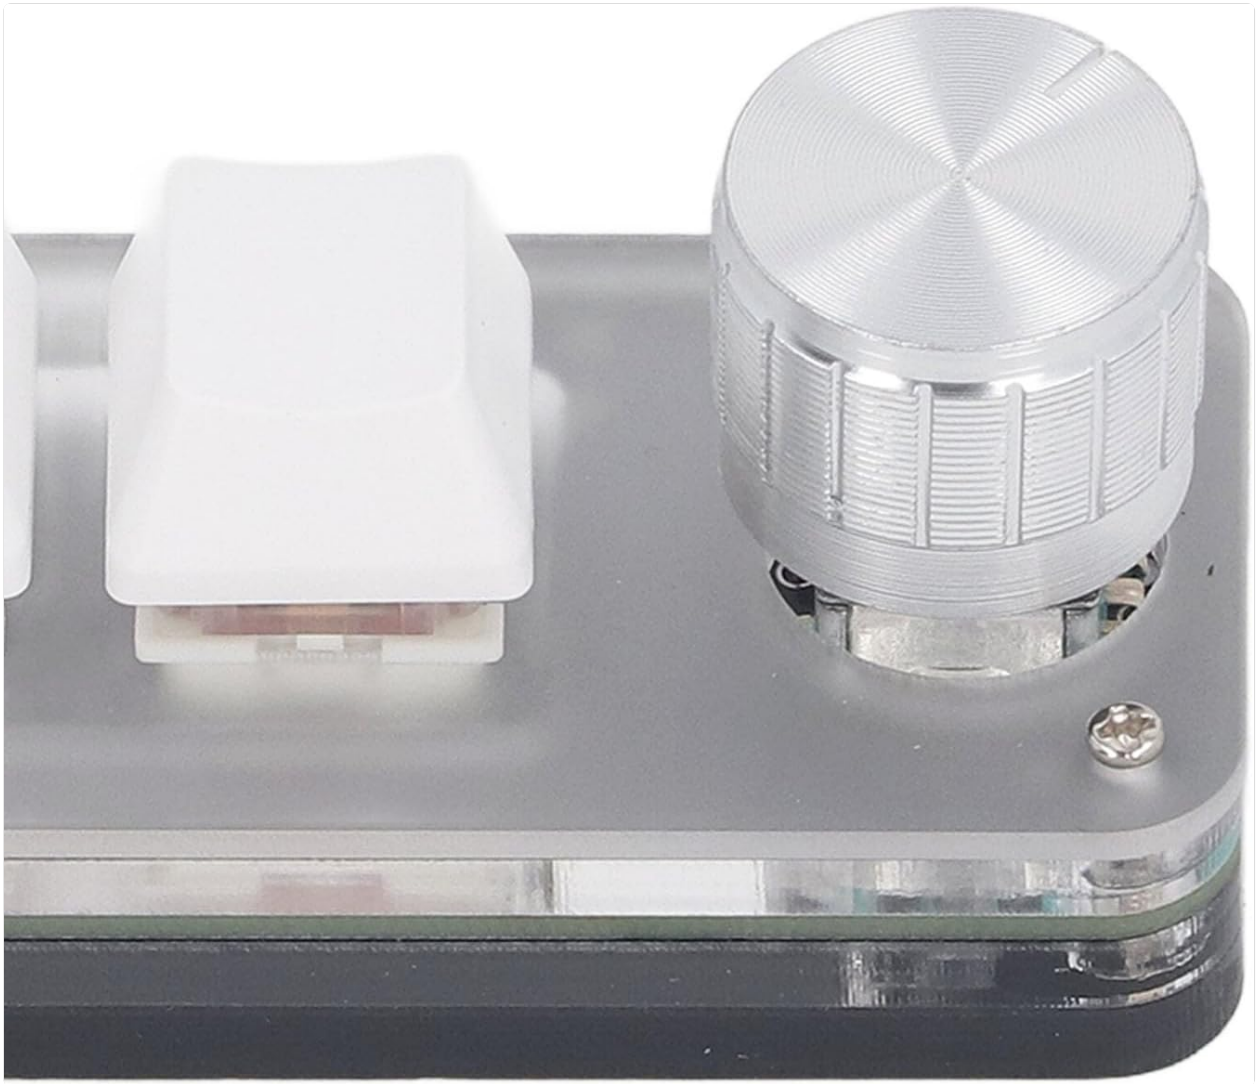


Figure 2.2: Close-up view of the silver rotary knob, highlighting its textured surface for precise control.

3. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Luqeeeg Mini 3-Key Keypad
- 1 x USB-C Data Cable
- 1 Bag x Foot Pads (4PCS)
- 1 x User Manual



Figure 3.1: The Luqeeq Mini 3-Key Keypad displayed with its USB-C data cable and a bag of four foot pads.

4. SPECIFICATIONS

Feature	Specification
Item Type	Mini 3 Key Keypad
Keyboard Switch	Red Mechanical Switch
Material	ABS, Acrylic, Metal
Working Voltage	5V 1A
Connection	USB-C Data Cable
Dimensions (Approx.)	35 x 100mm / 1.38 x 3.94in
Compatible Devices	PC
Compatible OS Family	Windows

5. SETUP

Follow these steps to set up your Luqeeq Mini 3-Key Keypad:

1. **Attach Foot Pads:** Peel off the backing from the four included foot pads and attach them to the designated corners on the bottom of the keypad. This provides stability and prevents slipping.
2. **Connect USB Cable:** Insert one end of the provided USB-C data cable into the USB-C port on the keypad.
3. **Connect to Computer:** Insert the other end of the USB-A data cable into an available USB port on your computer.
4. **Driver Installation:** The keypad is typically plug-and-play and does not require specific drivers for basic functionality. Your operating system should automatically recognize the device.

Once connected, the keypad is ready for use. For advanced customization, refer to the 'Customization and Programming' section.

6. OPERATING INSTRUCTIONS

The Luqeeq Mini 3-Key Keypad offers versatile control through its three keys and rotary knob.

6.1 Key Functions

By default, the three keys may have pre-assigned functions or act as standard keyboard keys. Their primary utility comes from their programmability, allowing them to perform various actions such as:

- Single key presses (e.g., A, B, C)
- Key combinations (e.g., Ctrl+C for Copy, Ctrl+V for Paste)
- Macro sequences

6.2 Rotary Knob Functions

The rotary knob typically supports two types of actions:

- **Rotation:** Turning the knob clockwise or counter-clockwise can be assigned to actions like volume control, scrolling, zooming in/out, or navigating through items.
- **Press:** Pressing down on the knob can be assigned to actions such as mute/unmute, play/pause, or confirming a selection.



Figure 6.1: The keypad positioned next to a main keyboard, demonstrating its use in a typical computer setup.

7. CUSTOMIZATION AND PROGRAMMING

The Luqeeq Mini 3-Key Keypad is fully programmable, allowing you to assign specific functions to each key and the rotary knob (rotation and press actions). This customization is performed using a dedicated setup program.

7.1 Programming Software

To customize your keypad, you will need to download the specific setup program provided by Luqeeq. Please refer to the product's official support page or the included manual for instructions on where to obtain this software.

7.2 Programming Steps (General)

While specific steps may vary slightly depending on the software version, the general process involves:

1. **Install Software:** Download and install the programming software on your Windows PC.
2. **Connect Keypad:** Ensure your keypad is connected to your computer via the USB-C cable.

3. **Launch Software:** Open the programming application. It should detect your keypad.
4. **Select Key/Action:** Within the software interface, select the key (Key 1, Key 2, Key 3) or rotary knob action (Rotate Clockwise, Rotate Counter-Clockwise, Knob Press) you wish to program.
5. **Assign Function:** Choose the desired function from the available options. This can include:
 - Standard keyboard keys (e.g., 'A', 'Enter', 'Space')
 - Modifier keys (e.g., 'Ctrl', 'Shift', 'Alt')
 - Multimedia controls (e.g., 'Volume Up', 'Play/Pause')
 - Macros (sequences of key presses)
 - System commands (e.g., 'Open Calculator', 'Lock Screen')
6. **Save Settings:** After assigning functions, save the settings to the keypad's onboard memory. The settings are stored directly on the device, meaning you do not need to reconfigure it when connecting to a different computer.

8. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your keypad.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keypad. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device. Avoid harsh chemicals or abrasive materials.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keycaps and around the switches.
- **Storage:** When not in use, store the keypad in a clean, dry environment away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting the USB-C cable excessively to prevent damage.

9. TROUBLESHOOTING

If you encounter issues with your Luqueeg Mini 3-Key Keypad, refer to the following troubleshooting tips:

- **Keypad Not Responding:**
 - Ensure the USB-C cable is securely connected to both the keypad and your computer.
 - Try connecting the keypad to a different USB port on your computer.
 - Test the keypad on another computer to rule out a computer-specific issue.
 - Restart your computer.
- **Keys Not Performing Assigned Functions:**
 - Verify that the programming software was used to save the settings to the keypad's onboard memory.
 - Re-open the programming software and confirm the key assignments. Re-save if necessary.
 - Ensure no other software or operating system settings are overriding the keypad's functions.
- **Rotary Knob Not Working:**
 - Check the programming software to ensure the rotary knob's rotation and press actions are correctly assigned.
 - Ensure the knob is free from obstructions and rotates smoothly.
- **Intermittent Connectivity:**

- Try using a different USB-C cable to rule out a faulty cable.
- Ensure the USB port on your computer is functioning correctly.

10. WARRANTY AND SUPPORT

Luqeeq products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your product or visit the official Luqeeq website. If you require technical assistance or have questions not covered in this manual, please contact Luqeeq customer support through the contact information provided on the product packaging or the official website.