

[Manuals.plus](#) /

› [ADEKO Kids](#) /

› ADEKO Kids Bed CPD 70x160 User Manual

ADEKO Kids CPD

ADEKO Kids Bed CPD 70x160 User Manual

Model: CPD | Brand: ADEKO Kids

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the ADEKO Kids Bed CPD 70x160. This wooden single bed is designed to provide a safe, comfortable, and durable sleeping solution for your child. Crafted from robust, smooth, sanded, and brushed wood, it features rounded edges to prevent injuries and supports up to 90 kg, making it suitable for children from 3 years of age. A sturdy slatted frame is included to ensure optimal support and healthy sleep.



Image 1.1: The ADEKO Kids Bed CPD 70x160, showcasing its natural wood finish and sturdy design within a child's bedroom setting.

2. SAFETY INFORMATION

Child safety is our utmost priority. Please adhere to the following safety guidelines:

- The bed is constructed from robust, smooth, sanded, and brushed wood to prevent splinters.
- All edges are carefully rounded to minimize the risk of injury.
- The bed is designed to support a maximum weight of 90 kg. Do not exceed this weight limit.
- This bed is suitable for children aged 3 years and older. Ensure the child is of appropriate age and development for safe use.
- Regularly inspect all bolts and connections to ensure they remain tight and secure. Loose parts can pose a hazard.
- Keep small parts and assembly tools out of reach of children during and after assembly.
- Do not allow children to jump on the bed, as this can cause damage to the frame or lead to injury.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present and undamaged:

- ADEKO Kids Bed CPD 70x160 wooden frame components.
- Robust slatted frame (included).
- Assembly kit (bolts, dowels, and necessary hardware).
- QR code for online assembly instructions.

Note: The mattress is NOT included with the bed. A mattress with dimensions of 70x160 cm and a maximum height of 12 cm is recommended. The mattress thickness should be at least 8 cm for optimal comfort and support.

4. SETUP AND ASSEMBLY

The ADEKO Kids Bed is designed for easy assembly. For detailed, step-by-step instructions, please refer to the online manual accessible via the QR code provided in your packaging. This approach is taken for ecological reasons, reducing paper waste.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the online instructions to identify each component and hardware piece.
3. **Assemble Frame:** Follow the sequence provided in the online manual to connect the bed frame components using the included bolts and dowels. Ensure all connections are secure but do not overtighten until the frame is

fully assembled.

4. **Install Slatted Frame:** Once the main bed frame is stable, place the robust slatted frame into position. Ensure it sits correctly within the designated supports.
5. **Final Tightening:** Once all parts are in place, go back and securely tighten all bolts and screws.
6. **Place Mattress:** Carefully place your 70x160 cm mattress onto the slatted frame.

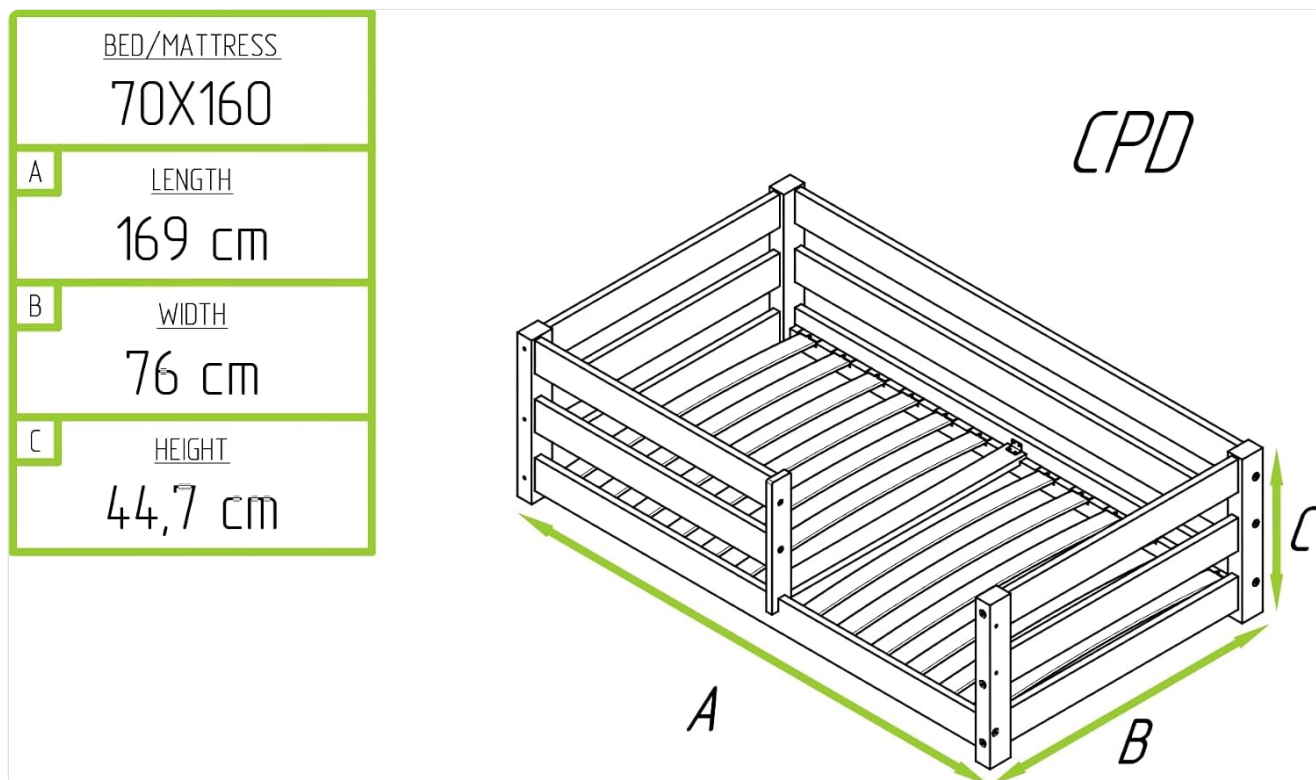


Image 4.1: Dimensional diagram of the ADEKO Kids Bed CPD, indicating a bed/mattress size of 70x160 cm, length of 169 cm, width of 76 cm, and height of 44.7 cm.

5. OPERATING INSTRUCTIONS

The ADEKO Kids Bed is designed for straightforward use. Once assembled, ensure the mattress is properly seated on the slatted frame. The bed is intended for sleeping and resting. Please ensure that the child using the bed is within the recommended age range (3+ years) and weight limit (up to 90 kg) for safe and comfortable use.

6. MAINTENANCE

To ensure the longevity and safety of your ADEKO Kids Bed, follow these maintenance tips:

- **Cleaning:** Wipe the wooden surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they can damage the wood finish.
- **Fastener Check:** Periodically (e.g., every 3-6 months) check all bolts, screws, and connections to ensure they are tight. Retighten if necessary to maintain stability and safety.
- **Wood Care:** If the wood appears dry over time, a wood-safe furniture polish or oil can be applied sparingly, following the product's instructions.

- **Ventilation:** Ensure adequate air circulation around and under the mattress to prevent moisture buildup and mold growth.

7. TROUBLESHOOTING

If you encounter any issues with your ADEKO Kids Bed, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Bed feels wobbly or unstable.	Loose bolts or connections.	Check and tighten all assembly bolts and screws. Ensure all parts are correctly aligned.
Squeaking noises.	Loose connections or friction between wood parts.	Tighten all bolts. If squeaking persists, a small amount of silicone spray or wax can be applied to friction points (e.g., where slats rest on supports), avoiding contact with the mattress.
Missing parts after unpacking.	Oversight during packaging or transit damage.	Carefully re-check all packaging materials. If parts are genuinely missing, contact ADEKO Kids customer support with your purchase details.

8. SPECIFICATIONS

Brand	ADEKO Kids
Model Number	CPD
Product Dimensions (L x W x H)	169 x 76 x 42 cm
Item Weight	25 Kilograms
Material	Wood
Recommended Mattress Size	70x160 cm (Max height: 12 cm, Min thickness: 8 cm)
Weight Capacity	Up to 90 kg
Special Feature	Lightweight design, Rounded edges, Robust slatted frame

9. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your ADEKO Kids Bed CPD 70x160, please contact ADEKO Kids customer service. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims or support inquiries.

You can often find contact information on the ADEKO Kids official website or through the retailer where you purchased the product. For online instructions and further assistance, please use the QR code provided with your product packaging.