

Dylect DTPWGASG1.4

DYLECT Pressure Washer Gun User Manual

Models: Ultra Clean Plus & Flow Plus (DTPWGASG1.4)

INTRODUCTION

This manual provides essential instructions for the safe and effective use, setup, operation, and maintenance of your DYLECT Pressure Washer Gun. Designed for heavy-duty cleaning, this gun offers a powerful and concentrated stream for various surfaces. Please read this manual thoroughly before operating the device.

The DYLECT Pressure Washer Gun is engineered for durability and user comfort, featuring a leakproof trigger and an ergonomic grip. It is compatible with DYLECT Ultra Clean Plus, Flow Plus, and Flow Star pressure washer models.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read All Instructions:** Familiarize yourself with the pressure washer gun and its operation before use.
- **Wear Protective Gear:** Always wear appropriate eye protection (safety glasses) and protective clothing when operating a pressure washer.
- **Keep Children Away:** Do not allow children or untrained individuals to operate the pressure washer gun.
- **Maintain a Firm Grip:** The high-pressure spray can cause kickback. Hold the gun firmly with both hands.
- **Never Point at People or Animals:** The high-pressure stream can cause serious injury.
- **Check Connections:** Ensure all connections are secure before starting the pressure washer to prevent leaks and accidental disconnections.
- **Use Safety Lock:** Engage the trigger safety lock when the gun is not in use to prevent accidental activation.

Advanced Safety Lock

Locking Mechanism that
Prevents Accidental Activation



Image Description: An image illustrating the safety lock mechanism on the pressure washer gun. The top panel shows a finger engaging the lock, and the bottom panel shows the gun spraying water after the lock is disengaged, preventing accidental activation.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1N Spray Gun

SETUP INSTRUCTIONS

Follow these steps to set up your DYLECT Pressure Washer Gun:

1. **Connect to Pressure Washer Hose:** Attach the pressure washer hose to the inlet of the DYLECT Pressure Washer Gun. Ensure a secure connection to prevent leaks. The quick-connect system allows for hassle-free attachment.
2. **Check Compatibility:** Ensure your pressure washer is compatible with the DYLECT Pressure Washer Gun.

This gun is designed for use with DYLECT Ultra Clean Plus, Flow Plus, and Flow Star models.

3. **Water Supply:** Connect your pressure washer to a suitable water supply according to your pressure washer's manual.

Click, Connect, Clean

With Snap-on Connector that gives
Secure, Quick Attachment



Image Description: A visual representation of the quick-connect system, highlighting how the hose connector securely attaches to the pressure washer gun for easy setup.

Boost Your Pressure Washing Today!

Tailored to be Impeccably Compatible with

ULTRA CLEAN⁺

ULTRA FLOWSTAR

ULTRA FLOW⁺



Image Description: An image displaying the DYLECT Pressure Washer Gun's compatibility with various DYLECT pressure washer models, including Ultra Clean, Ultra Flowstar, and Ultra Flow Plus.

OPERATING INSTRUCTIONS

Once the pressure washer gun is properly connected to your pressure washer and water supply, follow these steps for operation:

1. **Start Pressure Washer:** Turn on your pressure washer according to its manufacturer's instructions.
2. **Disengage Safety Lock:** Before spraying, push the safety lock button or lever to disengage it.
3. **Activate Trigger:** Squeeze the trigger to begin the high-pressure water flow.
4. **Adjust Nozzle (if applicable):** If your pressure washer gun features an adjustable nozzle, rotate or adjust it to change the spray pattern and intensity as needed for your cleaning task.
5. **Engage Safety Lock:** When finished or when pausing operation, release the trigger and engage the safety lock to prevent accidental spraying.



Image Description: A side view of the DYLECT Pressure Washer Gun, showcasing its black and green design and ergonomic shape.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your pressure washer gun:

- **Rinse After Use:** After each use, flush the gun with clean water to remove any detergent residue or debris.
- **Inspect Connections:** Regularly check all connections for wear, damage, or leaks. Replace worn seals or O-rings as necessary.
- **Clean Nozzle:** If the spray pattern becomes irregular or pressure drops, the nozzle may be clogged. Use a small wire or nozzle cleaning tool to clear any obstructions.
- **Storage:** Store the pressure washer gun in a clean, dry place, protected from freezing temperatures. Disconnect it from the pressure washer and hose before storage.

TROUBLESHOOTING

If you encounter issues with your pressure washer gun, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Water leakage from connections	Loose connections, worn O-rings/seals	Tighten all connections. Inspect and replace damaged O-rings or seals.
No pressure or low pressure	Clogged nozzle, insufficient water supply, air in the system	Clean the nozzle. Ensure adequate water flow to the pressure washer. Bleed air from the system by running water through the gun without the pressure washer on until a steady stream appears.
Gun does not spray	Safety lock engaged, trigger mechanism jammed	Disengage the safety lock. Check for any obstructions preventing trigger movement.

SPECIFICATIONS

Feature	Detail
Brand	Dylect
Model	DYLECT ULTRA CLEAN & FLOW High Pressure Washer Gun
Item Model Number	DTPWGASG1.4
Product Dimensions	26 x 4 x 18 cm
Item Weight	350 g
Colour	Black and Green
Assembly Required	Yes
Country of Origin	China
Generic Name	Pressure Washer Gun

WARRANTY INFORMATION

For specific warranty details, please refer to the documentation provided with your purchase or contact DYLECT customer support directly. Standard warranty terms typically cover manufacturing defects for a limited period from the date of purchase. Extended warranty plans may be available separately.

SUPPORT AND CONTACT

If you require further assistance, have questions, or need to report an issue, please contact DYLECT customer support:

- **Toll-Free Number:** 18002586618
- **Email:** care@dylect.in

- **Manufacturer Address:** VALUE-ONE RETAIL PRIVATE LIMITED, 633B, Udyog Vihar – V, Gurugram, Haryana 122016.

For additional accessories and product information, you may visit the official Dylect store:

[Visit the Dylect Store on Amazon](#)

The Largest Selection of Pressure Washer Accessories in India

Genuine, Durable, and Built for Performance



Outlet Hose Pipe
(Available in: 5M, 8M, 10M)



Fix Brush Kit



45° Angle Nozzle



**Force Pressure Washer
Patio Kit**



Wheel Brush Kit



Water Filter (Universal) (M1)



Tap Connector (Universal)



Tap Connector (Universal)



Inlet Connector (Universal)



Soap Bottle – 400 ML



Quick Connector (Universal)



Water Filter (Universal) (M2)

Image Description: A collection of various DYLECT pressure washer accessories, such as hoses, brushes, nozzles, and connectors, illustrating the range of compatible products available from Dylect.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question