

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Tiny Love TO141HDH

Tiny Rockers Guitar Instruction Manual

Model: TO141HDH | Brand: Tiny Love

INTRODUCTION

The Tiny Love Tiny Rockers Guitar is a developmental learning toy designed to engage young children and foster essential skills. This manual provides comprehensive instructions for the safe and effective use of your Tiny Rockers Guitar, ensuring a fun and enriching experience for your child.

This toy is part of Tiny Love's unique developmental system, focusing on six key skills: emotions, creativity, motor skills, senses, cognition, and communication. It supports a child's journey of exploration through various developmental milestones.



Image: The Tiny Love Tiny Rockers Guitar, a compact, circular-shaped toy with four yellow "strings," red handles on either side, and control buttons on the top surface.

SAFETY INFORMATION

Please read and understand all safety instructions before using the Tiny Rockers Guitar. Keep this manual for future reference.

- **Battery Safety:** Always follow battery manufacturer's instructions. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the toy is not used for a long period.
- **Choking Hazard:** This toy contains no small loose parts or sharp edges. However, always supervise children during play.
- **Cleaning:** Clean the toy with a damp cloth only. Do not immerse in water.
- **Damage:** Do not use the toy if it is damaged. Contact customer support for assistance.
- **Age Recommendation:** Designed for children 12 months and older.

PARTS LIST

The Tiny Rockers Guitar package includes the following components:

- 1 x Tiny Love Tiny Rockers Guitar unit
- Instruction Manual (this document)

Note: 2 AA batteries are required and sold separately.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the Tiny Rockers Guitar.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 new AA alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image: Rear view of the Tiny Rockers Guitar showing the battery compartment and on/off switch.

OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your Tiny Rockers Guitar:



Image: Close-up of the Tiny Rockers Guitar's control panel, showing the music note buttons, guitar mode button, pitch slider, and volume knob.

Power On/Off

Locate the On/Off switch on the back of the guitar, near the battery compartment. Slide the switch to the "On" position to power on the device, and to "Off" to power it down.

Playing the Guitar

- **Movable Strings:** The four yellow "strings" on the guitar are designed to mimic real guitar strings. Gently touch or strum them to produce sounds.
- **Melody Mode:** Press the music note buttons (located above the strings) to activate Melody Mode. This mode plays 8 different rock 'n' roll melodies. These can be listened to independently or used as background music for your child to play along with.
- **Sound Modes (Classical/Electric):** Use the guitar icon button to switch between classical and electric guitar sounds. Each of the four strings will produce a note in the selected style.
- **Pitch Slider:** The pitch slider allows you to change the tune of each note produced by the strings. Slide it up or down to explore different pitches.



Invite your little one to explore sound and rhythm and develop their creativity

Image: A baby's hands interacting with the yellow strings of the Tiny Rockers Guitar, demonstrating play.

Volume Control

The blue knob on the top right of the guitar controls the volume. Rotate it to select one of the three available volume levels: low, medium, or high. This allows for comfortable play in various environments.

Portability

The Tiny Rockers Guitar features integrated carry handles on both sides, making it easy for children to transport the toy from one place to another.

MAINTENANCE

Proper care will extend the life of your Tiny Rockers Guitar:

- Cleaning:** Wipe the surface of the toy with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals. Ensure the toy is completely dry before storing or allowing further play.
- Storage:** Store the guitar in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Removal:** If the toy will not be used for an extended period, remove the batteries to prevent leakage and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low sound	Toy is off. Batteries are low or incorrectly installed. Volume is set too low.	Ensure the On/Off switch is in the "On" position. Replace batteries with new AA alkaline batteries, checking polarity. Adjust the volume knob to a higher setting.
Sounds are distorted or intermittent	Batteries are low. Internal malfunction.	Replace batteries with new AA alkaline batteries. If problem persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	TO141HDH
Package Dimensions	9.02 x 8.54 x 2.56 inches
Item Weight	15.5 ounces
Material Type	Plastic
Batteries Required	Yes (2 AA Alkaline, sold separately)
Target Gender	Unisex
Age Recommendation	12 months +

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Tiny Love customer service. Details can typically be found on the product packaging or the official Tiny Love website.

You can visit the [Tiny Love Store on Amazon](#) for more product information and support resources.