



Manuals.plus /

› Dickie Toys /

› Dickie Toys Giant Fire Truck 57 cm Instruction Manual Model 203719031

Dickie Toys 203719031

Dickie Toys Giant Fire Truck 57 cm Instruction Manual

Model: 203719031

Brand: Dickie Toys

1. INTRODUCTION

Thank you for choosing the Dickie Toys Giant Fire Truck 57 cm. This manual provides essential information for the safe and proper use, assembly, and maintenance of your new toy. Please read these instructions carefully before use and keep them for future reference.

This toy is designed for children aged **36 months (3 years) and older**. Adult supervision is recommended during play.



Image 1.1: A child holding the Dickie Toys Giant Fire Truck, demonstrating its large size.

Safety Warnings

- **Choking Hazard:** Small parts may be generated. Not for children under 3 years.
- Do not aim water spray at eyes or face.
- Ensure all components are securely attached before play.
- Keep packaging materials away from children to prevent suffocation.
- Only use clean tap water for the water spraying function.

2. SETUP AND INITIAL ASSEMBLY

Follow these steps to prepare your fire truck for play:

1. **Unboxing:** Carefully remove the fire truck and all its components from the packaging. Inspect for any damage.
2. **Battery Installation:** The fire truck requires 2 AA batteries (included) for light and sound functions.
 - Locate the battery compartment, usually on the underside of the truck.

- Using a screwdriver (not included), open the battery compartment cover.
 - Insert 2 AA batteries, ensuring correct polarity (+/-).
 - Replace the cover and secure it with the screw.
3. **Attach Water Bottles:** Locate the two small water bottles. Securely attach them to the designated points on the fire truck, typically near the ladder's nozzle.



Image 2.1: The fire truck in its original packaging, showing key features like water shooting and light & sound.

3. OPERATING INSTRUCTIONS

Your Dickie Toys Giant Fire Truck is equipped with several interactive features for realistic play:

3.1 Light and Sound Functions

To activate the emergency lights and siren sounds, press the designated button on the truck's cabin or side. The lights are typically located on the roof of the cabin.



Image 3.1: Top view of the fire truck with activated lights, indicating the light and sound feature.

3.2 Extendable and Rotatable Ladder

The fire truck features an extendable ladder that can reach up to 60 cm and rotate 360 degrees for versatile rescue operations.

- To extend the ladder, gently pull the sections outwards until they reach the desired length.
- To rotate the ladder, turn the base of the ladder assembly left or right.
- To retract the ladder, push the sections back together.

EXTENDABLE LADDER UP TO 60 CM

OPENING PARTS



Image 3.2: The fire truck with its ladder extended, showcasing the extendable ladder and opening compartments.

3.3 Water Shooting Function

Engage in realistic firefighting by using the water shooting function:

- Ensure the water bottles are filled with clean tap water and securely attached to the ladder's nozzle.
- Aim the nozzle towards a safe target.
- Squeeze the water bottles to spray water.

WATER SHOOTING

360° MOVABLE LADDER



Image 3.3: The fire truck demonstrating its water shooting capability and the 360-degree movable ladder.



Image 3.4: A child actively playing with the water shooting feature of the fire truck.

3.4 Mobile Crane Function

The ladder assembly also functions as a mobile crane for rescue missions. Utilize the extendable and rotatable features of the ladder to simulate lifting and moving objects during play.

4. MAINTENANCE

To ensure the longevity and proper functioning of your Dickie Toys Giant Fire Truck, follow these maintenance guidelines:

- **Cleaning:** Wipe the truck with a damp cloth to remove dust and dirt. Do not immerse the toy in water, especially the electronic components. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** After using the water shooting function, ensure all water is drained from the bottles and nozzle. Allow components to air dry completely to prevent mold or mildew.
- **Storage:** Store the fire truck in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose

of used batteries responsibly.

5. TROUBLESHOOTING

If you encounter any issues with your fire truck, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights and sounds not working.	<ul style="list-style-type: none">Batteries are dead or incorrectly installed.Battery compartment cover is loose.	<ul style="list-style-type: none">Replace batteries with new AA batteries, ensuring correct polarity.Ensure the battery compartment cover is securely fastened.
Water shooting function is weak or not working.	<ul style="list-style-type: none">Water bottles are empty.Nozzle is clogged.Water bottles not securely attached.	<ul style="list-style-type: none">Refill water bottles with clean tap water.Check the nozzle for any blockages and clear gently.Ensure water bottles are firmly attached to the ladder's nozzle.
Ladder does not extend or rotate smoothly.	<ul style="list-style-type: none">Dirt or debris in the mechanism.Components are misaligned.	<ul style="list-style-type: none">Clean the ladder sections and rotation mechanism.Gently realign the ladder sections. Do not force movement.

6. SPECIFICATIONS

Model Number	203719031
Brand	Dickie Toys
Product Dimensions (L x W x H)	58 x 18 x 25 cm
Product Weight	2.16 kg
Material	Plastic
Scale	1:16
Age Recommendation	36 months - 46 years (3+ years)
Power Source	Battery-powered
Batteries Required	2 x AA (included)
Special Features	Light and Sound Function, Extendable and 360° Rotatable Ladder (up to 60 cm), Water Shooting Function, Opening Parts

7. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Dickie Toys website. Keep your proof of purchase for any warranty claims.

If you have further questions or require assistance, please contact Dickie Toys customer service.