



ICEBERG-62XD

ICEBERG No Frost Refrigerator ICEBERG-62XD User Manual

Model: ICEBERG-62XD

- [Introduction](#)
- [Safety Information](#)
- [Setup](#)
- [Operation](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your ICEBERG No Frost Refrigerator, model ICEBERG-62XD. Please read these instructions carefully before installation and operation, and retain them for future reference.

The ICEBERG-62XD is a 625-liter, 2-door refrigerator featuring a No Frost cooling system to prevent ice buildup, a digital display for easy control, and a top freezer configuration for optimal energy efficiency.



Figure 1: Front view of the ICEBERG No Frost Refrigerator ICEBERG-62XD.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Ensure the power supply matches the voltage specified on the rating label.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials, including tape and protective films. Inspect the refrigerator for any damage incurred during transit. Report any damage to your retailer immediately.

3.2 Placement

Choose a location that is dry, well-ventilated, and away from direct sunlight or heat sources (e.g., ovens, radiators). Ensure there is sufficient space around the refrigerator for proper air circulation. The dimensions of the appliance are approximately 84 cm (Depth) x 75 cm (Width) x 186 cm (Height).

- Allow at least 10 cm of space at the back and sides for adequate ventilation.
- Place the refrigerator on a strong, level floor that can support its weight (approximately 115 kg).

3.3 Leveling

Adjust the leveling feet at the bottom front of the refrigerator to ensure it is stable and level. A level appliance operates more efficiently and prevents door misalignment.

3.4 Power Connection

This appliance is electric. Ensure the electrical outlet is properly grounded and provides the correct voltage. The refrigerator requires an appropriate power plug (not included) or direct wiring by a qualified technician. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Initial Startup

After installation, wait at least 2-4 hours before plugging in the refrigerator to allow the refrigerant to settle. Once plugged in, set the temperature controls and allow the appliance to cool for several hours before loading food.

4.2 Digital Display and Temperature Control

Your refrigerator is equipped with a digital display for easy temperature management. Refer to the specific controls on your unit to adjust the temperature settings for both the refrigerator and freezer compartments. The digital display allows for precise temperature adjustments.



Figure 2: Interior view of the refrigerator, highlighting shelves and the top freezer.

4.3 No Frost System

The No Frost feature prevents the accumulation of ice in both the freezer and refrigerator compartments, eliminating the need for manual defrosting. This system maintains consistent temperatures and improves food preservation.

4.4 Food Storage

- Store fresh foods in the refrigerator compartment.
- Use the freezer compartment for long-term storage of frozen items.
- Ensure food is properly wrapped or covered to prevent moisture loss and odor transfer.

5. MAINTENANCE

5.1 Cleaning

Regular cleaning helps maintain the efficiency and hygiene of your refrigerator.

- **Interior:** Clean the interior with a mild detergent and warm water. Rinse thoroughly and dry. Remove shelves and drawers for easier cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft cloth and mild cleaner. For stainless steel finishes, use a specialized stainless steel cleaner.
- **Door Seals:** Clean door seals regularly to ensure a tight seal and prevent energy loss.
- **Condenser Coils:** Periodically clean the condenser coils located at the back or bottom of the refrigerator. Dust and debris can reduce cooling efficiency. Disconnect power before cleaning coils.

5.2 Defrosting

Due to the No Frost system, manual defrosting is generally not required. If ice buildup occurs, it may indicate a problem with the No Frost system or door seal. Contact customer support if this happens.

5.3 Power Outages

In case of a power outage, keep the refrigerator doors closed to maintain the internal temperature for as long as possible. Avoid opening the doors unnecessarily.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------|---|---|
| Refrigerator does not operate | No power supply; Power cord not plugged in; Circuit breaker tripped. | Check power connection; Reset circuit breaker. |
| Temperature is not cold enough | Temperature setting too high; Door opened frequently; Food loaded too warm; Poor ventilation. | Adjust temperature setting; Minimize door openings; Allow hot food to cool before storing; Ensure proper ventilation. |

| Problem | Possible Cause | Solution |
|----------------|---|---|
| Unusual noises | Appliance not level; Objects touching the back wall; Compressor noise (normal). | Level the appliance; Move objects away from the back; Normal compressor operation may produce some sound. |
| Water on floor | Drain tube clogged; Excessive humidity. | Clear the drain tube; Ensure proper ventilation and avoid storing overly moist items uncovered. |

7. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|---|
| Brand | Generic |
| Model Number | ICEBERG-62XD |
| Total Capacity | 625 Liters |
| Configuration | Top Freezer |
| Color | Silver |
| Dimensions (D x W x H) | 84 cm x 75 cm x 186 cm |
| Installation Type | Freestanding |
| Number of Doors | 2 |
| Defrost System Type | Frost-free (No Frost) |
| Finish Type | Matte |
| Cooling Method | Air Compressor |
| Number of Shelves | 2 |
| Adjustable Temperature Control | No (Digital display for control) |
| Power Plug | Not included (Requires user-supplied plug or direct wiring) |
| Convertible Freezer | No |
| Electric | Yes |
| Lock Type | Electronic |
| Item Weight | 115 kg |
| Country of Origin | Turkey |

8. WARRANTY & SUPPORT

8.1 Product Warranty

This ICEBERG Refrigerator comes with a **10-year warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions. For specific terms and conditions, refer to the warranty card included with your product or contact the manufacturer.

8.2 Customer Support

For technical assistance, service requests, or inquiries regarding your ICEBERG Refrigerator, please contact your retailer or the authorized service center. Ensure you have your model number (ICEBERG-62XD) and purchase date available when contacting support.