



Manuals.plus /

› Ayeway /

› Ayeway Portable Charger 10000mAh Power Bank PD-S10K Instruction Manual

Ayeway PD-S10K

Ayeway Portable Charger 10000mAh Power Bank (Model: PD-S10K) Instruction Manual

Comprehensive guide for setup, operation, and maintenance of your Ayeway portable charger.

1. PRODUCT OVERVIEW

The Ayeway Portable Charger (Model: PD-S10K) is a compact and powerful 10000mAh power bank designed to keep your devices charged on the go. It features built-in charging cables for various devices, fast charging capabilities, and an LED digital display for monitoring battery status.

FASTER RECHARGING

Note: Wall Charger NOT included

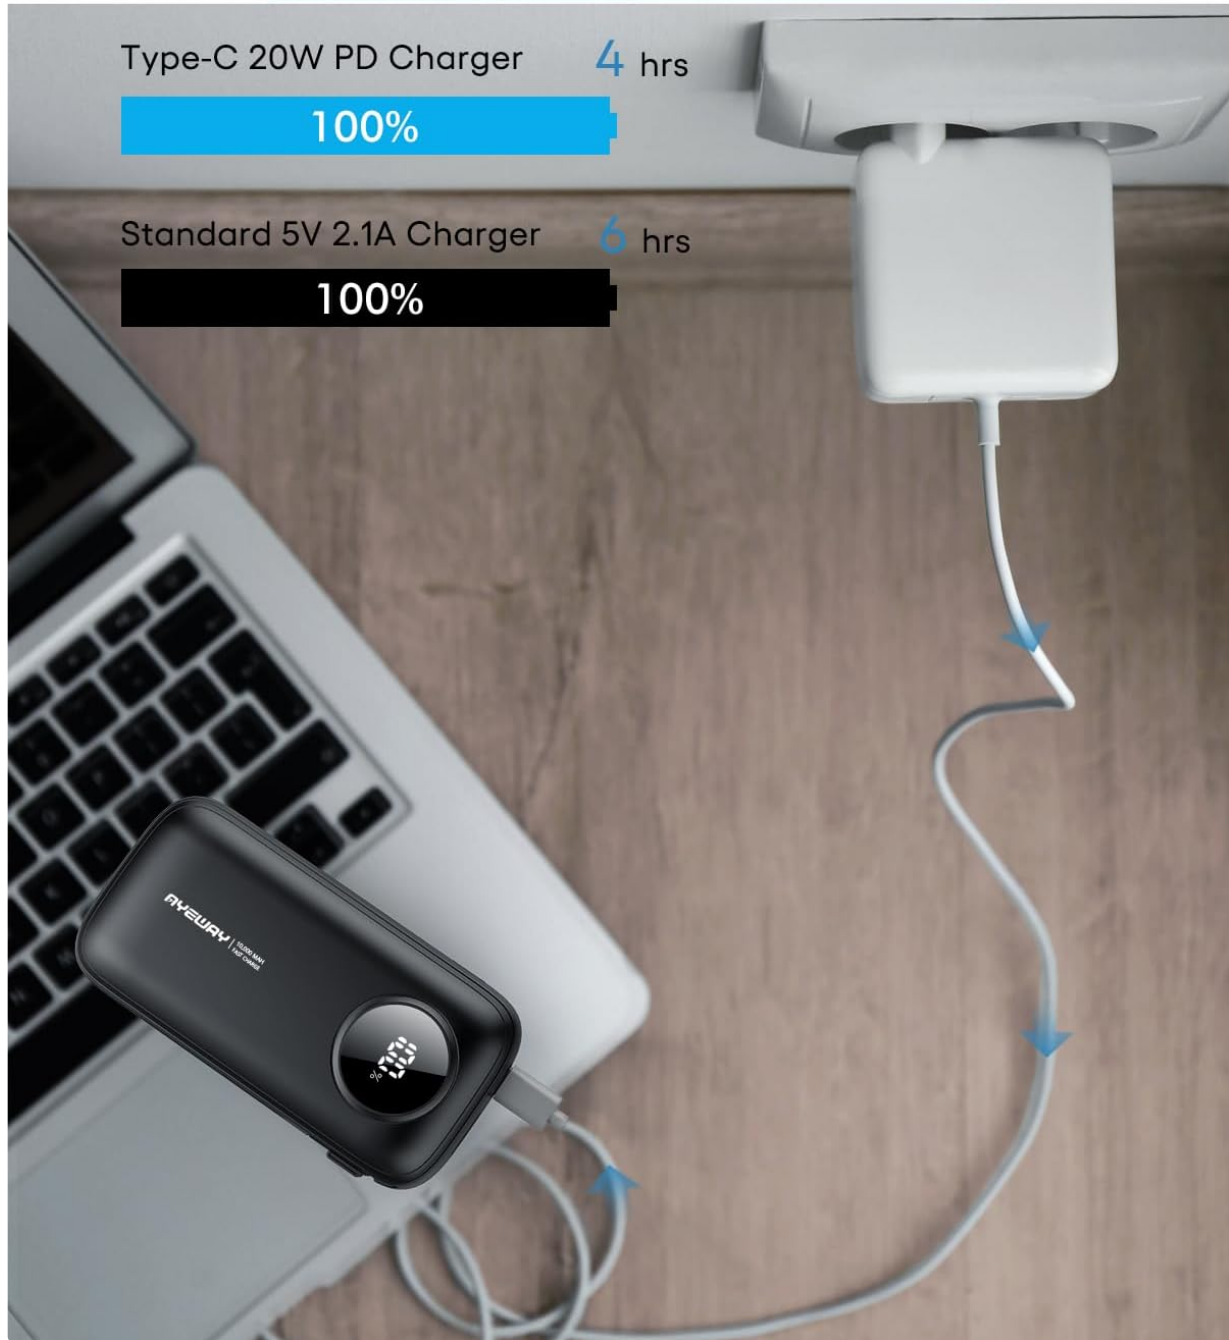


Image: The Ayeway Portable Charger is designed to be small and lightweight, yet powerful enough to charge multiple devices like smartphones, tablets, and earbuds.



Image: The portable charger is suitable for air travel and can be carried in hand luggage.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Ayeway Portable Charger (10000mAh Power Bank) x 1
- USB-A to USB-C Recharging Cable x 1
- User Manual x 1

Note: A wall adapter is not included and must be purchased separately for recharging the power bank.

3. PRODUCT FEATURES

- **High Capacity:** 10000mAh Lithium Polymer battery cells for extended power.
- **Built-in Cables:** Includes a built-in Lightning cable and a built-in USB-C cable for direct device charging.
- **Multiple Outputs:** Features a USB-C PD 20W output port and a USB-A 22.5W output port, allowing up to 4 devices to charge simultaneously.
- **Fast Charging:** Supports Power Delivery (PD 20W) for rapid charging and recharging.
- **LED Digital Display:** Provides an accurate percentage of remaining power.
- **Compact and Lightweight:** Designed for portability, weighing approximately 6.8 ounces.
- **Versatile Use:** Compatible with a wide range of devices including iPhones, iPads, Samsung phones, and other USB-powered devices. Can also power 5V USB heated clothing.



Image: The power bank features built-in cables and additional USB ports for versatile charging options.



Image: Universal compatibility with a wide range of electronic devices.

4. SETUP AND RECHARGING THE POWER BANK

4.1 Initial Charge

Before first use, it is recommended to fully charge your Ayeway Portable Charger. This ensures optimal

battery performance and longevity.

4.2 Recharging the Power Bank

The power bank can be recharged using either the USB-C input/output port or the USB-A input port. For faster recharging, use a PD 20W compatible wall charger with the USB-C port.

1. Connect the provided USB-A to USB-C recharging cable to the power bank's USB-C port.
2. Connect the other end of the cable to a compatible USB wall adapter (not included) or a computer's USB port.
3. The LED digital display will show the charging progress. The power bank is fully charged when the display shows "100%".

SMALL & LIGHT YET POWERFUL

10000
mAh

3.5 iPhone 8
charges

1.2 iPad Mini
charges

2.1 Samsung S10
charges

2.5 iPhone X
charges



Image: Recharging the power bank. A PD 20W charger can fully recharge the unit in approximately 4 hours, while a standard 5V 2.1A charger takes about 6 hours.

5. OPERATING THE POWER BANK

5.1 Charging Your Devices

The Ayeway Portable Charger offers multiple ways to charge your electronic devices:

- **Using Built-in Cables:**

- a. Pull out the appropriate built-in cable (Lightning for Apple devices or USB-C for compatible Android/other devices).
- b. Connect the cable directly to your device's charging port.

- **Using USB Ports:**

- a. Connect your device's charging cable to either the USB-A output port or the USB-C output port on the power bank.
- b. Connect the other end of your cable to your device.

The power bank will automatically begin charging your device. The LED display will show the remaining battery percentage.

USB-C OUTPUT WITH BUILT-IN CHARGING CORDS FOR LATEST DEVICES

Designed for



New
Androids



New
iPhone



New
iPad



Image: The power bank features built-in USB-C and Lightning cables for direct connection to modern devices.

4 DEVICES CHARGING SIMULTANEOUSLY

10,000mAh



Image: The power bank can charge up to four devices concurrently using its built-in cables and USB ports.



Image: The power bank can be used to charge various devices in different settings.

5.2 Activating the LED Display

To view the current battery percentage on the LED screen, simply connect a device to the power bank or single-click the power button located on the side of the unit.

6. MAINTENANCE AND SAFETY INFORMATION

6.1 General Maintenance

- Keep the power bank away from extreme temperatures, direct sunlight, and liquids.
- Store in a cool, dry place when not in use.
- Clean the exterior with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Avoid dropping or subjecting the power bank to strong impacts.

6.2 Safety Precautions

- Do not disassemble, modify, or repair the device yourself.
- Do not expose the power bank to fire or high temperatures.
- Keep out of reach of children.
- Do not use if the power bank is damaged, swollen, or leaking.
- Dispose of the power bank responsibly according to local regulations for lithium-ion batteries.

7. SPECIFICATIONS

Feature	Detail
Model Number	PD-S10K
Battery Capacity	10000 Milliamp Hours (mAh)
Battery Type	Lithium Polymer
Product Dimensions	4.45 x 2.33 x 1.13 inches
Item Weight	6.8 ounces
Input (USB-C)	PD 20W (for fast recharging)
Output (USB-C)	PD 20W
Output (USB-A)	22.5W
Special Features	Built-in Cables (Lightning, USB-C), Digital Display, Fast Charging, Lightweight, Pocket Size

8. TROUBLESHOOTING

- **Device not charging:**

- Ensure the power bank is sufficiently charged (check LED display).
- Verify that the charging cable is securely connected to both the power bank and your device.
- Try a different cable or port on the power bank.
- Ensure your device is compatible with the power bank's output specifications.

- **Power bank not recharging:**

- Check if the recharging cable is properly connected to the power bank and the wall adapter/USB source.
- Ensure the wall adapter or USB source is functioning correctly.
- Try a different recharging cable or wall adapter.

- **LED display not turning on:**

- Single-click the power button on the side of the power bank.
- Connect a device to the power bank to activate the display.
- If the power bank is completely drained, the display may not activate until it receives some charge.

9. WARRANTY AND SUPPORT

The Ayeway Portable Charger comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, product inquiries, or warranty claims, please contact Ayeway customer service through the retailer where you purchased the product or visit the official Ayeway website for contact information.

Please retain your purchase receipt as proof of purchase for warranty purposes.