

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lasko](#) /

› [Lasko A20107 20" 3-Speed Air Circulator Fan User Manual](#)


Lasko A20107

Lasko A20107 20" 3-Speed Air Circulator Fan User Manual

Model: A20107

PRODUCT OVERVIEW

The Lasko A20107 20" 3-Speed Air Circulator Fan is designed to powerfully move air throughout your space, enhancing comfort and air quality. Its robust design and energy-efficient operation make it suitable for various indoor environments.

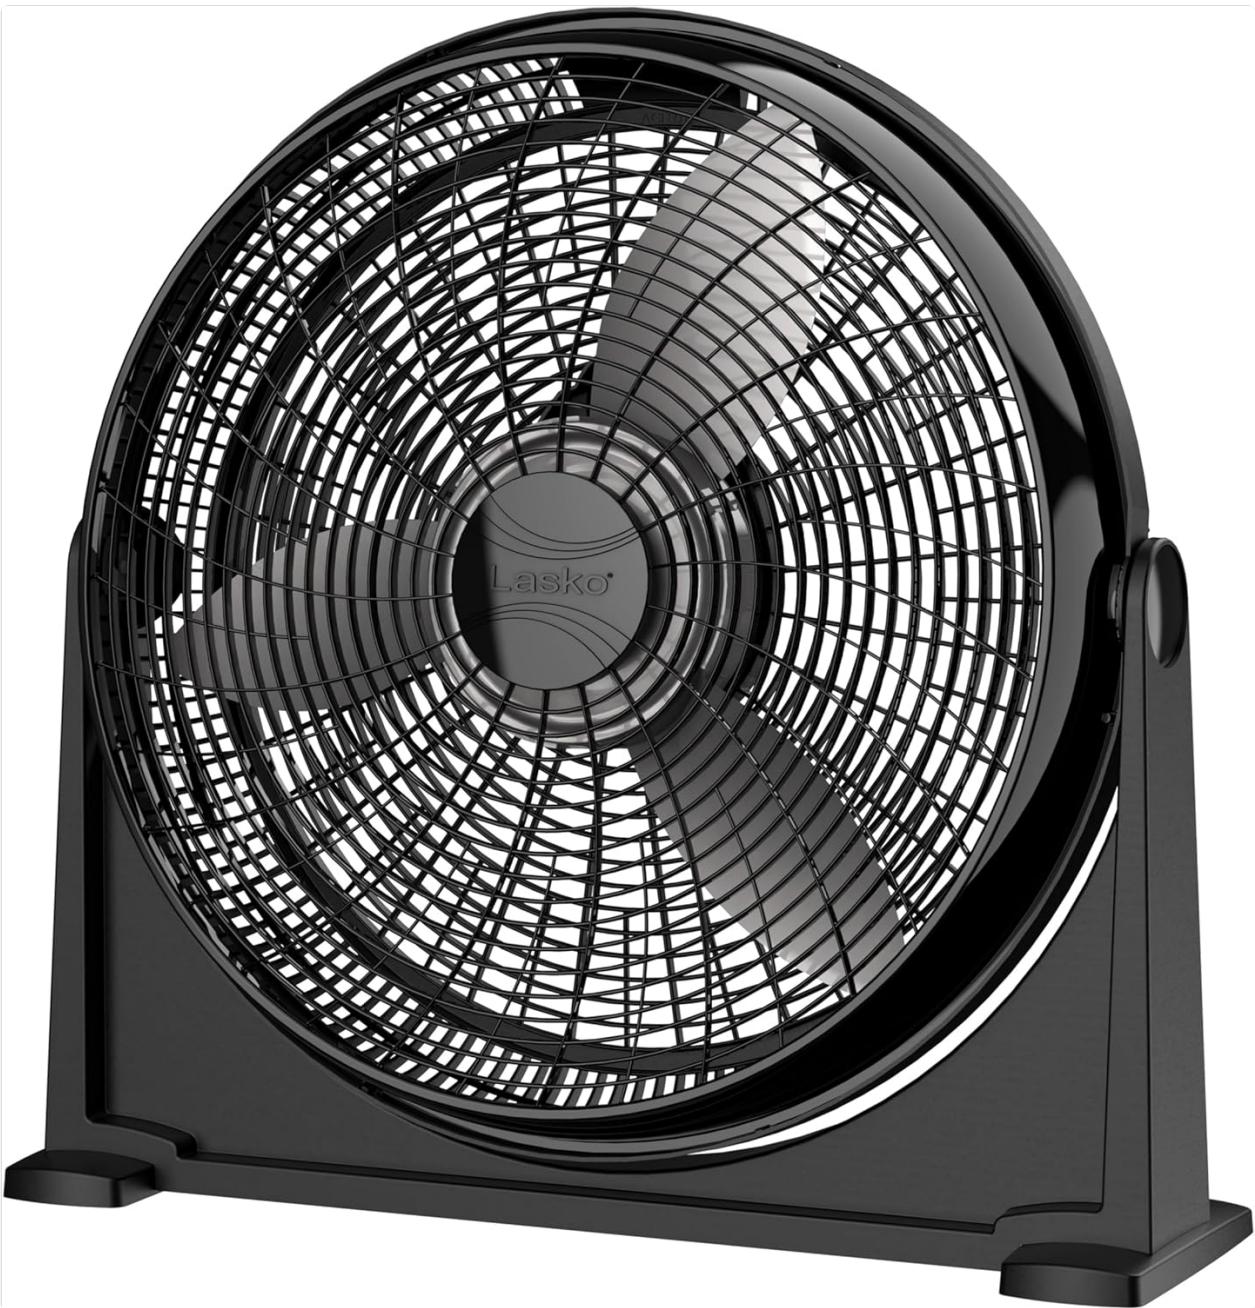

This image shows the Lasko A20107 20-inch 3-Speed Air Circulator Fan. The fan is black with a circular grille and a sturdy base, designed for floor or wall-mount use. The Lasko logo is visible in the center of the fan grille.

Key Features:

- Three powerful speed settings for optimal airflow control.
- Simple, manual controls for ease of use.
- Propeller blade design engineered for high performance air circulation.
- Versatile design allows use as a floor fan or easy conversion to a wall-mount fan.
- Energy-efficient operation to help reduce power consumption.
- Lightweight construction with a built-in carry handle for portability.
- Full-range pivoting fan head for directing airflow precisely where needed.
- Ideal for use in living spaces, kitchens, garages, and other areas requiring strong air movement.
- Simple "no tool" base assembly for quick setup.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this fan.
2. This fan is intended for household use only.
3. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
4. Unplug the fan from the outlet when not in use or when moving the fan.
5. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
6. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
7. Do not insert or allow fingers or foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fan.
8. Do not block air openings or exhaust in any manner.
9. Always place the fan on a stable, flat surface during operation to prevent the fan from tipping over.
10. Do not immerse fan in water or other liquids.
11. Close supervision is necessary when any appliance is used by or near children or invalids.

SETUP AND ASSEMBLY

The Lasko A20107 fan requires simple "no tool" base assembly before first use. Follow these steps:

1. Carefully remove the fan and all packaging materials from the box.
2. Identify the fan body and the two base feet.
3. Align the slots on the base feet with the corresponding tabs on the bottom of the fan body.
4. Gently push the base feet onto the fan body until they click securely into place. Ensure both feet are firmly attached for stability.
5. Place the assembled fan on a firm, level surface.

For wall-mount conversion, consult the specific instructions provided with the wall-mount kit (sold separately, if applicable) or refer to the product's official website for detailed guidance.

OPERATION

Operating your Lasko A20107 fan is straightforward with its manual controls.

Power and Speed Control:

- Plug the fan's power cord into a standard 120V AC electrical outlet.
- Locate the control knob or buttons on the fan.
- Turn the knob or press the button to select your desired speed setting:
 - **Speed 1:** Low airflow, ideal for gentle circulation.
 - **Speed 2:** Medium airflow, suitable for general cooling.
 - **Speed 3:** High airflow, for maximum air circulation and cooling.
- To turn the fan off, set the control to the "OFF" position.

Pivoting Fan Head:

The fan features a full-range pivoting head, allowing you to direct the airflow up, down, or straight ahead. To adjust the angle, gently tilt the fan head to the desired position. It will hold its position once set.

MAINTENANCE

Regular maintenance helps ensure the longevity and efficient operation of your Lasko fan.

Cleaning:

- Always unplug the fan from the power outlet before cleaning.
- Use a soft cloth or a vacuum cleaner with a brush attachment to remove dust from the fan grille and blades.
- Do not use water, wax, polish, or any chemical solutions to clean the fan. These can damage the fan's finish or electrical components.
- For stubborn dirt, a slightly damp cloth can be used on the exterior surfaces, but ensure no moisture enters the motor housing.
- Allow the fan to dry completely before plugging it back in.

Storage:

When storing the fan, it is recommended to keep it in its original carton or cover it to protect it from dust. Store the fan in a cool, dry place.

TROUBLESHOOTING

If your Lasko A20107 fan is not operating as expected, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not operate.	No power to the fan.	Ensure the fan is plugged into a working electrical outlet. Check if the circuit breaker has tripped.
Airflow is weak.	Fan grille or blades are dirty.	Unplug the fan and clean the grille and blades as described in the Maintenance section.
Fan makes unusual noise.	Obstruction in the fan blades or motor.	Unplug the fan and inspect for any foreign objects. If the noise persists, discontinue use and contact customer support.
Fan wobbles or is unstable.	Base not properly assembled or fan on uneven surface.	Ensure the base feet are securely attached. Place the fan on a firm, level surface.

SPECIFICATIONS

Attribute	Detail
Brand	Lasko
Model Number	A20107

Attribute	Detail
Dimensions (D x W x H)	26.22" x 7.7" x 23.88"
Weight	7 lbs
Cord Length	6 feet
Number of Speeds	3
Control Method	Manual (Push Button)
Blade Material	Plastic
Indoor/Outdoor Usage	Indoor
UPC	046013458780

WARRANTY AND SUPPORT

Limited Warranty:

This Lasko A20107 Air Circulator Fan comes with a **1-year limited warranty** from the date of purchase. This warranty covers defects in material or workmanship under normal household use. It does not cover damage resulting from accident, misuse, abuse, alteration, or improper connection with unauthorized accessories.

For warranty service, please do not return the product to the place of purchase. Contact Lasko Customer Service directly.

Customer Support:

For technical assistance, parts, or general inquiries, please contact Lasko Customer Service. Contact information can typically be found on the Lasko official website or on the product packaging.

Please have your model number (A20107) and UPC (046013458780) available when contacting support.

© 2024 Lasko Products, LLC. All rights reserved.

This manual is for informational purposes only and may be subject to change without notice.