

[manuals.plus](#) /› [Tefal](#) /› **Tefal Sense 2 Toaster TT693110 User Manual**

Tefal TT693110

Tefal Sense 2 Toaster TT693110 User Manual

Model: TT693110

Brand: Tefal

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Always unplug the toaster before removing bread.

2. PRODUCT OVERVIEW

The Tefal Sense 2 Toaster TT693110 is designed for efficient and convenient toasting. Familiarize yourself with its main components:

- **Toasting Slots:** Two wide slots for various bread types.
- **Control Panel:** Touchscreen interface with digital display, browning level selection (1-7), Stop, Defrost, and Reheat functions.
- **High-Lift Lever:** For easy removal of smaller items.
- **Crumb Tray:** Removable tray for easy cleaning.



Figure 1: Tefal Sense 2 Toaster with Crumb Tray

This image shows the white Tefal Sense 2 Toaster from an angled view, with the removable crumb tray pulled out from the bottom front. The two toasting slots are visible at the top.

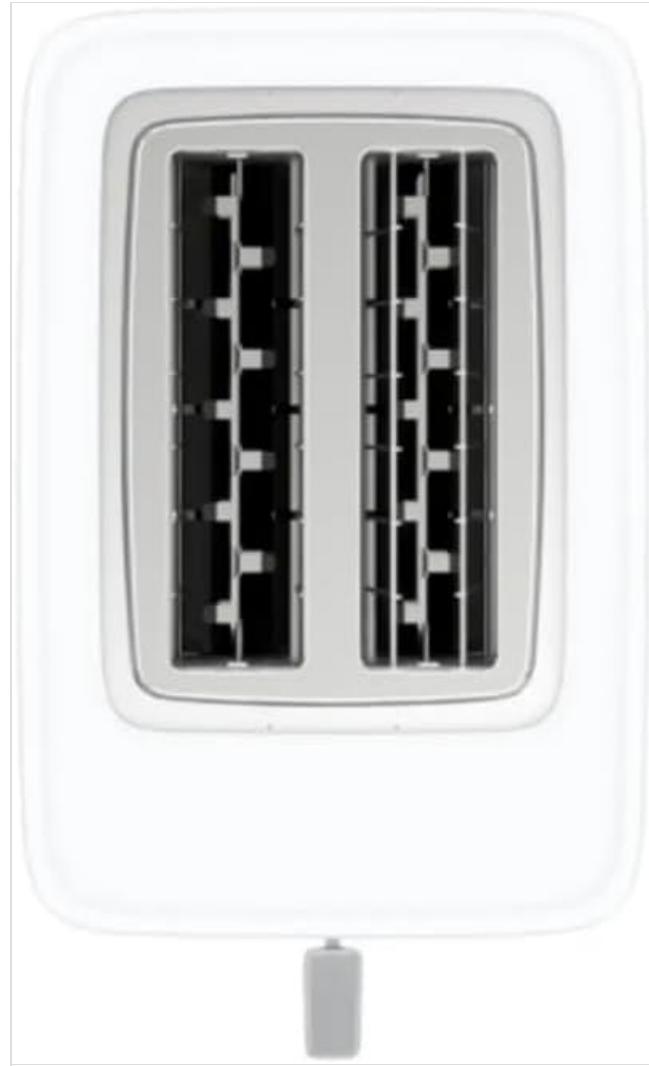


Figure 2: Top View of Toasting Slots

This image provides a direct overhead view of the Tefal Sense 2 Toaster, clearly showing the two wide toasting slots.



Figure 3: Control Panel with Digital Display

A close-up view of the toaster's side, highlighting the digital display showing '0:18' and the touch buttons for 'stop', '1-7' (browning levels), defrost, and reheat functions.

3. SETUP

3.1 Unpacking

Carefully remove the toaster and all packaging materials. Retain packaging for future storage or transport if needed.

3.2 Placement

Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the appliance.

3.3 First Use

Before toasting bread for the first time, operate the toaster empty for two or three cycles at the highest browning setting. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process.

4. OPERATING INSTRUCTIONS

4.1 Basic Toasting

1. Plug the toaster into a suitable electrical outlet.
2. Insert slices of bread into the toasting slots.
3. Use the '1-7' button on the touchscreen control panel to select your desired browning level. Level 1 is the lightest, and Level 7 is the darkest. The digital display will show the selected level.
4. Press down the high-lift lever until it locks into place. The toasting cycle will begin, and the digital display will show a countdown timer.
5. Once the toasting cycle is complete, the toast will automatically pop up.



Figure 4: Adjusting Browning Level

This image shows a hand interacting with the touchscreen control panel of the Tefal Sense 2 Toaster, likely adjusting the browning level or selecting a function. The digital display shows '0:30'.



Figure 5: Toaster in Operation

The Tefal Sense 2 Toaster is shown on a wooden kitchen counter with two slices of toast emerging from its slots. Jams and other breakfast items are visible in the background.

4.2 Stop Function

To stop the toasting cycle at any time, press the 'stop' button on the control panel.

4.3 Defrost Function

This function is ideal for toasting frozen bread.

1. Insert frozen bread into the toasting slots.
2. Press the defrost button (snowflake icon) on the control panel.
3. Press down the high-lift lever. The toaster will automatically adjust the toasting time for frozen bread.

4.4 Reheat Function

Use this function to warm up previously toasted bread without further browning.

1. Insert cold, previously toasted bread into the slots.

2. Press the reheat button (wavy lines icon) on the control panel.
3. Press down the high-lift lever. The toaster will briefly warm the bread.

4.5 High-Lift Lever

The high-lift lever allows you to raise the toast higher out of the slots, making it easier and safer to retrieve smaller items like crumpets or English muffins without burning your fingers.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

5.1 Crumb Tray

1. Always unplug the toaster and allow it to cool completely before cleaning.
2. Pull out the crumb tray located at the bottom of the toaster.
3. Empty crumbs into a waste bin.
4. Wipe the tray with a damp cloth if necessary, then dry thoroughly before reinserting.
5. Push the crumb tray back into place until it locks securely.



Figure 6: Removing the Crumb Tray for Cleaning

A hand is shown pulling out the crumb tray from the bottom of the white Tefal Sense 2 Toaster, revealing accumulated crumbs.

5.2 Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface. Ensure the toaster is completely dry before plugging it back in.

5.3 Interior Cleaning

Do not attempt to clean the inside of the toaster with any tools or liquids. If bread becomes stuck, unplug the toaster and carefully remove the bread using non-metallic tongs.

6. TROUBLESHOOTING

- **Toaster does not turn on:**

Ensure the power cord is securely plugged into a working electrical outlet. Check your household fuse or circuit breaker.

- **Bread does not toast evenly:**

Ensure bread slices are of uniform thickness and size. Some bread types may toast differently. Try adjusting the browning level.

- **Bread is stuck in the toaster:**

Unplug the toaster immediately. Allow it to cool, then carefully remove the bread using non-metallic tongs. Do not use metal utensils.

- **Smoke coming from the toaster:**

This usually indicates food particles or crumbs are burning inside. Unplug the toaster, allow it to cool, and clean the crumb tray thoroughly. If the smoke persists after cleaning, discontinue use and contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Tefal
Model Number	TT693110
Power	720 Watts
Number of Slices	2
Special Features	Touchscreen, 7 browning levels, Stop, Defrost, Reheat functions, High-lift lever, Variable width slots
Material	Plastic
Color	White
Weight	2 Kilograms
Dimensions (D x W x H)	17.8 cm x 28.7 cm x 18.7 cm

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or

visit the official Tefal website. Do not attempt to repair the appliance yourself, as this may void the warranty and pose safety risks.