

ZIZEV B0CWGH45RW

ZIZEV Portable Blender User Manual

Model: B0CWGH45RW

INTRODUCTION

Thank you for choosing the ZIZEV Portable Blender. This manual provides essential information for the safe and efficient use of your new portable juicer cup. Please read these instructions carefully before first use and retain for future reference.

SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the blender.
- Keep the blender and its components out of reach of children.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Blades are sharp. Handle with extreme care when cleaning or assembling.
- Ensure the cup is securely attached to the motor base before operating.
- Do not operate the blender when empty.
- Do not overfill the cup.
- Avoid contact with moving parts.
- Unplug the blender from the USB power source when not in use, before assembling or disassembling parts, and before cleaning.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not blend hot liquids.

- If the charging cable is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.

PRODUCT FEATURES

- **USB Charging:** Built-in 1200mAh rechargeable battery, providing 5-10 blends on a full charge.
- **Multifunctional:** Ideal for making juices, smoothies, ice drinks, and milkshakes.
- **Easy to Clean:** Simple cleaning process by adding water and activating the blend cycle.
- **Transparent Bottle:** Allows easy monitoring of juice levels.
- **6 Blades Design:** Strong blending power for efficient results.
- **Compact and Portable:** Suitable for home, car, school, and outdoor use.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x ZIZEV Portable Blender (Motor Base with Blades and Transparent Cup)
- 1 x USB Charging Cable



Image: The ZIZEV Portable Blender unit shown alongside its USB charging cable.

PRODUCT OVERVIEW



Image: The portable blender disassembled, showing the motor base with the 6-blade assembly and the separate transparent blending cup.



Image: A close-up view of the blender's motor base, highlighting the power button with Chinese characters for "double click start".

SPECIFICATIONS

Feature	Detail
Brand	ZIZEV
Model	B0CWGH45RW
Capacity	500 Milliliters
Battery Voltage	3.7V
Rated Input Voltage	5-8V
Wattage	35 Watts
Battery Capacity	1200mAh
Number of Blades	6
Material	Acrylonitrile Butadiene Styrene (ABS), PC
Product Dimensions	Approx. 21.5 x 7.5 cm (8.5 x 3.0 inches)

Dishwasher Safe

Yes (Cup only, not motor base)

SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the blender. Connect the provided USB charging cable to the charging port on the motor base and to a compatible USB power source (e.g., wall adapter, computer, power bank). The indicator light will show charging status (usually red for charging, blue/green for full).
2. **Assemble the Blender:** Ensure the transparent cup is clean and properly aligned with the motor base. Twist the cup clockwise until it is securely locked into place. The blender will not operate if the cup is not correctly assembled.



Image: The ZIZEV Portable Blender fully assembled, showing the transparent cup securely attached to the motor base.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Wash your fruits and cut them into small pieces, approximately 1.5 x 1.5 cm (0.6 x 0.6 inches). Remove any hard cores, thick skins, or hard shells.
2. **Add Ingredients:** Place the prepared fruit into the transparent cup, filling it to about 50% of its capacity.
3. **Add Liquid:** Add water or other liquid until the total amount of ingredients reaches approximately 80% of the cup's capacity. Do not overfill.
4. **Start Blending:** Ensure the blender is placed horizontally on a stable surface. Double-click the power button on the motor base to start the blending cycle. The motor will begin to rotate.
5. **Blend:** Once the motor starts, you can gently shake the blender to ensure thorough mixing

and better juicing results. The blending cycle typically lasts about 40 seconds.

6. **Finish:** The blender will automatically shut off after approximately 40 seconds. Open the cup and enjoy your fresh juice or smoothie.



Image: Two portable blenders, one filled with strawberries and the other with diced apples, demonstrating how to load ingredients before blending.

Note on Operation: The power button requires a double-click to start and a single click to stop the machine manually before the 40-second cycle completes.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygiene of your ZIZEV Portable Blender.

1. **Immediate Cleaning:** After each use, rinse the cup and blade assembly immediately to prevent food residue from drying.
2. **Easy Cleaning Method:** Fill the cup with clean water (and a drop of dish soap, if desired), secure it to the motor base, and double-click the power button to run a short blending cycle (5-10 seconds). This will clean the blades and interior of the cup.
3. **Manual Cleaning:** Disassemble the cup from the motor base. The transparent cup is dishwasher safe. For manual cleaning, use a brush to carefully clean around the blades. Rinse thoroughly.

4. **Motor Base Cleaning:** Wipe the motor base with a damp cloth. **DO NOT immerse the motor base in water or any other liquid.**
5. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the blender. Store in a clean, dry place.





Image: A detailed view of the six-blade assembly at the bottom of the transparent blending cup, emphasizing the area to clean carefully.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	<ul style="list-style-type: none">◦ Low battery.◦ Cup not securely attached.◦ Power button not double-clicked.	<ul style="list-style-type: none">◦ Charge the blender fully.◦ Ensure the cup is twisted clockwise until securely locked.◦ Double-click the power button firmly.
Blades stop during operation.	<ul style="list-style-type: none">◦ Ingredients are too large or too hard.◦ Overfilled cup.◦ Low battery.	<ul style="list-style-type: none">◦ Cut ingredients into smaller pieces.◦ Do not exceed 80% capacity.◦ Charge the blender.
Leaking from the cup.	<ul style="list-style-type: none">◦ Cup not properly sealed.◦ Seal ring is damaged or missing.	<ul style="list-style-type: none">◦ Ensure the cup is tightly screwed onto the motor base.◦ Check the silicone seal ring for proper placement and damage.

WARRANTY AND SUPPORT

The ZIZEV Portable Blender is designed for durability and performance. While specific warranty details are not provided in this manual, we recommend retaining your proof of purchase. For any questions, concerns, or technical support regarding your ZIZEV Portable Blender, please contact ZIZEV customer service through the retailer where you purchased the product or visit the official ZIZEV brand store online.

[Visit the ZIZEV Store on Amazon](#)

© 2026 ZIZEV. All rights reserved.