

FLEXISPOT E6

FLEXISPOT E6 MAX Standing Desk Instruction Manual

Model: E6 - Electric Height Adjustable Desk

1. INTRODUCTION

Thank you for choosing the FLEXISPOT E6 MAX Standing Desk. This electric height-adjustable desk is designed to enhance your workspace ergonomics and productivity, allowing seamless transitions between sitting and standing positions. This manual provides essential information for the proper setup, operation, and maintenance of your new desk.

Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.

2. KEY FEATURES

- Durable Bamboo Desktop:** Crafted from bamboo, known for its remarkable strength and flexibility, capable of withstanding daily use with a tensile strength of 28,000 pounds per square inch. The surface features a natural grain and elegant finish.
- Quiet Dual Motors:** Equipped with dual motors for whisper-quiet height adjustments (less than 50dB). These powerful motors effortlessly lift up to 330 lbs (150KG), ensuring smooth transitions without disturbing your environment.
- Three-Stage Leg System:** Provides continuous height adjustment, accommodating users of various heights, from children to extra tall adults.
- Programmable Control Panel:** Features intuitive up/down buttons, blue backlighting, and four height memory settings for quick and precise ergonomic adjustments.
- Anti-Collision Feature:** Includes a built-in system that automatically retracts the desk upon encountering an obstacle, preventing accidents and protecting furniture, children, and pets.
- Complimentary Accessories:** Comes with Velcro straps for cable management, a set of wheels for easy mobility, and a cable manager to keep your workspace tidy.

3. PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	FLEXISPOT
Model Number	E6
Desktop Material	Bamboo (Whole-Piece Board)

Frame Material	Metal (Black Frame)
Dimensions (Desktop)	55"D x 28"W
Height Range	23.6" - 50" (Continuous Adjustment)
Load Capacity	Up to 330 lbs (150KG)
Motor Type	Dual Motor
Noise Level	Less than 50dB
Control Panel	Programmable with 4 Memory Presets
Assembly Required	Yes (Tools included)
UPC	810072854988

4. IMPORTANT SAFETY WARNINGS

- **Weight Limit:** Do not exceed the maximum weight limit of 330 lbs (150KG). Exceeding this limit can cause damage to the desk and potentially lead to injury.
- **Motor Noise:** The desk's quiet dual motors generate less than 50dB of sound. Users should be aware of this minimal motor noise during operation.
- **Anti-Collision System:** While the desk has an anti-collision feature, always ensure the area around the desk is clear during height adjustments to prevent accidents.
- **Power Source:** Use only the provided power adapter and ensure it is connected to a grounded outlet.
- **Children and Pets:** Keep children and pets away from the desk during operation to prevent injury.

5. SETUP AND ASSEMBLY

Your FLEXISPOT E6 MAX Standing Desk arrives in two separate packages: one for the desktop and one for the frame components. All necessary assembly tools are included.

Assembly Steps:

1. Unpack all components and verify against the parts list in the included manual.
2. Assemble the frame according to the detailed instructions provided in the assembly guide. This typically involves attaching the crossbar, side brackets, and feet to the lifting columns.
3. Attach the desktop to the assembled frame using the provided screws. The bamboo desktop comes with pre-drilled holes for easy alignment.
4. Connect the motor cables to the control box and then connect the control box to the power supply.
5. Install the control panel to the underside of the desktop in the designated area.
6. Optionally, attach the included casters to the feet for easy mobility, or use the standard leveling feet for a stationary setup.
7. Organize cables using the provided Velcro straps and cable manager for a clean and safe workspace.



Image: The FLEXISPOT E6 MAX Standing Desk fully assembled in a home office environment.

THREE-STAGE LEG

Continuous Height Adjustment
from 24.4"-50"



Image: Detail of the three-stage leg, illustrating continuous height adjustment from 24.4" to 50".

6. OPERATING INSTRUCTIONS

Control Panel Functions:

- **Up/Down Arrows:** Press and hold the up or down arrow buttons to manually adjust the desk height. Release the button to stop.
- **Memory Presets (1, 2, 3, 4):** The control panel features four programmable memory buttons.
- **Setting Memory Presets:**
 - a. Adjust the desk to your desired height using the up/down arrows.
 - b. Press the 'M' button (Memory button). The display will show 'S-' or similar.
 - c. Within 3 seconds, press the desired memory button (1, 2, 3, or 4) to save the current height. The display will confirm the setting.
- **Recalling Memory Presets:** Simply press the corresponding memory button (1, 2, 3, or 4), and the desk will automatically move to the saved height.

- **Anti-Collision System:** The desk is equipped with an anti-collision sensor. If the desktop encounters an obstacle during movement, it will automatically stop and retract slightly to prevent damage.



PROGRAMMABLE CONTROL PANEL

Image: The intuitive control panel allows for easy height adjustments and saving preferred positions.

Your browser does not support the video tag.

Video: Official FLEXISPOT brand video showcasing general product features and operation. (Creator: FlexiSpot)

7. MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they are secure. Tighten if necessary.
- **Cable Management:** Ensure cables remain tidy and are not pinched or tangled, especially during height adjustments.

8. TROUBLESHOOTING

Common Issues and Solutions:

- **Desk Not Moving:**

- Check if the power cord is securely plugged into both the desk and the wall outlet.
- Ensure the control box connections are firm.

- **Uneven Height:**

- Perform a reset procedure (refer to the detailed assembly manual for specific steps).
- Ensure the desk is on a level surface.

- **Motor Noise is Excessive:**

- While the motors are quiet, unusual loud noises may indicate an issue. Check for any obstructions or loose components.
- Ensure the desk is not overloaded beyond its maximum capacity.

- **Anti-Collision Triggering Frequently:**

- Ensure there are no objects in the desk's path during movement.
- Check if any cables are hanging loosely and interfering with the desk's movement.

9. WARRANTY AND SUPPORT

FLEXISPOT stands behind the quality of its products. The E6 MAX Standing Desk comes with a comprehensive warranty:

- **10-Year Guarantee:** Covers the desk frame and motor.
- **2-Year Protection:** Covers the control panel and electronics.

For any assistance, questions, or warranty claims, please contact FLEXISPOT Customer Support. Refer to your product packaging or the official FLEXISPOT website for the most up-to-date contact information.