

JORLAI T316

JORLAI 3 Speed Vinyl Record Player Turntable User Manual

Model: T316

INTRODUCTION

Thank you for choosing the JORLAI 3 Speed Vinyl Record Player Turntable. This portable suitcase-style record player is designed to provide a versatile and enjoyable audio experience, featuring Bluetooth connectivity, built-in speakers, and a rechargeable battery for on-the-go listening. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.

SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the product and keep them for future reference.

- Do not expose the unit to rain or moisture.
- Do not expose the unit to direct sunlight or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Clean only with a dry cloth.
- Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- JORLAI 3 Speed Vinyl Record Player Turntable
- User Manual
- Power Adapter
- USB Power Cable

PRODUCT COMPONENTS

Familiarize yourself with the various parts of your record player:



Image: Detailed view of the JORLAI record player highlighting its components. The image shows the top view of the turntable with a record on it, and a side view of the closed suitcase. Labels point to key features such as the 45 RPM adaptor, tone arm, ruby stylus, tone arm lifter, auto stop switch, speed selector, 3.5mm headphone jack, Bluetooth switch, battery indicator, Bluetooth indicator, power indicator, and volume control. The side view indicates the Aux In, Power Interface, and RCA Line Out ports.

1. **45 RPM Adaptor:** Used for playing 7-inch records with a large center hole.
2. **Tone Arm:** Holds the stylus and tracks the grooves of the record.
3. **Ruby Stylus:** The needle that reads the record's grooves.
4. **Tone Arm Lifter:** Raises and lowers the tone arm gently onto the record.
5. **Auto Stop Switch:** Toggles the auto-stop function (on/off).
6. **Speed Selector:** Allows selection of 33, 45, or 78 RPM.
7. **3.5mm Headphone Jack:** For private listening with headphones.
8. **Bluetooth Switch:** Activates or deactivates Bluetooth mode.
9. **Battery Indicator:** Shows the charging status (red for charging, green for fully charged).
10. **Bluetooth Indicator:** Lights up when Bluetooth is active and paired.

11. **Power Indicator:** Indicates if the unit is powered on.

12. **Volume Control:** Adjusts the audio output level.

Rear Panel Connections:

- **Aux In:** For connecting external audio devices via a 3.5mm cable.
- **Power Interface (DC 5V In):** Connect the USB power cable and adapter here.
- **RCA Line Out:** For connecting to external amplifiers or powered speakers.

GETTING STARTED

Powering On and Charging

Your record player can be powered via the included power adapter or its built-in rechargeable battery.



1800 Mah

Built In Lithium Battery



3+ Hours

Continuous Volume



Fully Charged



Charging

The built-in battery of a record player provides portable power for on-the-go listening. It can be recharged, allowing for hours of uninterrupted music playback without the need for an external power source.

Image: The JORLAI record player on a desk next to a plant and clock, with an overlay showing a battery icon indicating 1800mAh built-in lithium battery and a clock icon indicating 3+ hours continuous volume. Below, two small circles show green for "Fully Charged" and red for "Charging". This illustrates the portable power capability.


- Connect the USB power cable to the DC 5V In port on the back of the unit and the other end to the power adapter. Plug the adapter into a wall outlet.
- The battery indicator will light red while charging and turn green when fully charged. A full charge provides up to 3 hours of continuous playtime.
- To turn on the unit, rotate the Volume Control knob clockwise. The power indicator will light up.

Initial Setup

- Open the lid of the record player.
- Remove the protective cap from the stylus.
- Place a record on the platter. If playing a 7-inch record with a large center hole, place the 45 RPM adaptor on the spindle first.

OPERATING THE TURNTABLE

Playing Vinyl Records

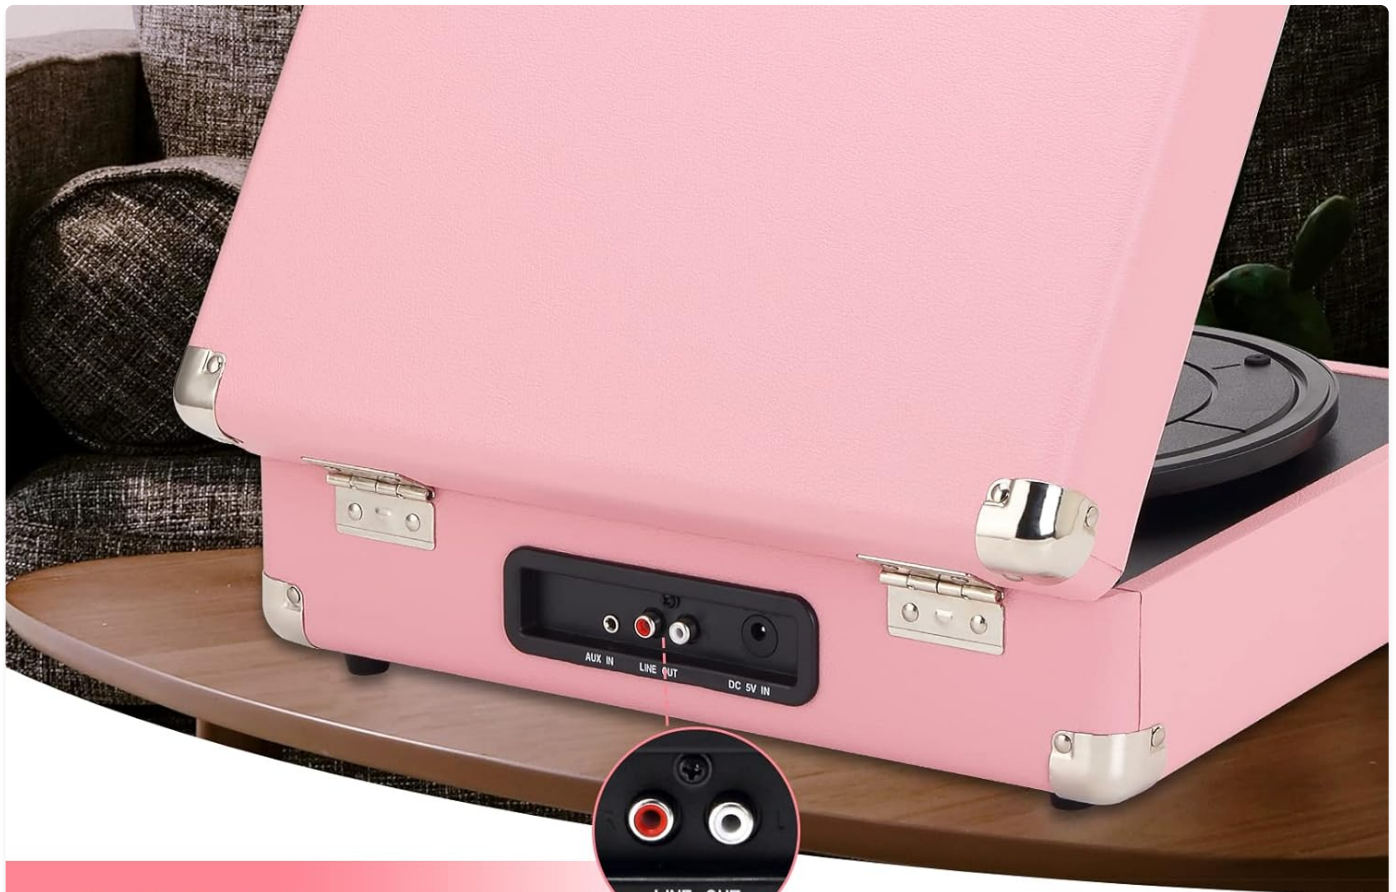

RCA Line Out

Connect your external speakers or amplifier for louder and high quality sound.



External Speakers

Image: A close-up of the JORLAI record player with a vinyl record on the platter. Below the player, three small record icons are shown with

labels: 7"/33RPM, 10"/45RPM, and 12"/78RPM, illustrating the three supported playback speeds and corresponding record sizes.

- Select the appropriate speed (33, 45, or 78 RPM) using the Speed Selector switch, matching the record you are playing.
- Gently lift the tone arm using the Tone Arm Lifter.
- Position the tone arm over the desired starting point of the record.
- Slowly lower the tone arm onto the record using the Tone Arm Lifter. The record will begin to play.
- Adjust the volume using the Volume Control knob.
- When the record finishes, the tone arm will automatically return to its rest position if the Auto Stop switch is ON. If OFF, the platter will continue to spin, and you will need to manually return the tone arm.

Bluetooth Operation



3 Speed Portable Record Player



7"/33RPM



10"/45RPM



12"/78RPM

Image: The JORLAI record player on a wooden table, with a smartphone displaying its Bluetooth settings screen next to it. A Bluetooth symbol with radiating waves indicates wireless connectivity. Text emphasizes "Wireless Bluetooth" and the ease of pairing with Bluetooth-enabled devices.

- Switch the Bluetooth Switch to the ON position. The Bluetooth indicator will flash, indicating it's in pairing mode.

- On your smartphone, tablet, or other Bluetooth-enabled device, search for "JORLAI" in the Bluetooth settings.
- Select "JORLAI" to pair. Once connected, the Bluetooth indicator will stop flashing and remain solid.
- You can now stream audio wirelessly from your device through the record player's built-in speakers.

External Audio Connections



Premium Gift Choice

Bring back the classic charm with the gift of a turntable. Immerse your loved one in a world of nostalgic sound and timeless design.

Image: A close-up of the rear panel of the JORLAI record player, highlighting the RCA Line Out ports. An arrow points from these ports to a pair of external speakers, illustrating how to connect the turntable to an external sound system for louder and higher quality audio.

- **RCA Line Out:** To connect your record player to an external amplifier or powered speakers, use an RCA cable (not included) to connect the RCA Line Out ports on the back of the record player to the audio input of your external system.
- **Aux In:** To play audio from an external device (e.g., MP3 player, phone) through the record player's speakers, connect a 3.5mm audio cable (not included) from your device's headphone jack to the Aux In port on the back of the record player.
- **Headphone Jack:** For private listening, plug 3.5mm headphones into the headphone jack on the top panel of the record player.

CARE AND MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior of the record player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Stylus Care:** The stylus is delicate. Avoid touching it with your fingers. Clean the stylus gently with a soft brush (not included) from back to front to remove dust and debris.
- **Record Care:** Keep your records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **Storage:** When not in use, close the lid of the record player to protect the platter and tone arm from dust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty; battery drained; unit not turned on.	Ensure power adapter is securely connected and plugged into a working outlet. Charge the battery. Rotate the Volume Control knob clockwise to turn on.
No sound from speakers	Volume too low; headphones connected; external speakers not connected properly.	Increase volume. Disconnect headphones. Check RCA Line Out connections to external speakers.
Record skips or sounds distorted	Record is dirty or scratched; stylus is dirty or worn; unit is not on a stable surface.	Clean the record. Clean the stylus. Place the record player on a flat, stable surface. Consider replacing the stylus if worn.
Bluetooth not connecting	Bluetooth switch off; device not in pairing mode; too far from device.	Ensure Bluetooth switch is ON and indicator is flashing. Make sure your device's Bluetooth is on and searching. Move device closer to the record player.
Auto stop not working	Auto Stop switch is OFF.	Ensure the Auto Stop switch is in the ON position. Note that some records may not trigger auto-stop due to variations in groove design.

SPECIFICATIONS

Feature	Detail
Brand	JORLAI
Model Name	T316
Product Dimensions	5 x 5 x 5 inches
Item Weight	6.4 pounds
Maximum Rotational Speed	78 RPM (Supports 33, 45, 78 RPM)
Motor Type	DC Motor

Feature	Detail
Signal Format	Analog
Power Source	Battery Powered (Built-in 1800mAh Lithium Battery) / AC Power Adapter
Voltage	1.1E+2 Volts (AC)
Connectivity	Bluetooth, Aux In, RCA Line Out, 3.5mm Headphone Jack
Compatible Devices	Smartphone, Speaker, Tablet
Color	Pink-Fen

WARRANTY AND SUPPORT

JORLAI is committed to providing excellent quality products and customer service. If you have any questions or concerns regarding your record player, please do not hesitate to contact us. We are dedicated to solving any issues you may encounter with your product.

For support, please refer to the contact information provided on the product packaging or the official JORLAI website. Keep your purchase receipt as proof of purchase for any warranty claims.

