

USX MOUNT B0CWGSN91S

USX Mount Ultra Slim Full Motion TV Wall Mount User Manual

Brand: USX MOUNT | Model: B0CWGSN91S

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation. If you have any doubts about the installation process, consult a qualified professional.

- **Weight Capacity:** This TV wall mount is designed for televisions weighing up to **120 lbs (54.4 kg)**. Do not exceed this weight limit.
- **Wall Type:** This mount is compatible with wood studs (8"/12"/16"/18"/24" spacing), concrete walls, and brick walls. **DO NOT mount on drywall alone.**
- **Stud Verification:** Always verify the location and integrity of wood studs using a reliable stud finder.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern (distance between mounting holes on the back of your TV) falls within the range of **200x100mm to 600x400mm**.
- **Blocked Inputs:** Before installation, check that the mount will not block any essential ports or inputs on your television.
- **Concrete Anchors:** Concrete anchors are not included in the standard package to prevent misuse on wood studs or drywall. If you require 10x50mm concrete anchors, please contact USX MOUNT customer support.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. All hardware is provided in pre-labeled bags for easy identification.

- Pre-assembled TV Wall Mount Bracket
- Bubble Level (1 piece)
- Cable Ties (3 pieces)
- Standard Mounting Hardware Kit (various screws, washers, spacers, etc.)
- Detailed Installation Instructions
- Paper Template for Wall Drilling

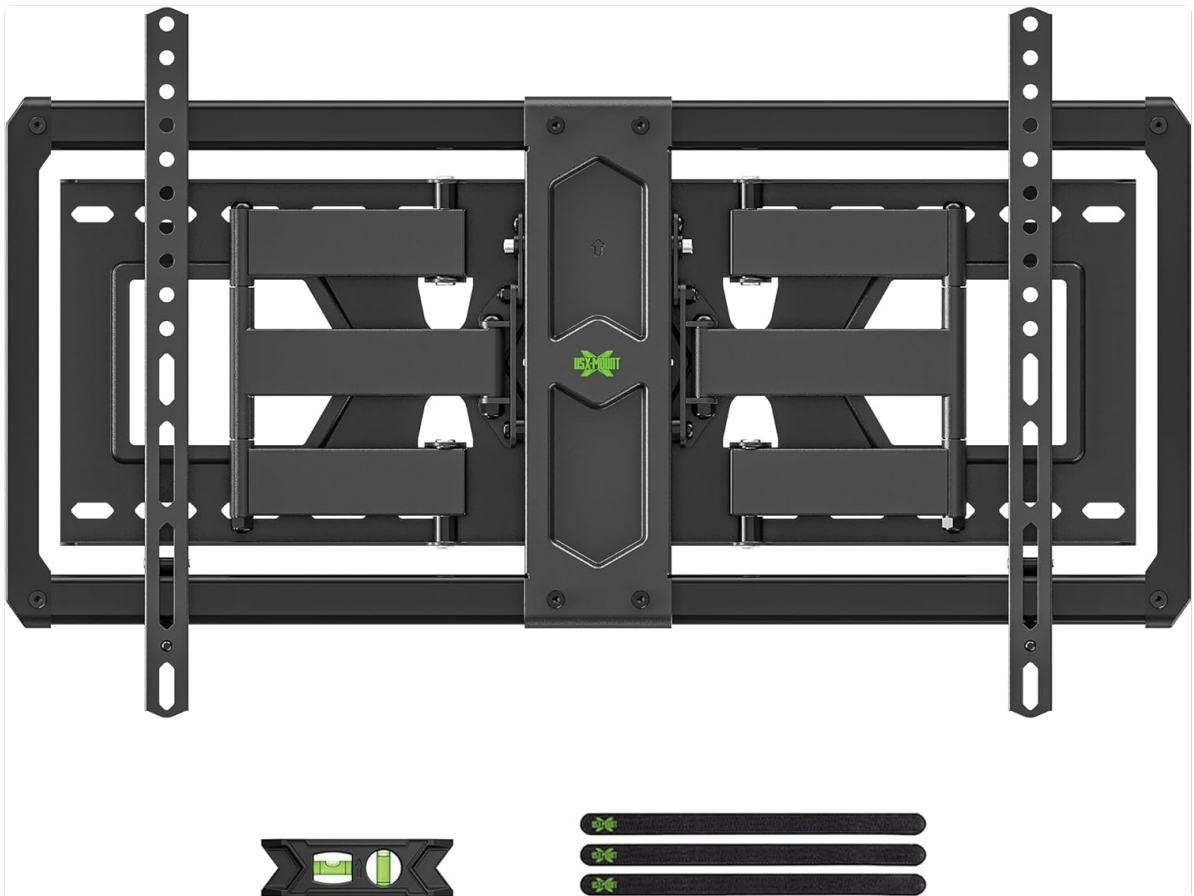 


Image: Overview of the USX Mount TV wall mount and its included accessories, such as the bubble level and cable ties.


PRODUCT FEATURES

The USX Mount Ultra Slim Full Motion TV Wall Mount offers advanced features for an optimal viewing experience and space efficiency.

- **Ultra Slim Profile:** Retracts to just **1.5 inches (3.8 cm)** from the wall, minimizing the gap between the TV and the wall for a sleek appearance.
- **Full Motion Capability:**

- **Tilt Adjustment:** Allows for a tilt range of **+5° to -20°** to reduce glare and optimize viewing angles.
 - **Swivel Adjustment:** Provides a swivel range of **±45°** (maximum swivel angle may vary based on TV size) for flexible viewing from different positions.
 - **Extension:** Extends up to **11.97 inches (30.4 cm)** from the wall for easy cable access and closer viewing.
- **Robust Construction:** Made from heavy-duty steel with dual articulating arms, ensuring stability and durability for large televisions.
 - **Pre-assembled Design:** Simplifies the installation process.

Keep on Upgrading for Ultra Slim

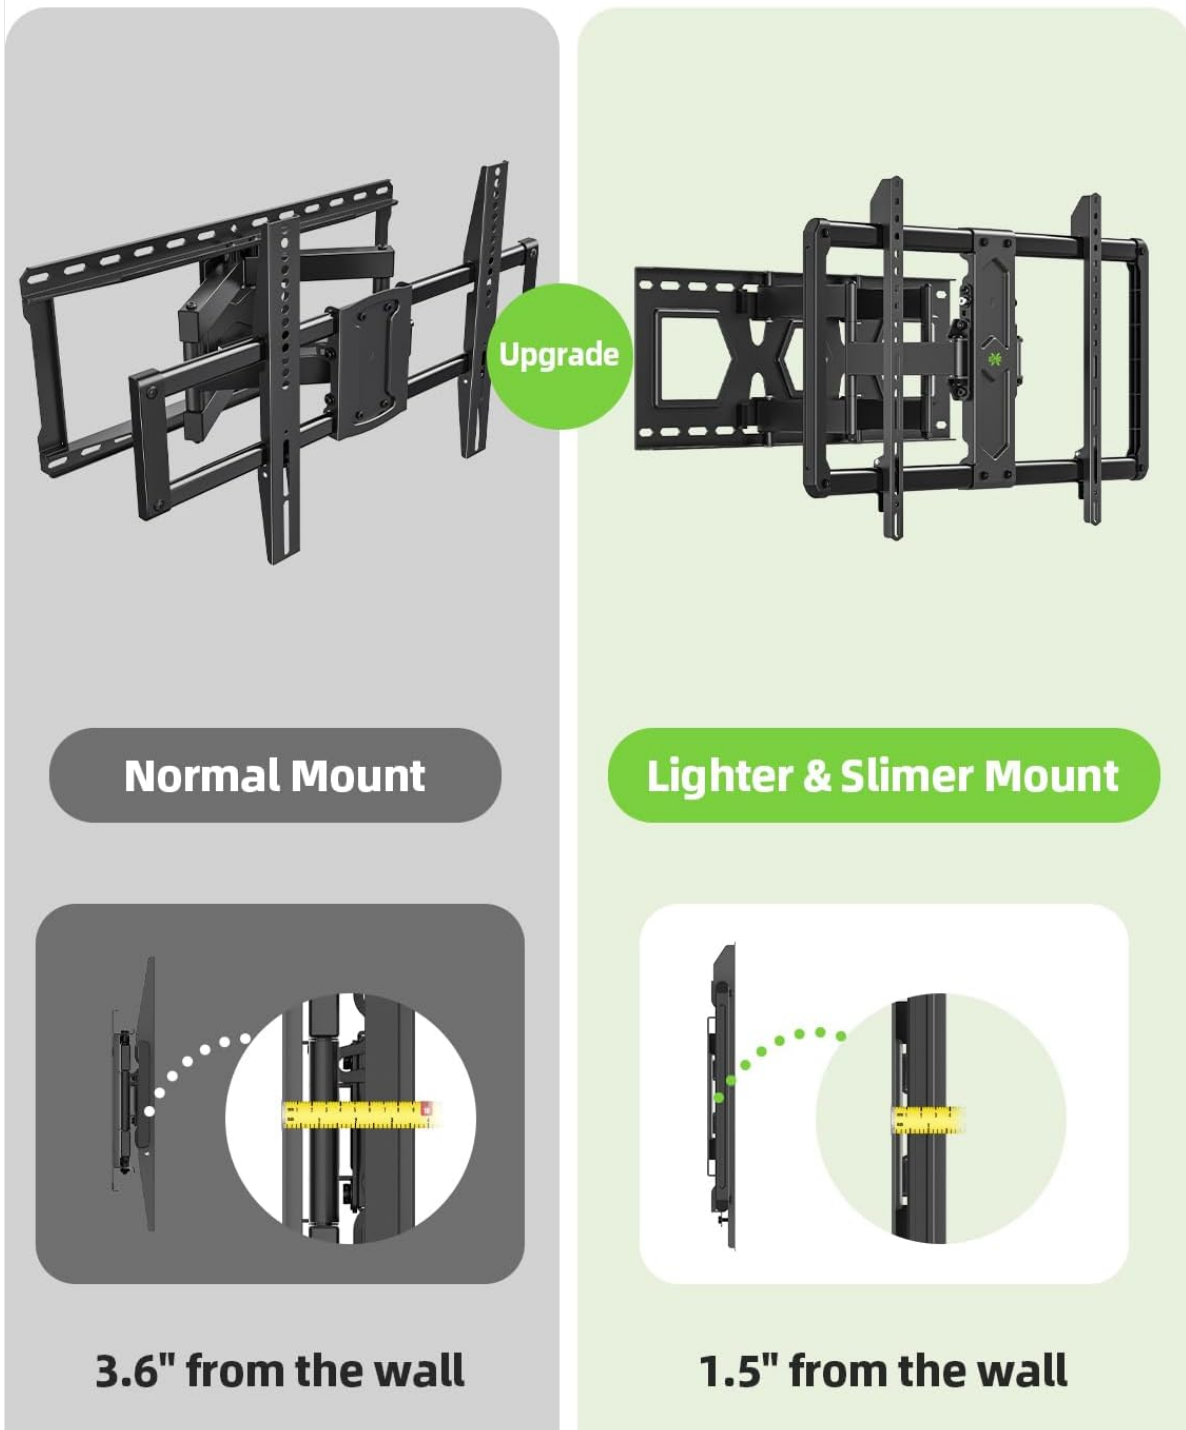

Normal Mount

3.6" from the wall

Upgrade

Lighter & Slimmer Mount

1.5" from the wall

Image: Visual comparison highlighting the ultra-slim profile of the USX Mount, retracting to 1.5 inches from the wall compared to a normal mount's 3.6 inches.

1.50" Super Slim Profile

For Saving Space Greatly

Retracts 1.50"



Image: The TV mount fully retracted, demonstrating its minimal distance from the wall at 1.50 inches, which saves space.

■ Pre-assemble TV Mount



Image: A detailed view of the pre-assembled mount, showcasing its robust arm structure designed to support up to 120 lbs.

COMPATIBILITY

This mount is designed for wide compatibility with various TV sizes and wall types.


- **TV Size:** Suitable for most **37-inch to 90-inch** flat or curved televisions.
- **VESA Patterns:** Supports VESA mounting patterns from **200x100mm to 600x400mm**. Common

VESA patterns include:

- 200x100mm
 - 200x200mm
 - 300x200mm
 - 300x300mm
 - 400x200mm
 - 400x300mm
 - 400x400mm
 - 500x300mm
 - 600x200mm
 - 600x400mm
- **Wall Types:** Compatible with:
 - Wood Studs (8", 12", 16", 18", 24" spacing)
 - Concrete Walls
 - Brick Walls

Important: Do not mount on drywall alone.

For 37"-90" TVs

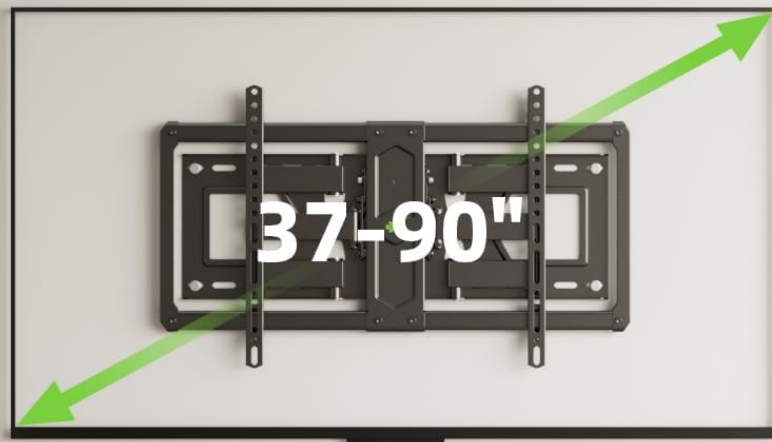

VESA Compatibility

200x100mm | 200x200mm | 300x200mm | 300x300mm
400x200mm | 400x300mm | 400x400mm | 500x300mm
600x200mm | 600x400mm

Image: Illustrates the TV size compatibility (37-90 inches) and lists various VESA mounting patterns supported by the mount.

Compatible Wall Type



Image: Depicts the compatible wall types for installation, including concrete, wood studs (up to 24 inches), and brick, with a clear warning against drywall-only installation.

SETUP AND INSTALLATION

Follow these general steps for installing your USX Mount TV wall mount. Refer to the detailed instruction manual included in your package for specific diagrams and hardware identification.

1. Preparation:

- Read the entire instruction manual before starting.
- Gather necessary tools (e.g., drill, stud finder, level, pencil).
- Identify your TV's VESA pattern and select the appropriate screws and spacers from the pre-labeled bags.
- Locate and mark the desired mounting position on your wall, ensuring it aligns with wood studs if applicable. Use the provided paper template for accurate drilling.

2. Attach Brackets to TV:

Secure the vertical TV brackets to the back of your television using the correct screws, washers, and spacers. Ensure they are firmly tightened.

3. Install Wall Plate:

Mount the wall plate to your chosen wall location. For wood studs, drill pilot holes and secure with lag bolts. For concrete/brick, use appropriate anchors (contact USX MOUNT if you need concrete anchors) and bolts. Use the included bubble level to ensure the wall plate is perfectly horizontal.

4. Hang the TV:

Carefully lift the television and hook the TV brackets onto the wall plate. Secure the TV to the wall plate using the safety screws or locking mechanisms as indicated in the detailed manual.

Tilting Angle Adjustment



Insert M6 screw into
the hole
above the tilting bolt



before



after

Image: Illustrates the process of adjusting the tilting angle by inserting an M6 screw, showing the mechanism before and after adjustment.

OPERATING INSTRUCTIONS (ADJUSTMENTS)

Once installed, your USX Mount allows for flexible adjustments to achieve the best viewing angle.

- **Tilting the TV:**

To adjust the vertical tilt of your TV (from +5° to -20°), loosen the tilt adjustment knobs or bolts on

the TV brackets, set the desired angle, and then re-tighten them securely. This helps reduce glare from lights or windows.

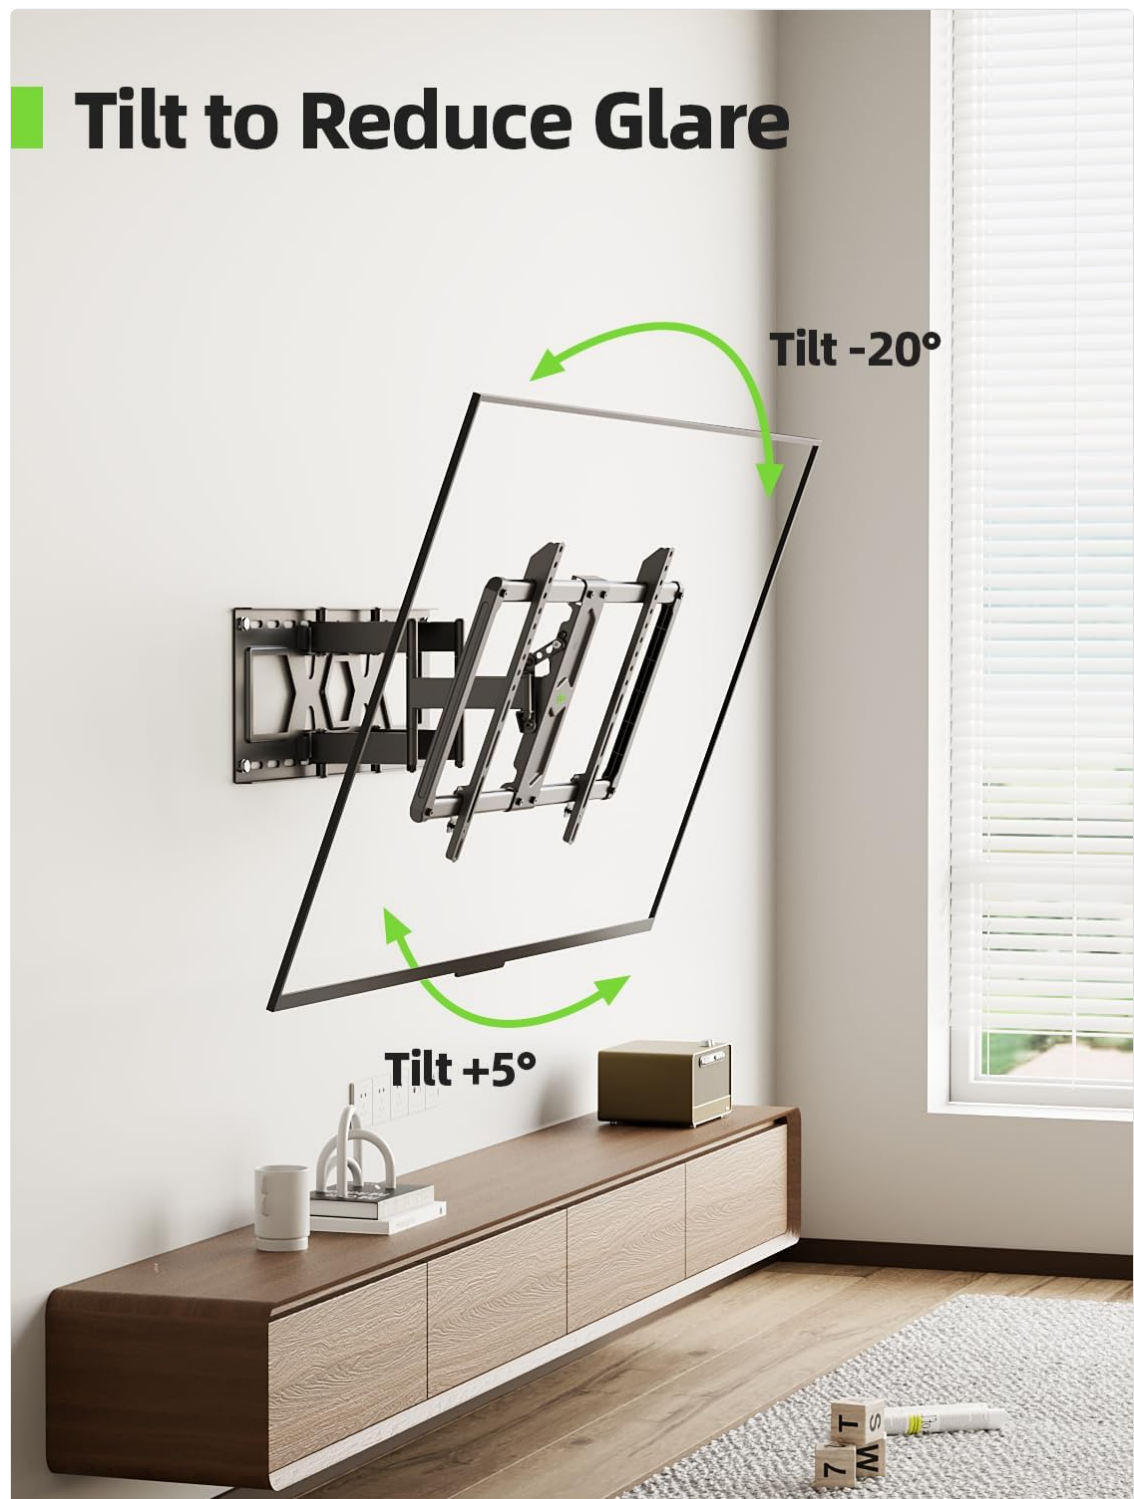


Image: Demonstrates the tilt functionality of the mount, allowing the TV to be angled up (+5°) or down (-20°) to minimize glare.

- **Swiveling the TV:**

To adjust the horizontal swivel of your TV (up to $\pm 45^\circ$), gently push or pull the TV to the desired left or right angle. The articulating arms will allow smooth movement. The maximum swivel angle depends on your TV's size and its distance from the wall.

Perfect View From Anywhere



Image: Shows the TV swiveled to the side, illustrating the $\pm 45^\circ$ swivel capability for flexible viewing angles.

- **Extending and Retracting:**

To extend the TV from the wall (up to 11.97 inches) or retract it back (to 1.5 inches), gently pull or push the TV. This allows for easy access to cables or a closer viewing position.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Periodic Inspection:** Periodically check all screws and bolts to ensure they remain tight and

secure. Over time, vibrations or adjustments can cause them to loosen.

- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Lubrication:** The articulating arms are designed for smooth movement. If you notice any stiffness, a small amount of silicone-based lubricant can be applied to the pivot points, avoiding contact with electrical components.

TROUBLESHOOTING

If you encounter issues with your TV mount, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
TV is not level after installation.	Wall plate not level, or TV brackets not adjusted correctly.	Use the included bubble level to re-check the wall plate. Adjust the leveling screws on the TV brackets if available, or re-mount the wall plate if necessary.
Difficulty swiveling or extending the TV.	Joints are stiff, or TV is too close to the wall/obstruction.	Ensure no cables or objects are obstructing movement. Apply a small amount of silicone lubricant to the articulating joints if needed.
Mount feels loose or unstable.	Screws/bolts are not fully tightened, or incorrect wall type used.	Immediately remove the TV. Re-tighten all wall plate and TV bracket screws. Verify the mount is installed on appropriate wall studs or concrete/brick. Do not use on drywall alone.
TV inputs/ports are blocked by the mount.	Mounting position or VESA adapters are incorrect.	Adjust the TV brackets or use appropriate spacers to create clearance. If necessary, consider re-mounting the TV slightly higher or lower if VESA allows.

PRODUCT SPECIFICATIONS

Brand:	USX MOUNT
Model:	B0CWGSN91S
Mounting Type:	Wall Mount
Movement Type:	Articulating (Full Motion)

Material:	Heavy Duty Steel
Compatible TV Sizes:	37 - 90 Inches
VESA Compatibility:	200x100mm to 600x400mm
Weight Capacity:	Up to 120 lbs (54.4 kg)
Tilt Angle:	+5° / -20°
Swivel Angle:	±45° (max, depends on TV size)
Profile (Retracted):	1.5 inches (3.8 cm)
Extension from Wall:	Up to 11.97 inches (30.4 cm)
Item Weight:	15.37 pounds (6.97 kg)
Package Dimensions:	28.35 x 14.05 x 1.6 inches (72 x 35.7 x 4.1 cm)
Color:	Black
UPC:	797505421569
Manufacturer:	X-MOUNT LIMITED

WARRANTY AND CUSTOMER SUPPORT

USX MOUNT is committed to providing quality products and excellent customer experience. While specific warranty details are not provided in this manual, USX MOUNT products are manufactured by a factory with over 30 years of experience in design and development.

For any questions regarding installation, missing parts (such as concrete anchors), or product operation, please contact USX MOUNT customer support. Refer to the product packaging or the retailer's website for contact information.