

## HEYNEMO 745978361769

# HEYNEMO 8 Quart Roaster Slow Cooker Instruction Manual

Model: 745978361769

[Introduction](#) [Safety](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warra](#)

## 1. INTRODUCTION

Thank you for choosing the HEYNEMO 8 Quart Roaster Slow Cooker. This versatile appliance is designed to simplify your cooking experience, offering functionalities for roasting, baking, slow cooking, and warming. Its precise temperature control and self-basting design ensure delicious and tender meals. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1.1: The HEYNEMO 8 Quart Roaster Slow Cooker, showcasing its compact design and front-facing temperature control knob.

## 2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

### 3. PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your HEYNEMO Roaster Slow Cooker:

1. **Lid:** Self-basting lid designed to retain moisture and flavor.
2. **Roasting Rack:** A removable wire rack for elevating food, promoting even cooking and easy removal.
3. **Removable Roasting Pan:** The inner cooking vessel, made of enamel-on-steel for efficient heat transfer and easy cleaning.
4. **Heating Base:** The main unit containing the heating element and control panel.
5. **Temperature Control Knob:** Used to select desired temperature settings (150-400°F), including "Keep Warm" and "Defrost" functions.
6. **Power Indicator Light:** Illuminates when the unit is heating.



Figure 3.1: Exploded view illustrating the main components: the lid, roasting rack, removable roasting pan, and the heating base.

## 4. SETUP AND FIRST USE

---

Before using your roaster for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and promotional labels from the roaster.
2. **Clean:** Wash the removable roasting pan and roasting rack in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.
3. **Assemble:** Place the removable roasting pan into the heating base. If using, place the roasting rack inside the roasting pan.
4. **Initial Burn-Off (Optional but Recommended):** To eliminate any manufacturing odors, operate the empty roaster for approximately 30 minutes at 350°F (175°C). Ensure the area is well-ventilated during this process. Allow the unit to cool completely before proceeding.
5. **Placement:** Place the roaster on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation.

Your browser does not support the video tag.

Video 4.1: A demonstration of assembling the HEYNEMO Roaster Slow Cooker, showing how to place the rack and inner pan into the heating base.

## 5. OPERATING INSTRUCTIONS

---

The HEYNEMO Roaster Slow Cooker offers versatile cooking options. Always ensure the unit is properly assembled before use.

### 5.1 General Operation

1. Place food into the removable roasting pan. If roasting, use the roasting rack to elevate the food.
2. Cover the roaster with the lid.
3. Plug the power cord into a standard 120V AC electrical outlet.
4. Turn the temperature control knob to the desired setting. The power indicator light will illuminate, indicating the unit is heating.
5. Once cooking is complete, turn the temperature control knob to "Min" and unplug the unit.
6. Use oven mitts when handling the hot roaster, lid, or pan.

# Adjustable Multi-Temperature

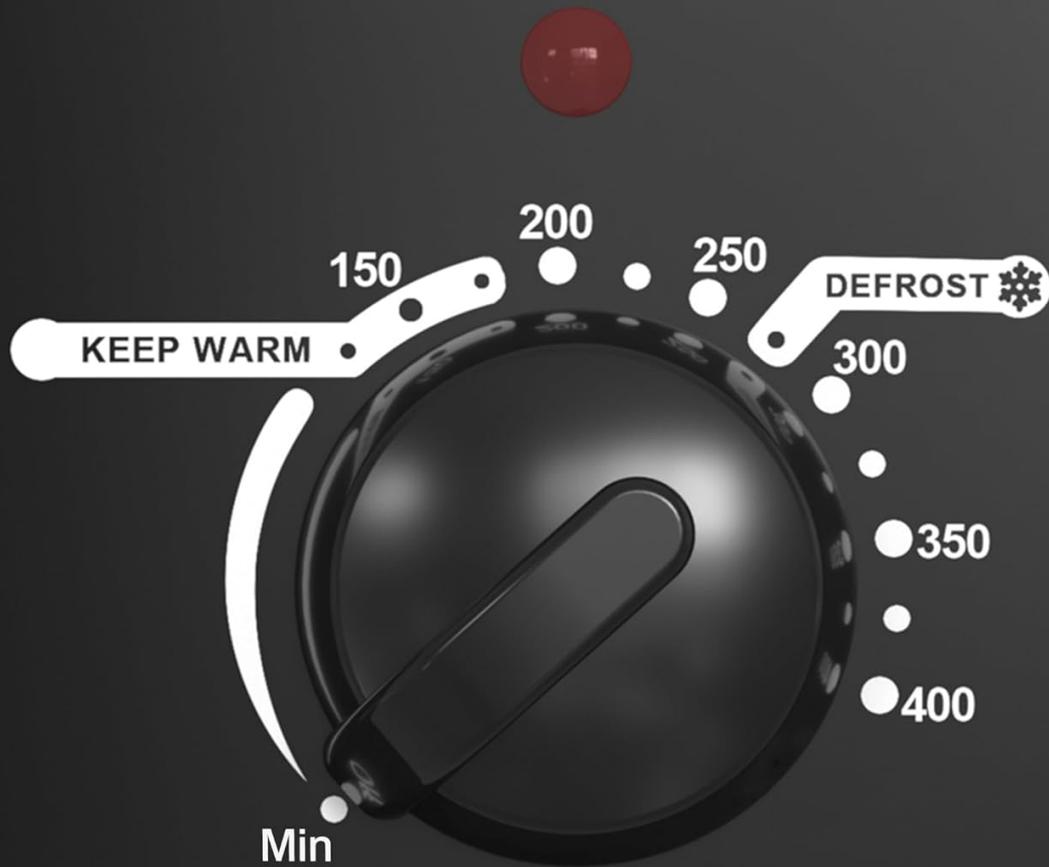


Figure 5.1: Detailed view of the temperature control knob, showing settings from "Keep Warm" to 400°F and "Defrost".

# Temperature Lock Inside



Figure 5.2: Illustration of the internal heat circulation, demonstrating how the roaster maintains consistent temperature for even cooking.

## 5.2 Temperature Settings Guide

The temperature control knob allows for precise cooking. Refer to the table below for common uses of each setting:

Setting	Temperature Range	Recommended Use
Min	Off	Unit is off.
Keep Warm	Approx. 150°F (65°C)	Maintain serving temperature for cooked foods.
150°F - 200°F	65°C - 93°C	Ideal for slow cooking, simmering, or gentle warming.
250°F	121°C	Low roasting, baking, or extended slow cooking.
Defrost	Specific defrost cycle	Thawing frozen foods safely and efficiently.
300°F - 400°F	149°C - 204°C	High-temperature roasting, baking, or browning.

**Note:** Cooking times and temperatures may vary based on food type, quantity, and desired doneness. Always use a food thermometer to ensure food reaches safe internal temperatures.



Figure 5.3: Examples of dishes that can be prepared in the roaster, including roasted meats, baked goods, and slow-cooked meals.

## 6. CARE AND CLEANING

Proper care and cleaning will extend the life of your HEYNEMO Roaster Slow Cooker.

1. **Always Unplug:** Before cleaning, ensure the roaster is unplugged from the electrical outlet and has cooled completely.
2. **Removable Parts:** The removable roasting pan and roasting rack can be washed by hand in warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
3. **Heating Base:** Wipe the exterior of the heating base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface. Never immerse the heating base in water or any other liquid.
4. **Lid:** The lid can be washed by hand in warm, soapy water. Rinse and dry thoroughly.
5. **Storage:** Store the assembled roaster in a clean, dry place.



# Free Oven To Prepare Other Dishes

Figure 6.1: The roaster with its inner pan removed, highlighting the ease of access for cleaning the pan and the base unit.

## 7. TROUBLESHOOTING

If you encounter issues with your roaster, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; temperature knob set to "Min".	Ensure the power cord is securely plugged into a working outlet. Turn the temperature knob to a desired setting above "Min".
Food is not cooking evenly.	Too much food; lid not properly sealed; incorrect temperature setting.	Do not overfill the pan. Ensure the lid is seated correctly. Adjust temperature as needed. Use the roasting rack for better air circulation.
Food is drying out.	Lid lifted too frequently; cooking at too high a temperature.	Avoid lifting the lid unnecessarily. Reduce temperature or cooking time. The self-basting lid helps retain moisture.
Burning smell during first use.	Residual manufacturing oils.	This is normal for first use. Ensure good ventilation. The smell should dissipate after initial use.

If the problem persists after trying these solutions, please contact HEYNEMO customer support.

## 8. PRODUCT SPECIFICATIONS

---

- **Model:** 745978361769
- **Capacity:** 8 Quarts
- **Power:** 1000 Watts
- **Voltage:** 120 Volts
- **Material:** Metal (Enamel-on-steel roasting pan)
- **Color:** Black
- **Product Dimensions:** 15.2"D x 15.8"W x 8.9"H
- **Item Weight:** 9 Pounds
- **Temperature Range:** 150°F - 400°F (65°C - 204°C) + Defrost & Keep Warm
- **Control Method:** Knob
- **Dishwasher Safe:** No (Removable pan and rack are hand-wash only)

## 9. WARRANTY AND CUSTOMER SUPPORT

---

HEYNEMO stands behind the quality of its products. For specific warranty details and terms, please refer to the warranty card included with your purchase or visit the official HEYNEMO website. If you have any questions, concerns, or require technical assistance, please contact HEYNEMO customer support:

**HEYNEMO Customer Support:**

**Website:** [Visit the HEYNEMO Store on Amazon](#)

**Email:** [Refer to product packaging or website for email address]

**Phone:** [Refer to product packaging or website for phone number]

Please have your model number (745978361769) and purchase date available when contacting support.